((0)Y+\ 7 MANUAL



FOREWORD

We congratulate you on your choice of the legendary Bullet motorcycle and welcome you to the exciting world of motorcycling on a Royal Enfield. This manual will help you to operate your Classic 500 motorcycle, the right way and guide you to maintain your motorcycle meticulously. We have also provided tips on safe riding and on minor adjustments for the care of your motorcycle. Please avail the four free & five paid services at the nearest Royal Enfield Authorised Dealer / Service Center, at the appropriate time to maintain your Bullet motorcycle in top riding condition. Log on to the exciting world of Royal Enfield website: www.royalenfield.com to get to know more about the company, its products and exciting news from time to time. We request you to carefully read the terms and conditions of warranty and other useful information given in this manual before starting to use your Bullet Motorcycle.

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

"© Copyright 2017 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

NOTE: BS IV

This motorcycle meets Emission Norms

Bharat (Trem) Stage - IV

Contact Us:

Royal Enfield Support: 1800-2100-007 Email: support@royalenfield.com Twitter: @RoyalEnfieldSupport Web: www.royalenfield.com

Disclaimer

Applicable for all Matt finish motorcycles

- 1. Do not polish matt finished paint surfaces in your motorcycle as it will increase the gloss level.
- 2. Wash the painted parts only with plain water and do not use any strong solvents, cleaning agents or detergents.
- 3. Scratches, if happens on the matt finish parts cannot be touched up and corrected / removed
- 4. Warranty is not applicable for any matt finished painted parts of the motorcycle

Part No. 1040629/A / Qty. 9,000 / Nov. 17

CONTENTS

Personal and Motorcycle Information	4	Long Trip Precautions	37
Technical Specifications	5	Washing Procedure	38
Recommended Lubricants	8	Storage Precautions	39
Safety Definitions	9	Trouble Shooting	40
Motorcycle Identification Numbers	10	Warranty Terms & Conditions	41
Location of Key Parts	11	Emission Warranty	43
Operation of Controls	14	EVAP	46
Pre-Operational Checks	17	Service Coupons	48
Safe & Happy Riding	18	Paid Service & Maintenance Record	67
Running in Period	19	Regional & Area Offices	69
Starting	20	Authorised Dealer Address	70
Gear Shifting, Riding & Stopping	21	Notes	96
Parking	22	Annexures	
Periodical Maintenance Chart	23	Motorcycle Installation Form	
Tools & First Aid kit	26	Pre-Delivery Inspection Report	
Minor Maintenance Tips	27	Motorcycle Installation Confirmation By	Customer

PERSONAL & MOTORCYCLE INFORMATION

Name																										
Door No./Street																										
Locality																										
City												St	ate	,				Pi	n							
Contact Nos.	Res:				S: Off: Mobile:							Email :														
Engine No.																	Battery No.									
Frame No.																	Battery make									
Reg. No.																	Licence No.									
Date of Sale																	Valid till dt.									
Model																	Key No. :									
Tyre make			1							Colour																
Sold by																	Dealer Code						_			
Motorgado Inst	~11	atio	an '	Eor.	m (1///	וא רב			Т	Т	Т	Т	П		Π										

TECHNICAL SPECIFICATIONS

ENGINE		IGNITION SYSTEM	
Bore	Single Cylinder 4 Stroke, Spark Ignition, Air cooled, Fuel injection 84mm 90mm	Ignition system Spark plug Electrode gap Spark plug	Digital Electronic Ignition 0.80 to 0.90 mm WQR8DC (Bosch)
Swept volume	499cc	TRANSMISSION	
Compression ratio . Max Power Max Torque Idle RPM Starting Air filter element Lubrication Engine oil capacity	8.5:1 27.2 bhp @ 5250 rpm 41.3 Nm @ 4000 rpm 1250+50 RPM Kick Start / E-Start Paper element Wet sump, Forced lubrication 2.75 litres (First Fill only) 2.30 to 2.50 litres (subsequent refills)	Clutch	Wet multiplate (7 plates) Duplex chain 2.15:1 Constant Mesh, 5 Speed 1st 3.06:1 2nd 2.01:1 3rd 1.52:1 4th 1.21:1
Engine oil grade Fuel Supply Cooling	Royal Enfield 15W50 API SL Grade & above, (JASOMA2) Electronic Fuel Injection Natural air flow	Final drive Final Ratio Drive Chain links	5th 1:1 18 Teeth (Sprocket) 2.11:1 102 links

TECHNICAL SPECIFICATIONS

CHASSIS	
Frame	Single Down Tube, using engine as stressed member
Suspension	
Front	Telescopic, 35mm forks, 130mm travel
Rear	Twin gas charged shock- absorbers with 5-step adjustable preload, 80mm travel.
Brakes	-
Front Disc Rear	280mm Disc, 2 Piston Caliper 153 mm Drum, Single lead internal expanding
Tyre size	
Front	90 / 90 - 19" - 52 P
Rear	120 / 80 - 18" - 62 P
Tyre Pressure Solo	
Front	20 psi/1.41 kg/cm ²
Rear	30 psi/2.11 kg/cm ²

With Pillion	
Front	22 psi/1.55 kg/cm ²
Rear	32 psi/2.25 kg/cm ²
Steering lock	In built
Fuel tank capacity .	13.5 litres approx. *
Low fuel warning	2.5 litres (approx)
Dead stock of Petrol	0.75 litres (approx)
(unusable fuel)	
* The above values are c	approximate and the actual fuel filling
capacity will vary from	the values mentioned.

ELECTRICALS

Generation	Alternator
System : E-Start	12V - DC (III Phase)
Battery: E-Start	12V - 14 AH MF (III Phase)
Head lamp	12V, H4-60/55W (Halogen)
Position Lamp	12V, 4W
Brake/Tail lamp	12V, P21/5W

TECHNICAL SPECIFICATIONS

Parking lamp...... 12V, 2W X 2 Nos. Speedometer lamp 12V, 3.4W Hi beam indicator. 12V, 2W Neutral lamp tell tale 12V, 2W Turn signal tell tale 12V, 2W Turn signal 12V, R10W X 4 Nos. Horn 12V, 2.5 Amp (Max.) X 2 Nos. Starter Motor...... 12V, 0.90 KW WARNING

Using bulbs / other electrical gadgets other than specified rating may lead to over loading / erratic behaviour / premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

DIMENSIONS

2140 mm Length Width 790 mm (without Mirrors) Height 1090 mm (without Mirrors) Wheel base 1360 mm Ground clearance..... 135 mm Saddle Height..... 800 mm

WEIGHTS

Kerb weight (90% fuel&oil) 194 Kgs. Max. Pay load 171 Kgs.

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.

RECOMMENDED LUBRICANTS

	Engine Oil
Grade	Royal Enfield 15 W 50 API SL Engine Oil (JASOMA2)
Capacity	2.75 Ltrs. (First Fill only) 2.30 to 2.50 Ltrs. (during oil & filter element replacement in periodical maintenance)

Fre	ont Fork Oil	Brake Fluid						
Grade	Royal Enfield Front Fork Oil (or 1F Grade Endurance)		DOT 3 or DOT 4					
Capacity	195 ml/leg	Capacity	60ml					

DO NOT Mix DOT 3 & DOT 4 brake fluid together.

CAUTION

Use of Wrong grade oil will reduce the life of the moving parts and seriously affect performance.

NOTE

Recommendation subject to change without notice.

ISO 14001 Operation Control Process

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

SAFETY DEFINITIONS

The information given under the titles: Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION

This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.




ENGINE NUMBER

Punched on crankcase left top side.



LOCATION OF KEY PARTS

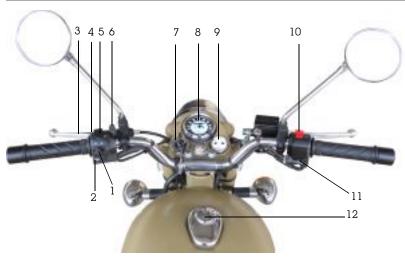


- 1. Turn Signal Switch
- 2. Horn Button
- 3. Clutch Lever
- 4. Day Flash Switch
- 5. Head Lamp Dip Switch
- 6. Manual Bistarter / Choke
- 7. Ignition Switch
- 8. Speedometer
- 9. Malfunction/Low Fuel Indicator
- 10. Engine Kill Switch
- 11. E-Start Switch
- 12. Fuel Tank Cap

LOCATION OF KEY PARTS



- 1. Right Trafficator Rear
- 2. Right Trafficator Front
- 3. Brake Pedal
- 4. Starter Motor
- 5. Utility Box
- 6. Air filter Box

LOCATION OF KEY PARTS

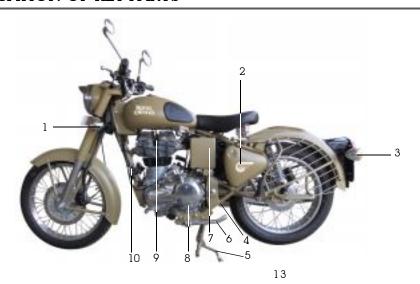

- 1. Left Trafficator Front
- 2. Electrical & Tool Box
- 3. Left Trafficator Rear
- 4. Canister
- 5. Center Stand
- 6. Side Stand
- 7. Battery Cover
- 8. Gear Change Pedal
- 9. Spark Plug
- 10. Horn

OPERATION OF CONTROLS

STEERING LOCK

- Turn Clockwise to lock
- Turn Anticlockwise to Unlock

FUEL TANK CAP

OPEN

- Turn Key Clockwise & lift the lid. CLOSE
- lock position.



FILTER / ELECTRICAL / BOXES

■ Turn anti clockwise to open.



- Gently press lid till it "click" into



BATTERY BOX

■ Turn anti clockwise to open.



CAUTION

■ Please ensure fuel is filled till fuel tank mouth (A), Failure to do so will lead to canister damage.



IGNITION SWITCH

OFF \bigcirc ON



OPERATION OF CONTROLS

NOTE

- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key can be removed only in locked position from fuel tank, Filter box, Electrical boxes locks in "OFF" position from Ignition switch.
- Turn handle bar to extreme left, before attempting to lock steering.

CAUTION

Turn off ignition switch when engine is not in running condition. Failure to do so will discharge the battery due to continuous headlamp ON.

ENGINE STOP SWITCH

X Engine OFF C Engine ON



E-START SWITCH

Depress & hold till engine starts.



Press

DIMMER SWITCH

High beam Low beam







OPERATION OF CONTROLS

DAY FLASH

Press for Head Light Flash.




TURN SIGNAL SWITCH

Left turn signal ON

OFF (Push to off)

 \square Right turn signal ON



Apply choke in cold start condition while starting the motorcycle.





CAUTION

Choke should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

UTILITY BOX

To remove cover turn key anticlockwise and pull the oval cover by applying finger pressure.



PRE OPERATIONAL CHECKS

CHECK FOR

- 1. Petrol level in the tank and leakage if any.
- 2. Smooth operation and free play in Front and Rear Brake levers.

Front Brake



Rear Brake



- Free play and smoothness of all operating controls.
- 4. Free movement of steering
- 5. Any cuts, cracks in the tyre and correct tyre pressure.

- 6. Operation of all electrical equipments.
- Brake Fluid level is above the "MIN" mark in the master cylinder.

(Disc Brake models)

8. Engine Oil Level is between "MAX & MIN" Level.



NOTE

Start engine, run for 2 minutes before checking Engine Oil Level.

SAFE & HAPPY RIDING

RIDING DRESS

- A proper riding apparel.
- Proper Riding Boots.
- Soft Leather Gloves.
- Goggles or spectacles.
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

NOTE

A light coloured shirt enables greater visibility to other road users especially during nights.

CAUTION

Loose clothing may get caught on moving parts of the motorcycle.

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.

WARNING

Applying any one of the brakes suddenly may cause the motorcycle to skid.

RUNNING IN PERIOD

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

- 1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
- 2. Do not exceed maximum specified pay load.
- 3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
- Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
- 5. Avoid sudden accelerations and racing starts.

Motorcycle Gear Speed		501 - 2000 kms
1	15 KMPH	20 KMPH
2	25 KMPH	30 KMPH
3	30 KMPH	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	70 KMPH

STARTING


 Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.

CAUTION

Never accelerate the engine immediately after a cold start. The engine should be allowed to run slowly for 15 to 30 seconds. This will allow the engine to warm up and let oil reach all surfaces needing lubrication. Failure to adhere in damage to the engine.

NOTE

It is mandatory, necessary to depress and hold the Manual Bi-starter for a minimum of one minute when starting the engine for the first time in cold morning, every time when the temperatures are below 10 deg C, and at higher altitudes to keep the engine idling RPM steady.



 Warm up engine for 2 minutes -until idling is consistent.





USING THE KICK START LEVER

- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

USING ELECTRIC START

- Depress and Hold the Clutch Lever.
- Press Starter Button and hold till Engine starts. Do not release the button before Engine starts.



GEAR SHIFTING, RIDING & STOPPING


NOTE

- Release the Starter button as soon as the Engine starts.
- If Engine does not start, wait for 30 seconds before pressing the starter switch.
- A Clutch switch is provided in the system for the safety
 of the rider. When the motorcycle is in gear, the
 motorcycle cannot be started. To start in gear
 depress the clutch lever and press Starter button to
 start engine.
- Warm up engine for 2 minutes.
- Depress clutch lever.
- Press gear pedal with toe to engage lst gear.
- Gently open throttle and release clutch lever simultaneously. If clutch is released suddenly, the engine may stall and cause the motorcycle to move with a jerk.
- To shift to 2nd and higher gears close throttle, depress clutch lever and press the gear pedal with heel.





To stop the motorcycle, close throttle, apply front and rear brakes. Simultaneously, shift gears into neutral just before the motorcycle comes to a complete stop.



Prior to starting, check to see if the low fuel indicator is glowing continuously.

This will glow continuously, if the fuel level in tank is below 2.5 litres approx.









PARKING

PARKING MOTORCYCLE ON CENTER STAND

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, such that, both the legs of the stand are resting on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backward.



PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.



CAUTION

When Side stand is in extended position.

- a) Engine will start if vehicle is in neutral, but will cutoff (ignition and fuel) when gear is engaged.
- b) Engine will not start if gear is engaged already.

! WARNING

Ensure both the stands are retracted fully before riding the motorcycle.

Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.

PERIODICAL MAINTENANCE

The maintenance schedule detailed here will help you maintain your Classic 500 Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the Kms at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

S1. No.	DESCRIPTION		ERVI r is e	CE arlier	PAID SERVICE									
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30		
	Months	1.5	3	6	9	12	15	18	21	24	27	30		
1	Engine Oil	R	I	R	I	R	I	R	I	R	I	R		
1	Lingine On	Check level at every 1000 Kms or earlier as required												
2	Engine oil filter element	R		R		R		R		R		R		
3	Engine sump filter (oil strainer)	С		С		O		C		С		O		
4	Magnetic drain plug under gear box and secondary drain plug under crankshaft in crankcase right	С		С		O		О		С		О		
5	Spark plugs (2 nos.)	C&A	C&A	C&A	C&A	C&A	R	C&A	C&A	C&A	C&A	R		
6	HT leads for crack	Ι	I	I	I	I	I	I	I	I	I	I		
7	Fuel hose & clip/Injector 'O' Ring/Seal Ring	I	I	I	I	R	I	I	I	R	I	I		
8	Fuel Pump (under tank) Mounting	Che	ck fc	r mo	untir	ng sc	rew t	ightr	ness i	n all	serv	ices		
9	Accelerator & Throttle pulley cables free play	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α	Α		

PERIODICAL MAINTENANCE

S1. No.		FR whic		ERVI r is e		PAID SERVICE							
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30	
	Months	1.5	3	6	9	12	15	18	21	24	27	30	
10	Rubber hose, Air filter to Throttle body	I	I	I	I	R	I	I	I	R	I	I	
11	Rubber hose, Inlet manifold / Adaptor	I	Ι	I	I	R	I	Ι	I	R	I	I	
12	Evaporative Emission Equipment rubber hoses	I	Ι	I	I	R	I	Ι	I	R	I	I	
13	Air filter paper element	С	С	С	С	R	С	С	С	R	С	С	
14	Inlet/Exhaust valve seating (compression/vaccum test)						I					I	
15	Cylinder head (Combustion chamber)											D	
16	Clutch Cable / lever free play	Ad	just e	every	7 100	0 Km	s or	earli	er as	requ	uired	l	
17	PAV pipes & hose clip	I	I	I	I	I	I	I	I	R	I	I	
18	Rear brake pedal pivot	L	L	L	L	L	L	L	L	L	L	L	
19	Battery terminals (apply petroleum jelly)	С	С	U	С	С	U	U	С	C	С	С	
20	Battery Electrolyte level	I	I	I	I	I	I	I	I	I	I	I	
21	Earth wire eyelet contact					I						I	
22	Front Fork oil / leak	I	I	I	R	I	I	R	I	I	R	I	
23	Rear Wheel Drive Chain	Lubricate & Adjust every 1000 Kms/Clean, Lubricate & Adjust every 3000 Kms or earlier as required											
24	Rear brake pedal free play	Ad			7 100								
25	Rear brake cam		-	L		L		L		L		L	

PERIODICAL MAINTENANCE

S1.	DESCRIPTION		EE S			PAID SERVICE							
No.		whic	<u>heve</u>	<u>r is e</u>	<u>arlier</u>								
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30	
	Months	1.5	3	6	9	12	15	18	21	24	27	30	
26	Steering ball races play	I	Α	L	Α	L	Α	L	Α	R	Α	L	
27	Spokes tightness / Wheel rim run out front & rear	I		I		I		I		I		I	
28	Swing Arm pivot bush & spacer			L		L		L		R		L	
29	Rear wheel cush rubbers					I&R				I&R			
30	Tyre wear pattern (Front & Rear)	I	I	I	I	I	I	I	I	I	I	I	
	Front Disc Brake Oil level check	I	I	I	I	I	R	I	I	I	I	R	
32	Pivot-Side Stand, Center Stand, Pillion Foot Rest	L	L	L	L	L	L	L	L	L	L	L	
33	Throttle body / Injector	*Carbo Cleaner / Carb Click or Fuel Line Cleane Every 6000 Kms or 6 Months whichever ea								ner S earli	pray er		
34	Front brake hose & Banjo Bolt	I	I	I	I	I	I	I	I	I	I	R	
35	Hand levers & kick starter lever pivot	Lu	bricc	rte e	very	1000	Kms	or e	arlie:	r as r	equ	red	
36	Fuel filter in fuel pump	С					R					R	
A : .	.: Adjust C: Clean D: De-carbonise I: Inspect L: Lubricate R: Replace												

NOTE

For Maintenance after 30,000 Kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.



S.No.	Description	Qty.
1.	Tool bag	1
2.	Box spanner 21 X 24	1
3.	Screw driver O6 X 160	1
4.	Double end spanner 14 X 15	1
5.	Double end spanner 10 X 12	2
6.	Tool- Spark plug	1
7.	Tommy bar	1
8.	Tubular spanner 12 X 13	1
9.	Single end ring spanner - 17	1
10.	Extension tube	1

A first aid kit is provided with the motorcyle for any emergency requirements.



S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

^{*} Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer/Service Center.

CONTROL CABLES

Lubricate after water washing motorcycle or if used during rainy conditions.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply α few drops of oil on the pivots.

CENTER / SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.






DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.



■ Top up only with recommended Engine oil

CAUTION

Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.

SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Two spark plugs are provided in your motorcycle.
- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.80 to 0.90 mm.



■ Refit the spark plug on the cylinder head.

INSPECTION OF TYRES AND WHEELS

 Inspect the tyres periodically for tread wear, cracks and cuts.

Minimum tread depth :					
Front tyre : 1mm	Rear tyre : 2 mm				

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

	Front	Rear
Solo	1.41 kg/cm ² (20 PSI)	2.11 kg/cm ² (30 PSI)
With Pillion	1.55 kg/cm² (22 PSI)	2.25 kg/cm ² (32 PSI)

FRONT WHEEL REMOVAL

- Place motorcycle on center stand, on a firm flat surface. Place a wooden block below the front end of the engine to support the motorcycle so that the front wheel is off the ground.
- Disconnect speedo cable.



Loosen the pinch bolt on the right fork guide.



 Hold front axle by spanner and loosen axle nut then remove nut along with washer.



- Tap and remove the front wheel spindle from the right side.
- Tilt the motorcycle to right side and take out the wheel along with speedo drive and right side spacer.





- Take out Speedo drive and bush on the right side.
- Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid brake pads getting locked.



CAUTION

Do not press the front brake lever when wheel is removed as this will result in brake pads getting locked.

FRONT WHEEL REASSEMBLY

- Remove the wooden piece / card board sheet placed between the brake pads.
- Place the speedo drive bush in position and place speedo drive over it.



- Insert the wheel along with speedo drive and right spacer between the front fork ends ensuring that the brake disc is located between the brake pads.
- Insert and tap the front wheel axle gently inside.
- Refit the washer and tighten the nut firmly.





NOTE

Ensure that the speedo drive is correctly located such that the cable can be connected without difficulty.

- Tighten the pinch bolt on the right fork guide.
- Rotate the wheel and check for smooth rotation.
- Connect the speedo cable to speedo drive and check for proper working of speedo meter.
- Press brake lever 2 or 3 times to check front brake efficiency



REAR WHEEL REMOVAL

- Place motorcycle on center stand on a firm and flat surface.
- Mark the position of the chain adjuster butting with the stopper on the Left side of the swing arm fork.
- Hold the axle firmly and remove the nut on the right side.
- Pull out the axle from the left side along with the chain adjuster, taking care not to drop the wheel collar and the spacers on the left side.
- Tilt the motorcycle slightly to the right and pull out the rear wheel from the sprocket lugs.



REAR WHEEL REASSEMBLY

■ Ensure the 4 cush rubbers are seated properly in the rear wheel hub in their locations.

- Slide the wheel in position between the swing arms and locate the cush rubber in the sprocket lugs correctly such that the wheel is positioned straight.
- Hold the wheel collar and spacer in place between the wheel hub and the left side swing arm fork and slide the wheel axle with the chain adjuster fully and firmly through the collar, spacer and rear wheel.
- Locate the chain adjuster in the marked position against the stopper in the swing arm.
- Hold the axle firmly from the left and tighten the nut fully on the axle on the right.

CAUTION

 Never hammer the wheel axle thro the spacer and rear wheel to prevent damage to its threads. Guide it into the wheel gently.



REAR BRAKE PEDAL HEIGHT

- Loosen the lock nut.
- Turn in or out the pedal stop pin till the brake pedal and front foot rest are in the same height as shown in fig.
- Tighten the lock nut.
- Check for free rotation of rear wheel.

REAR BRAKE

- Turn in or out the adjuster nut at the brake rod end.
- The recommended brake pedal travel is 20 to 30 mm.
- Check that the brake is not binding and the rear wheel rotates freely.



DRIVE CHAIN TENSION (Free Play 25-30mm)

- Loosen axle nut, spindle nut, anchor nut and brake rod nut.
- Turn the adjuster cams on both sides, till 25 to 30 mm slackness is achieved.



- Check and ensure that the number of notches from the punch mark on the cam to the notch resting on the pin are equal on both sides.
- Apply brake and tighten all nuts.

BATTERY & MAINTENANCE

- The motorcycle is provided with 12V - 14 AH.
- Periodically check the Battery for
 - Cleanliness and corrosion free terminals.
 - Electrolyte level in each cell.
 - If electrolyte level is low, top up only with distilled water.

REMOVAL OF BATTERY FROM THE MOTORCYCLE

- Insert the key into the battery cover lock, turn anticlock wise and hold.
- Remove the battery cover outwards while releasing the cover from the lock peg on top.



- Disconnect both the terminal wires. (positive and negative)
- Remove the rubber straps and take out the Battery.



ASSEMBLY OF BATTERY ON MOTORCYCLE

- Locate the battery in the carrier.
- Secure the battery to the carrier with the rubber strap.
- Connect the -VE and +VE terminals to the respective cables and smear petroleum Jelly on the terminals.
- Position the battery cover over the lugs on top and close the cover.
- Turn the key anticlockwise and push the lock into the locator and turn the key clockwise such that the cover is locked in position.
- Release Key and remove from the lock.

CAUTION

 Do not use battery with low electrolyte level as the battery internals will get damaged.

- Do not overfill the battery electrolyte as it will spill out through the over flow pipe and cause corrosion to motorcycle parts.
- Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB REPLACEMENT

- Loosen the rim holding screw on top and take out the head light reflector.
- Disconnect the wiring coupler over the bulb.
- Remove the rubber grommet from the bulb.
- Press the clip by thumb to release the free end from bulb holder.
- Pull out the bulb.







ASSEMBLING THE HEAD LAMP BULB

- Refix the new halogen bulb into reflector unit of the headlamp.
- Gently press the bulb holding clip and lock the free end in its slot.
- 3. Fit the rubber grommet.
- 4. Connect the electrical connections carefully & assemble the headlamp in the reverse order of dismantling.







CAUTION

Never touch the bulb with your fingers, Finger prints will etch the glass and decrease bulb life. Always hold the bulb with paper or clean dry cloth during handling.



TAIL LAMP BULB

- Remove the two nuts each from Right & Left side of the rear number plate holder.
- Pull out Tail Lamp assembly along with bracket and twist the bulb holder in anticlockwise to remove bulb holder assembly.
- Turn old bulb to remove and replace with a new bulb.
- Refit the bulb holder and turn clockwise to lock the bulb holder.
- Refit the tail lamp with bracket on the reverse order of removal process.








MINOR MAINTENANCE TIPS

FUSE & CARRIER

- Open the left side Electrical box.
- The fuse holder is located inside with 6+3 fuses.
- Replace the required fuse with the spare fuse available in the fuse carrier.

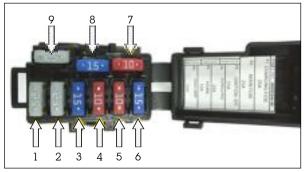

BLADE FUSE USAGE LIST

Fuse ID Number	Colour	Rating	Remarks
1	White	25 A	Charging Fuse
2	White	25 A	Main Fuse
3	Blue	15 A	Ignition Fuse-EFI
4	Red	10 A	Signalling Fuse
5	Red	10 A	Horn Fuse
6	Blue	15 A	Lighting Fuse (Head Lamp)
7	Red	10 A	Spare Fuse
8	Blue	15 A	Spare Fuse
9	White	25 A	Spare Fuse

LONG TRIP PRECAUTIONS

Checks prior to the commencement of long journey

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

Checks after every 1500 kms of run

- Any loose fasteners.
- Condition of the tyres.
- Electrolyte level in the battery...
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

Items to be carried

- Tool kit
- First aid kit.
- Bulbs for Headlight, Trafficator light, Rear Tail Lamp and Blade Fuse (10 & 15 Amps).
- Accelerator, Clutch and Front brake cables. (Incase of Drum brake models).
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- Spare tubes.

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, speedometer, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, EFI components, spark plug, battery etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.

- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivot and rear chain with lube oil.
- Polish the painted and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake shoes.

STORAGE PRECAUTIONS

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank and fuel line.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum ielly to terminals.

- Maintain electrolyte level between "max" or "min" mark, by adding distilled water and wipe the battery dry.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re-use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer/Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
	1. Ignition/Engine stop switch is in 'OFF' position	Switch 'ON' Ignition / Engine stop switch
	2. Very low / No fuel in the fuel tank.	Check Fuel level / fuel meter and fill fuel
	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
Engine Does	4. Electricals not working	Battery completely dead. Replace battery Euse Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.
not start	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect. Check if gear is engaged and the sidestand is down. If the ambient Temperature is low use Bistarter.
	6. MIL glowing continuously	Contact Authorised Service Center
Engine Starts BUT shuts off	1. Engine shuts off as soon as throttle is closed.	Idling RPM set too low / setting disturbed. Contact Authorised Service Center for resetting the Idling RPM.
immediately	2. Engine Starts but Shuts of immediately	Check if the MIL Lamp is glowing; If yes, Contact Authorised Service Center.
Engine Misfires & Runs	Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down.
Erratically/Stops	2. Engine misfires and runs erratically	Check if the MIL Lamp is glowing; If yes, Contact Authorised Service Center.
	1. Engine RPM raises improportionately to motorcycle speed	Clutch is Slipping. Check for sticky clutch/ clutch not having
Poor Pickup	Rear Chain excessively loose causing chain to slip on Sprocket.	any free pláy. Adjust Rear chain to correct tension.
	3. Poor pickup	Check if the MIL Lamp is glowing; If yes, Contact Authorised Service Center.

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

- 1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 2 years / 30,000 kms from the date of sale, whichever is earlier.
- 2. In order to avail warranty benefits by second or subsequent owner, the second/subsequent owner should inform the nearest Royal Enfield Service Center about the purchase of the bike and shall fill in the requisite details in the form as requested by Royal Enfield.
- 3. The warranty shall be applicable only if all the 4 free services & 5 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
- 4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
- 5. Cost of oil, oil filter and fuel are chargeable to the customer.
- 6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
- 7. Warranty shall not apply to:
 - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.

WARRANTY TERMS & CONDITIONS

- (b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
- (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
- (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
- (e) Parts damaged due to accidents, collision, abuse etc.
- (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, blue discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.
- (g) Defects arising from fitment of unauthorised or additional electrical loads.
- (h) Motorcycle serviced or repaired at unauthorised service centers.
- (i) Motorcycle used for competitions / racing / Stage Rallying etc.
- (j) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
- (k) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
- (1) Oxidization of buffed/painted/powder coated items etc.
- 8. RE reserves the right to finally decide on all warranty claims.
- 9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warranty that if on examination by its Authorised Dealer / Service Center, the motorcycle fail to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Entield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the partly is/are not established, Royal Entield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs.

Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

EMISSION WARRANTY

Royal Enfield will not be responsible for any penalties that may be charged by statuatory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Vehicles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution under control" certificate is not produced.
- The motorcycle is not serviced by RE Authorised Dealer/Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

EMISSION WARRANTY

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through and authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

The following warranty applies to the evaporative emission control system.

Royal Enfield Motors warrants the first owner and each subsequent owner, that this motorcycle is designed and built so as to conform, at the time of sale, with applicable regulations specified by the evaporative emission control system related parts fitted to this motorcycle are free from defects in materials and workmanship which may cause this motorcycle not to meet applicable regulations period of 24 Months from the date of first use of the motorcycle.

The Warranty period shall begin either on the date the motorcycle is delivered to the first retail purchaser OR from the first date the motorcycle is used as a demonstrator OR as a display and/or trial motorcycle.

THE FOLLOWING ARE NOT COVERED BY THE EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY:

- 1. Failures which may arise as a result of misuse, alterations, accidents OR non performance of routine maintenance, as specified in the Owner's Manual.
- 2. Replacing OR removing OR modifying any portion of the EVAPORATIVE EMISSION CONTROL SYSTEM (consisting of Fuel tank, fuel tank cap, Canister, purge valve, throttle body, vapor hoses, fuel hoses and hose connectors) with parts not certified to be genuine.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

- 3. Loss of time, inconvenience, loss of motorcycle use or any other consequential loss or damages.
- 4. Any motorcycle in which the Odometer has been tampered with, OR the Speedo cable has been disconnected for any reason OR is broken and not replaced immediately, due to which the exact distance covered cannot be determined.
- 5. Normal ageing of parts such as fuel hoses, vapor hoses, gaskets & rubber components.

RECOMMENDATIONS FOR REQUIRED MAINTENANCE:

IT IS RECOMMENDED THAT THE ROUTINE MAINTENANCE OF THE MOTORCYCLE BE CARRIED OUT AT SPECIFIED INTERVALS AND ANY MAINTENANCE TO THE EVAPORATIVE EMISSION CONTROL SYSTEMS SHOULD BE PERFORMED ONLY BY AN AUTHORISED ROYAL ENFIELD SERVICE DEALER AND USING ONLY GENUINE ROYAL ENFIELD SPARE PARTS.

SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 5 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

1ST FREE SERVICE

lst Free Service

500 Kms
or
45+8 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

500 KMS or 45+8 DAYS WHICHEVER IS EAR	LIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfactior
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

1ST FREE SERVICE ACTIVITIES

11 12 13 14 15	Air filter element Spark plugs (2 Nos) H.T. Leads Fuel filter in fuel pump Fuel pump (under tank) mounting Fuel hose Rubber hose, Air filter to throttle body Rubber hose, Inlet manifold / Adaptor Rubber hose, Evaporative Emission Equipment PAV pipes & hose clip Accelerator & Throttle pulley cables free play Clutch cable/ Lever free play Engine oil sump strainer, magnetic drain plug Engine oil sump strainer. Steering system Hand levers & kick starter pivot	Check level & top-up, if necessar Clean and apply petroleum jelly Check, clean, lubricate & adjust Lubricate Adjust play Check spokes tightness / run out Check wear pattern Check & top up brake fluid level Inspect for oil leakage Clean Check, clean & adjust gap Inspect for cracks Clean Check mounting screws/Leak Inspect for cracks Inspect Adjust play Adjust play Clean Replace Check & adjust play Lubricate Lubricate

 	CUSTOMER COPY Job Card No:		
İ	Job Cara No:		
l I			
 	Date :		
	Odo Reading :		
	Name of Dealer/		
	ASC with Code:		
	ASC / Dealer's		
1	\Stamp&Sianature/		

2ND FREE SERVICE

2nd Free Service 3000 Kms

3000 Kms
or
90+15 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

3000 KMS or 90+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code:
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service havin	ng been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

2ND FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery Electrolyte Battery terminals Rear Drive chain free play Rear brake pedal pivot Lubricate Rear brake Adjust play Front brake Check & top up brake fluid level Front brake hose & Banjo Bolt Inspect Front fork Inspect for oil leakage 10 Tyres front & rear Check wear pattern 11 Air filter element Clean 12 Spark plugs (2 Nos) Check, clean & adjust gap 13 H.T. Leads Inspect for cracks Check mounting screws/Leak
Inspect for cracks 14 Fuel pump (under tank) mounting 15 Fuel hose 16 Rubber hose, Air filter to throttle body Inspect for cracks 17 Rubber hose, Inlet manifold / Adaptor
18 Rubber hose, Evaporative Emission Equipment Inspect for cracks Inspect for Cracks 19 PAV pipes & hose clip 20 Accelerator & Throttle pulley cables free play Inspect Adjust play 21 Clutch cable/ Lever free play Adjust play 22 Steering free play Check & Adjust Check level & top-up 23 Engine oil 24 Hand levers & kick starter pivot Lubricate 25 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate

CUSTOMER COPY Job Card No:			
Date:			
Odo Reading :			
Name of Dealer/			
ASC with Code:			
ASC / Dealer's			
Stamp & Signature			

3RD FREE SERVICE

3rd Free Service 6000 Kms

6000 Kms
or
180+15 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

6000 KMS or 180+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

3RD FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery Electrolyte Battery terminals Rear Drive chain free play Rear brake pedal pivot Lubricate Cam clean, lubricate & Adjust play Rear brake cam Lubricate
Check spokes tightness / run out
Check & top up brake fluid level Swing arm spacer & pivot bush Wheel rim front & rear Front brake Front brake hose & Banjo Bolt Inspect Inspect for oil leakage Check wear pattern Front fork Tyres front & rear 12 13 Air filter element 14 Spark plugs (2 Nos) 15 H.T. Leads Clean Check, clean & adjust gap Inspect for cracks Check / Inspect for cracks Check mounting screws/Leak 16 Fuel pump/Fuel hose 17 Fuel pump (under tank) mounting Rubber hose, Air filter to throttle body Inspect for cracks Rubber hose, Inlet manifold / Adaptor Inspect for cracks rubber nose, inlet manifold / Adaptor
Rubber hose, Evaporative Emission Equipment
Accelerator & Throttle pulley cables free play
Clutch cable/ Lever free play
Engine oil sump strainer, magnetic drain plug
Engine oil & oil filter paper element
Throttle body / Injector
Hand bourse & Halle testes prices Inspect for Cracks Rubber hose, Evaporative Emission Equipment Accelerator & Throttle pulley cables free play Clutch cable/ Lever free play Engine oil sump strainer, magnetic drain plug Engine oil & oil filter paper element Throttle body/ Injector Hand levers & kick starter pivot PAV pipes & hose clip Steering System Adjust play Adjust play Clean Replace Clean by carbo spray* Lubricate Inspect Check, Lub. steering balls & adj. play Steering System 29 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate

CUSTOMER COPY
Job Card No:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

^{*}Recommended - ITW Chemin or Wurth

4TH FREE SERVICE

4th Free Service 9000 Kms

9000 Kms
Or
270+15 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

9000 KMS or 270+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code:
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
$ \cdot $	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

4TH FREE SERVICE ACTIVITIES

/1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessar
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot	Lubricate
6	Rear brake	Adjust play
7	Front brake	Check & top up brake fluid level
8	Front brake hose & Banjo Bolt	Inspect
9	Front fork	Replace fork oil
10	Tyres front & rear	Check wear pattern
11		Clean
12	Spark plugs (2 Nos)	Check, clean & adjust gap
13	H.T. Leads	Inspect for cracks
	Fuel pump (under tank) mounting	Check mounting screws/Leak
15	Fuel hose	Inspect for cracks
16	Rubber hose, Air filter to throttle body	Inspect for cracks
17	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
18		Inspect for Cracks
19	PAV pipes & hose clip	Inspect
	Accelerator & Throttle pulley cables free play	Adjust play
21		Adjust play
	Engine oil	Check & top-up
23	Hand levers & kick starter pivot	Lubricate
	Steering free play	Check & Adjust
25	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

l	CLICTON AED CODY			
i	(CUSTOMER COPY)			
	Job Card No:			
i				
!	Date:			
İ				
1	Odo Dogding			
	Odo Reading :			
1				
1	Name of Declary			
	Name of Dealer/			
	ASC with Code:			
i				
i	ACC / Doctor's			
1	ASC / Dealer's			
	\Stamp & Signature/			

5TH PAID SERVICE

5th Paid Service 12,000 Kms

12,000 Kms

or

360+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

12,000 KMS or 360+15 DAYS WHICHEVER IS E.	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
i	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

5TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth **Battery Electrolyte** Check level & top-up, if necessary Battery terminals Clean and apply petroleum jelly Swing arm spacer & pivot bush Lubricate Check, clean, lubricate & adjust Rear Drive chain free play Cam clean, lubricate & Adjust play Rear brake cam Rear wheel cush drive rubbers Inspect & replace Inspect & replace
Lubricate
Check & top up brake fluid level
Check spokes tightness / run out
Check wear pattern
Check, Lub. steering balls & adj. play
Inspect for oil leakage
Replace Rear brake pedal pivot Front brake Wheel rim front & rear 10 11 12 Tyres front & rear Steering System 13 Front fork 14 Air filter element Spark plugs (2 Nos) Throttle body / Injector - Cleaning Spary* Check, clean & adjust gap Clean by carbo spray H.T. Leads Inspect for cracks Fuel pump (under tank) mounting Check mounting screws/Leak Fuel hose Check & Replace Accelerator & Throttle pulley cables free play Check & adjust play Rubber hose, Air filter to throttle body Check & Replace Rubber hose, Inlet manifold / Adaptor Check & Replace Rubber hose, Evaporative Emission Equipment Replace Clutch cable/ Lever free play Adjust play PAV pipes & hose clip Inspect Engine oil & oil filter paper element Clean Replace 28 Hand levers & kick starter pivot
29 Pivot-Side stand, Center stand, Pillion Foot Rest
20 Earth wire eyelet Contact (Below fuel pump relay/ECU mounting)
21 Inspect Lubricate Lubricate

CUSTOMER COPY
Job Card No:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin)

6TH PAID SERVICE

6th Paid Service 15,000 Kms

15,000 Kms
or
450+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

15,000 KMS or 450+15 DAYS WHICHEVER IS E.	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

6TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery Electrolyte Battery terminals Rear Drive chain free play Rear brake pedal pivot Lubricate Rear brake Adjust play Check & Replace brake fluid Front brake Front fork Tyres front & rear Inspect for oil leakage Check wear pattern 10 Air filter element Clean 11 Spark plug 12 H.T. Leads Spark plugs (2 Nos) Check & Replace Inspect for cracks 13 Fuel filter in fuel pump 14 Fuel pump (under tank) mounting Replace Check mounting screws/Leak 15 Fuel hose Inspect for cracks 16 Rubber hose, Air filter to throttle body Inspect for cracks 17 Rubber hose, Inlet manifold / Adaptor 18 Rubber hose, Evaporative Emission Equipment Inspect for cracks Inspect for Cracks 19 PAV pipes & hose clip
20 Accelerator & Throttle pulley cables free play
21 Clutch cable/ Lever free play Inspect Check & adjust play Adjust play 22 Engine oil Check & top-up Hand levers & kick starter pivot Lubricate 24 Steering system
25 Pivot-Side stand, Center stand, Pillion Foot Rest
26 Front brake hose & Banjo Bolt Check & adjust play Lubricate 26 Front brake hose & Banjo Bolt 27 Inlet / Exhaust valve seating Inspect Check by compression/Vaccum test

 	CUSTOMER COPY Job Card No:
	Date:
П	
İ	Odo Reading :
İ	
İ	Name of Dealer/
i	ASC with Code:
1	
П	
	ASC / Dealer's
ľ	Stamp&Signature/

7TH PAID SERVICE

7th Paid Service 18,000 Kms

18,000 Kms
or
540+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

18,000 KMS or 540+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

7TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery terminals Rear Drive chain free play Rear brake pedal pivot Lubricate Cam clean, lubricate & Adjust play Rear brake cam Check & top up brake fluid level Check spokes tightness / run out Front brake Wheel rim front & rear Tyres front & rear Check wear pattern Front fork Replace fork oil l l Air filter element Replace 12 Spark plugs (2 Nos) 13 H.T. Leads Check, clean & adjust gap Inspect for cracks Throttle body / Injector - Cleaning Spary*
Fuel pump (under tank) mounting Clean by carbo spray*
Check mounting screws/Leak 16 Fuel hose Inspect for cracks 17 Accelerator & Throttle pulley cables free play 18 Rubber hose, Air filter to throttle body Check & adjust play Inspect for cracks Rubber hose, Inlet manifold / Adaptor Inspect for cracks Rubber hose, Evaporative Emission Equipment Replace Clutch cable/ Lever free play Adjust play PAV pipes & hose clip Engine oil sump strainer, magnetic drain plug Inspect Clean Engine oil & oil filter paper element Hand levers & kick starter pivot Steering System Replace Lubricate Check, Lub. steering balls & adj. play 27 Swing arm spacer & pivot bush 28 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate Lubricate

CUSTOMER COPY
Job Card No:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) 62

8TH PAID SERVICE

8th Paid Service 21,000 Kms

21,000 Kms or 630+15 days whichever is earlier from the date of sale

Enter the Details in Paid Service Record

21,000 KMS or 630+15 DAYS WHICHEVER IS E.	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
	Address)
i	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

8TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery terminals Rear Drive chain free play Rear brake pedal pivot Lubricate Cam clean, lubricate & Adjust play Rear brake cam Check & top up brake fluid level Check spokes tightness / run out Front brake Wheel rim front & rear Tyres front & rear Check wear pattern Front fork Replace fork oil l l Air filter element Clean 12 Spark plugs (2 Nos) 13 H.T. Leads Check, clean & adjust gap Inspect for cracks Throttle body / Injector - Cleaning Spary*
Fuel pump (under tank) mounting Clean by carbo spray*
Check mounting screws/Leak 16 Fuel hose Inspect for cracks 17 Accelerator & Throttle pulley cables free play 18 Rubber hose, Air filter to throttle body Check & adjust play Inspect for cracks Rubber hose, Inlet manifold / Adaptor Inspect for cracks Inspect for Cracks Rubber hose, Evaporative Emission Equipment Clutch cable/ Lever free play Adjust play PAV pipes & hose clip Engine oil sump strainer, magnetic drain plug Inspect Clean Engine oil & oil filter paper element Hand levers & kick starter pivot Steering System Replace Lubricate Check, Lub. steering balls & adj. play 27 Swing arm spacer & pivot bush 28 Pivot-Side stand, Center stand, Pillion Foot Rest Lubricate Lubricate

CUSTOMER COPY Job Card No: Date: Odo Reading: Name of Dealer/ ASC with Code: ASC / Dealer's Stamp & Signature

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) ${}^{\diamond}4$

9TH PAID SERVICE

9th Paid Service 24,000 Kms

24,000 Kms
or
720+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

24,000 KMS or 720+15 DAYS WHICHEVER IS E.	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
i	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

9TH PAID SERVICE ACTIVITIES

<u> </u>	Water wash the motorcycle and dry it with a clean	cloth	
2	Battery Electrolyte	Check level & top-up, if necessary	
3	Battery terminals	Clean and apply petroleum jelly	
4	Rear Drive chain free play	Check, clean, lubricate & adjust	
5	Rear brake pedal pivot	Lubricate	
6	Rear brake cam	Cam clean, lubricate & Adjust play	
7	Front brake	Check & top up brake fluid level	
8	Wheel rim front & rear	Check spokes tightness / run out	
9	Tyres front & rear	Check wear pattern	
	Front fork	Replace fork oil	
11	Air filter element	Replace	
	Spark plugs (2 Nos)	Check, clean & adjust gap	
		Inspect for cracks	
14	Throttle body / Injector - Cleaning Spary*	Clean by carbo spray*	
	Fuel pump (under tank) mounting	Check mounting screws/Leak	
	Fuel hose	Inspect for cracks	
17	Accelerator & Throttle pulley cables free play	Check & adjust play	
18	Rubber hose, Air filter to throttle body	Inspect for cracks	
19	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks	
20	Rubber hose, Evaporative Emission Equipment	Replace	
21	Clutch cable/ Lever free play	Adjust play	
		Inspect	
	Engine oil sump strainer, magnetic drain plug	Clean	
24	Engine oil & oil filter paper element	Replace	
25	Hand levers & kick starter pivot	Lubricate	
	Steering System	Check, Lub. steering balls & adj. play	
27	Swing arm spacer & pivot bush	Lubricate	
28	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate	/

CUSTOMER COPY
Job Card No:

Date:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) $\it 66$

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

REGIONAL & AREA OFFICES

R1 : Chandigarh, H.P, J&K, Punjab Royal Enfield SCO, No. 5, 1st Floor, Sector-11, PANCHKULA (Haryana) Pin Code - 134 112. Tel: 0172-5011255, 5011251	R3: Uttarkhand & Uttar Pradesh Royal Enfield UGF 15-19, Landmark Arcade, 2 Badshah Nagar Crossing, Faizabad Road, LUCKNOW – 226 006. Tel: 0522-6566675 Fax: 4005973	R6 : Orissa & West Bengal Royal Enfield Shrachi Tower, 3rd Floor, 686 Anandapur, KOLKATA - 700 707. Tel: 033-40060206 / 0209	R8 : Goa & Maharashtra Royal Enfield Plot No.16, Sector -1, Sion Panvel Highway, Nerul, NAVI MUMBAI - 400 706. Tel: 022-27700395, 27700501 Royal Enfield	R10: Karnataka Royal Enfield Door No. 2067/1, 2068/2, East End "A" Main 9th Block, Jayanagar, BANGALORE - 560 069. Tel: 080-22440588, 41753277, 41536488
R2: Delhi, Haryana, NCR & Rajasthan Royal Enfield C/o EICHER ENGG.COMPONENTS Plot No. 7, HSIDC Industrial Area, Sector 18, Palam Gurgaon Road, GURGAON (Haryana) - 122 015.	R4: Gujarat & Madhya Pradesh Royal Enfield 103, Safal Prelude, Opp. Parsavanath Esquire Cross Road, Corporate Road, Prahlad Nagar, Off. S.G. Highway, AHMEDABAD - 380 015.	Royal Enfield A Unit of Eicher Motors Ltd. 407, 4th Floor, Nirmala Plaza, Forest Park, BHUBANESWAR - 751 009. Tel: 0674–6540206 R7: Arunachal Pradesh, Assam	203, 204 Sneha Ganga, Near Vega Centre, Shankar Seth Road, Swargate, PUNE - 411 037. Tel: 020-40028090 Fax: 24447174	R11: Tamilnadu & Andaman Royal Enfield Plot No. 350 to 354, 2nd Floor, 4th Link Street, Nehru Nagar Industrial Area, Kottivakkam, (OMR-IT Highway), CHENNAI - 600 096.
Tel: 0124-4278138, 4278139 Fax: 4382148 Royal Enfield G-5, 6, 7, Gitanjali Towers, Ajmer Road, JAIPUR - 302 006. Tel: 0141-4106747, 4034748 Fax: 0141-4106748	Tel: 098-25113168 Fax: 079-40024461 R5: Bihar, Chattisgarh & Jharkhand Royal Enfield 3rd Floor, Maple Plaza, Gate No. 2, Ashok Nagar, RANCHI (Jharkhand) - 834 002. Tel: 0651-2245262	N : Arundana Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland & Tirupura Royal Enfield Astha Plaza, 4th Floor (M4-2), G S Road, Opposite Deorah College, Ulubari, GUWAHATI - 78100 . Mob: +918135846461	R9 : A.P. & Telangana Royal Enfield (A Unit of Eicher Motors Ltd) No: 8-3-166/B to F, Erragadda Main Road, Beside Gokul Theatre, Erragadda, HYDERABAD - 500 018. Tel: 7093190003, 7416783025	R12: Kerala & Lakshadweep Royal Enfield 25/85A, Opp. to IOC Pump, Koonamthai, Edappally Post, KOCHI - 682 024. Tel: 0484-6494990, 6494991 Fax: 2543616

AUTHORISED DEALERS

ANDHRA PRADESH Amlapuram Shri Jayalakshmi Automobiles +91 9618349555 Anantapur	ANDHRA PRADESH Eluru Classic Automotive +91 9652238585 08812-234582	ANDHRA PRADESH Kurnool Sandhya Automotives +91 9394253377 08518-253377	ANDHRA PRADESH Ongole Lekhana Automotives +91 8885002112 8885002113	ANDHRA PRADESH Vijayawada- Kannur Pravallika Motors +91 7842559555 0866-2586858
Renati Automotives Pvt. Ltd. +91 9000841133 7036903879	Guntur-Auto Nagar Jubilant Avenues Pvt.Ltd +91 8143008506; 8507	Nandyal Dheeru Motors +91 9133065553 +91 9133065554	Rajahmundry Sriram Automobiles +91 9246665513	Vijayawada- M G Road Mahalakshmi Motors +91 8886322559 +91 8886422559
Bhimavaram Varma Automotives +91 7095812666 +91 7095816888	Guntur-Chandramauli Nagar Jubilant Avenues Pvt.Ltd +91 8143008508	Narasaraopet Anu Auto Agencies +91 7893301444 086472-21787	0883-2422117 Srikakulam Lakshmi Automobiles +91 9032929235 8121929235	Vijayawada- Ring Road Pravallika Motors +91 7842559555 0866-2586858 Vishakhapatnam -
Chirala Lekhana Automotives +91 8885002114	Kadappa Anjana Bikes +91 9247041555 9010389998	Nellore Rishi Motors +91 8977713377 +91 8977714477	Tenali Shakthi Motors +91 8886744494	Gajuwaka Cidanta Motors 0891-6562008 0891-6502008
Chittoor Sri Sai Motors +91 9490094908 08572-245057	Kakinada Shri Jayalakshmi Automobiles +91 8332912719 0884-6443555	Nellore-Inside City Rishi Motors +91 8977713377, 8977714477 +91 9866162859	Tirupathi Sri Sai Motors +91 9295091444 8572245057	Vishakhapatnam - Nad Junction Saran Motors +91 8885947222 +91 8885847222

ANDHRA PRADESH	ASSAM	ASSAM	BIHAR	BIHAR
Vishakhapatnam - Seethammadhara Royal Enfield Company Stores +91 8897353382	Guwahati- G S road Shahila Expositions Pvt Ltd +91 9435549786 0361-2335025	Tinsukia SD Royal +91 9957714273	Biharsharif PNN Automobiles +91 9334038042	Gopalganj Riders cafe +91 9199547786
0891-2768887; 2768886	Jorhat Achharsingh Royal	BIHAR	Champa Neeraj Royal	Hajipur Ambika Bhawani Automobiles
ARUNACHAL PRADESH Naharlagun - Itanagar Bucho Royal Enfield	+91 9859736100 9207041076	Araah	+91 7047511730 +91 8871704777	+91 9835641123 06224-295280
+91 9436219089	Nagaon Bajrang Motors	06182-233338	Chapra	Katihar Jaiguru Motors Pvt Ltd
0360-2350103 ASSAM	+91 9435160785	Aurangabad	Supriyam Automobiles +91 9534677444	+91 9430909966
Barpeta G.S. Auto	North Lakhimpur Rishi Riders	Yodha Automobiles Pvt. Ltd +91 9934012273	06152-242999	06452-290172 Madhubani
+91 8472987341	+91 9854100000	Begusarai	Darbhanga SYV Motors	Shagun Auto Sales
Dibrugarh Rider's +91 8472913182	Bina Automobiles Pvt Ltd +91 9954008888	Mayamanu Motors Pvt. Ltd +91 7260851555	+91 8227887777 06272-242777	+91 8986396011 06276-228014
0373-2370018; 2370014	03842-225016	Bettiah	Gaya	Motihari
Guwahati- Maligaon Chirag Enfield +91 9435400437	Tezpur G.M Associate +91 9707026331 03712-237777	Mishra Automobiles +91 8877985073 06254-246273	Kusum Motors +91 8271020543 0631-2210105	Raj Motors +91 9472582848 06252-230373

BIHAR	BIHAR	BIHAR	CHATTISGARH	CHATTISGARH
Muzaffarpur- Maripur Gautam Motors +91 7631996130 0621-2220056 Muzaffarpur-Sitamahari Road Kumar Automobiles	Purnea Link Motors +91 7766917026 Saharsa 7 Hills Automobiles +91 8877080661 06478-227007	Sitamarhi Nili Automobiles +91 9102999131 CHATTISGARH Ambikapur Dev Automobiles +91 9753117804	Jagdalpur Kambo Motors +91 9993333939 +91 9407642827 Korba Kailash Auto Agency	Raipur-Lodhi Para Chowk Indian Motors +91 7714221500 0771-4221500; 4221400 Raipur- Tatibandh
+91 9771123233 7283000384	Samastipur	07774-222804	+91 9826109907	6th Gear +91 8109309666
Patna-Boring Road Ambey Motors +91 9102999131	Aditya Motors +91 8406803303 5452264047	Bhilai AAN Automotive +91 7886996000	07759-245482 Raigarh Priyanka motors	0771-4070666 Rajnandgaon Shubh Auto
Patna-Saguna More Siddhi Vinayak Automobiles +91 8092981877	Sasaram Vintage Auto Corp +91 8540948771	0788-4040512 Bilaspur Blue Sapphire Motors	+91 7389910800 07762-233550	+91 9424102224 07744-401491
0612-212948 Patna-Zero Mile	+91 9304503020 Siwan	+91 8982407770 07752-407770	Raipur- Gaurav Path - Panchsheel Nagar	
Sukhmani Motors Pvt. Ltd. +91 9709761441 0612-3297056	Sri R.L. Automobile Pvt. Ltd. +91 9576449444 06154-247686	Dhamtari Shri Ram Automobiles +91 9179995522	Aadityaraj Automobiles +91 7697208337 0771-4030550	

GOA	GUJARAT	GUJARAT	GUJARAT	GUJARAT
Goa - Margoa		Bhavnagar	HimmatNagar	Navsari
Saini Motors		Gujarat Auto Centre	Rajvee Auto	PSG Motors
+91 7767006138; 6139; 6140		+91 8734936206	+91 8238411177	+91 9924755521
0832-2740343; 2740345	+91 9099031290	0278-2512648	Jam Nagar	02637-265559
Goa - Panaii	079-27490068	Bhui	New Chandra Motor Cycle	
Auto Guides +91 9326102087 0832-2225865 GUJARAT	Ahmedabad- Nehru Nagar Ambawadi Sarabhai Motors	PM Autolink +91 9825900279; 9925635279, 02832-231279	Agency +91 7226065999 0288-2552888; 2678024;	Rajkot - Gondal Road Aditya Moto Gujarat Pvt. Ltd. +91 9099092594, 9099092595 0281 2371070
Ahmedabad-Sarkhej	+91 7926303535	Gandhidham N.P. Auto Agencies +91 9426140290:	Junagadh	Rajkot - Mota Mava
Gandhinagar Road	079-65243010; 26303535		Shree Aashapura Enterprise	Kalawad Road
Kaveri Motors	Anand	9723540290	+91 7046008488	Dev Motors
+91 9824039464	Royal Ridentity Pvt Ltd.	02836-295927	0285 2660111	+91 8401799993
079-65416116; 27663674; 27663048	+91 9898484500 02692-644352	Gandhinagar	Mehsana	0281-6458888; 9157877331 Surat-Adajan Hajira Main -
Ahmedabad-Mani nagar Sarabhai Automotive +91 9825708033	Bardoli PSG Motors +91 9924755549	Aanal Auto Agency +91 9099049555; 8980001123 02712-23262020	Parklane Auto +91 9925014803 9925004538	Adajan
079-25812530; 2531 Ahmedabad- Naroda	Bharuch	Godhra	Devauto	0261-2840023
Krishna Wheels	Vraj Auto	Concord Auto	+91 9054265550;	Surat - Sarthana Varacha
+91 9925333445	+91 9824125050	+91 9879074373	65551; 65552	Purav Automobiles
079-29704155; 29703055	02642-225757	02672-265522	+91 9054265553; 65554	+91 9979841546, 9979841547

GUJARAT	HARYANA	HARYANA	HARYANA	HARYANA
Surendranagar Old Soul Motorcycles +91 9909008000 02752-242777	Ambala - Ambala Chandigarh Highway Royal Motors +91 9315100442 0171-2545795; 2544795	Jind Gill Automobiles +91 9416476459 Kaithal	Palwal Kartike Motors +91 9813131455 01275-240454 Panipat	Sonipat Heydaan Motors +91 9034444433 0130-2233004 Yamuna Nagar
Vadodara- Harni road Amba Motors +91 7820010060 0265-2463232	Ambala cantt- Rai Market Royal Motors +91 9315100442 0171-2630795: 2631495	Raghav Automobiles +91 8199946000 +91 9254312500; 8199947001	Monga Automobiles +91 9354140005; 40006;40007 01274-251000	Falcon Automobiles +91 9315431300 0173-2346433 HIMACHAL PRADESH
Vadodara - Old Padra Road RSA Automotives	Bhiwani Sheoran Auto +91 8950291600 01664-252216	Karnal Monga Motors +91 9354140008 184-2261810; 2272729	Rewari Premium Automation Pvt Ltd +91 8607482200 01274-251000	Baddi Simran Automobiles +91 9816167884
+91 9574257999; 9574256999 2652355040	Fatehabad SDB Automobiles +91 9728942226 01667-221786	Kurukshetra VPS Motors +91 9254022290 01744-231151	Rohtak Badhwar & Co. +91 8059880031 01262-242034: 241173	Chamba Champavati Autos +91 9736678651 01899-226747
Vapi Royal Thumpers +91 9726818181; 9879565274	Hissar Malik Automobiles +91 8572888890 01662-276103	Narnaul Royal Jindal Auto Pvt Ltd +91 9813150222	Sirsa Gulzar Motor Agencies +91 9996147200 01666-221367; 230459	Dharamshala Him Enfield +91 9418083838 8894389090

HIMACHAL PRADESH	HIMACHAL PRADESH	JAMMU & KASHMIR	JHARKHAND	JHARKHAND
Hamirpur (ASP) Parkash Royal Enfield +91 9816058483 01972-258483	Solan Tapan Industries +91 7807400172 01860-1800072	Leh(ASP) Venture Third Pole +91 9419177466 Kathua	Bokaro G.R.Motors +91 9934109008 6542265452	Jamshedpur-Adityapur Aruna Motors +91 8863996222 - 0657-6574010; 6574011
Manali Heaven On Earth Automobiles +91 9459300881 01902-205032; 251151 08350854002 (Kullu)	UNA Sharma Automobiles +91 9318536733 09218-446755 JAMMU & KASHMIR	Lovish Automobiles +91 9419166881, 9070855555	Daltonganj Arjun Automobiles +91 9006082822 +91 8235121935 Deoghar	Jamshedpur - Bajrang Nagar NH 33 CruiserIndia +91 9204004142
Mandi Shivam Automobiles +91 9805473700 01905-243077	Baramula ZMR Automobiles +91 9906727248 Jammu - Janipur road	Srinagar PCS Automobiles +91 9797122244 0194-2472781	Roy Brothers +91 9934344889 06432-240371 Dhanbad	Ramgarh Anjaney Automobiles Pvt. Ltd. +91 9431146297 +91 9031000430
8628876301 Paonta Sahib -Sirmour R.S. Enterprises +91 9418117089 01704-223687	Reliance Motors +91 9419191241 0191-2536084; 0191-2530213	Digiana camp (ASP) Sumeet Motors +91 9419236396 0191-2431058	Arti Automobiles +91 9470133444 +91 9031084005 Dumka Majestic Autobikes Pvt Ltd. +91 9798777007	Ranchi - Harmu Road Raghuram Autocare +91 9905110006 0651-6571607
Shimla Tapan Industries +91 7807500272 01860-1800072	Xtream Motors +91 9070699909; 9070699900; 9070172999 +91 9797568876	Udhampur R A Enfield +91 9419996901 01992-250008	Hazaribag Riders Point +91 9234343422 +91 9031005518	Ranchi - Kokar Sri Nivas Automobiles +91 9771420322 0651-2542789

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Bagalkot Bagalkot Motors +91 8884128877; 9916361134	Bangalore - BTM 2nd stage Royal Enfield Company Store +91 9902180044	Bangalore - Nelamangala Srisai Sadguru Motors +91 9071766021; 9071766025	Bangalore-Sudhamanagar H S R Services +91 9343735655 080-22133119	Bhatkal Brahmi Motors +91 9743637456 08385-226836
Bangalore-Kpura road H.S.R. Services +91 7829000350; 9980762849	080-40905108; 26689975 Bangalore-Electronic City Electronic City Motors +91 7026613071 to 79 & 80	Bangalore- Peenya Sri Sadguru Sai Motors +91 9066699094 080-28393666 Bangalore - Raja	Bangalore - B Narayanpur Sai Ram Autocraft +91 7022288662 080-64909090	Belgaum Shri Munishwar Motors Pvt. Ltd. +91 7204606064 0831-4213059 Bellary
080-22133119 Bangalore-Banaswadi CVS Motors +91 9886500045	8494942929 Bangalore-Indira Nagar Teknik Motors +91 8904004004; 8904005004	Rajeshwari Nagar Accelerate Motors +91 7259534650 080-28606969; 28608989	Bangalore - Yelahanka Acclaim Motors Pvt Ltd +91 9632881188; 9632881133	Sanjeevini Automobiles +91 7353777768 08392-261027
Bangalore-Bannerghatta Royal Enfield Company Store +91 9945592345 088-22440588	080-25284788, 40910005 Bangalore - Kengeri Accelerate Motors +91 7022049627	Bangalore-Magdi road H.S.R. Enterprises +91 9844067555 080-23156617	9663550055 Bangalore (ASP) Mehboob Garage +91 9945785022; 9845326062 080-23436682	Bhavani Motors +91 9379799992 Bijapur Rohan Motors
Bangalore-Bellary Road CVS Motors +91 9886500042 080-23469600; 23469601	Bangalore-Nagarbhavi S.R. Motors +91 9902065933; 9071340000 +91 8032323333	Bangalore-Sarjapur Teknik Motorcycles +91 8904004004; 8904000300- 8904000700 080-40910003; 0004; 005	Bangalore (ASP) Sri Manjunatha Bullet Garage +91 9341220151 080-25427066	+91 9986168363 Coorg Abhyuday motors +91 959000910

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Chikkamangalore Chikkamangalore Motors +91 9742289955	Hassan Shree Subrahmanya Motors +91 9980751155,	Mandya Ruby Maratt Motorcycles +91 9591503399	Mysore (ASP) Kuvempu Nagar Abhyudhay Motor Services	Tumkur Bhagavati Motors +91 9976384499
Chitradurga Jilu Bikes +91 9845127397 +91 8494900552	9742217172 Hubli - Airport Road Salimath Engineers Services +91 7259037590 0836-3241160	Mangalore Frontline Automobiles +91 8861006478 0824-4267573	Pvt. Ltd. +91 9743721955; 9538841412 0821-2462066/2462067 Puttur	Udupi Brahmi Motors +91 9164889161; 9164209161 0820-2527590
Davangere Royal Automobiles +91 9844053511 08192-256239	Hubli - Kusugal Road - Keshwapur Klasik Motors +91 8904800948	Mudhol Mudhol Motors +91 8197567124 Mysore-Vijayanagar 1st	Frontline Automobiles +91 9686137888 Raichur Chukki Motors +91 8792113336	KERALA Adoor Yamuna Agencies +91 9747410243
Gadag Gadag Motors +91 8147776496	0836-2288223 Hunsur Aadith motors 08222-252395; 96	Stage Aadith Motors +91 7899912362; 7899912363 8214244467	Shimoga Apollo Enterprises +91 9008138662; 9739696768, +91 41187404	0473-4229222 Alleppey Rider's Motors +91 9447265955
Gulbarga Mukunda Wheels Pvt. Ltd. +91 9945249302; 49300; 49305, 08472-225302	Kolar Jagadamba Automobiles +91 9972522111; 8152226619	Mysore (ASP) Kempananj. Agrahara Sri Venkateshwara Automobiles 0821-2427533	Sirsi Sri Maruthi Auto Motors	Calicut-Francis Road Blue Mountain Autos +91 9895201667 0495-2302530

KERALA	KERALA	KERALA	KERALA	KERALA
Calicut - Mankavu Luha Automotives +91 7025105333 0495-2333533	Cochin - Vyttila Kaizen Motors +91 7559800072 0484-2307072; 4047072	Kollam - Madanada Unnoonny Motors +91 9567395208 0474-2764566; 2764567	Pathanamthitta Marikar Motors Ltd. +91 8111871222; 9388077007 0468-2223412	Thrissur-Puzhakal Padam Pinnacle Motor Works Pvt. Ltd. +91 7025600600; 8111994007
Calicut - Puthiyagandi SS Motors +91 9567863979 0495-2392200; 2390770	Kannur SS Motors +91 9567862458; 9567863980	Kodungallur Pinnacle Motor Works Pvt Ltd +91 9072575721	Pattambi-Palakkad Intrepid Works +91 9744072921 0466-2970666	0487- 2385255 Thiruvalla St. Mary's Motors +91 9526260400;
Cochin - Angamali, Areeckal Junction Sanjo Motors +91 9809709999 0484-6888889	0497-2731312 Kannur Vibrant Automobiles +91 8111990066	Kottarakara Unnoonny Motors +91 9567966444 Kottayam	Perinthalmanna ABC Motors +91 9447158400 04933-226677	9747972081 0469-2733243 Thodupuzha Veliyathu Motors
Cochin - Chittoor Road St. Mary's Motors +91 8891000691; 9895118951	0497-2776660 Kayamkulam Roverz Motors +91 9072546555	Javeens +91 9446397300 0481-2563455; 2567070	Perumbavoor Sanjo Motors +91 8592009991 0484-6888885	91 8943200090 4862227899 Tirur ABC Motors
0484-4022819 Cochin - Edapally Royal Enfield Company Store +91 7025233912 0484 - 6494991; 6494992	Kollam - Bishop Jerome Nagar Marikar (Motors) Ltd. +91 9947031120; 9947031121 0474-2732474	Palakkad Intrepid Works +91 8606933008 0491-2572331	Thrissur-Karunanakaran Nambiar road Marikar (Motors) Ltd +91 9388077010; 8606863336 0487-2339307	+91 9605827000 0494-2422277 Trivandrum-Attingal Concept Bikes +91 9048990256

KERALA	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MAHARASHTRA
Trivandrum - Kaimanam Junction Sivaji Motors +91 7736207777; 7736066716	Bhopal - Hamidia Road Choudhari Tractor Agency +91 9425023609 0755-5240614; 2735762	Gwalior Rimik Motors Pvt. Ltd +91 9827935616; 9926435616 0751-4035616	Khandwa Binwani Motors +91 9425909302 7332244222	Ahmednagar Newaskar Automobiles +91 8087500900 0241-2470125
0471-6506777 Trivandrum - M G road Marikar (Motors) Ltd +91 8606068466	Bhopal-Padmanabh Nagar Ananya Auto +91 7389930806 0755-4076937	Indore - Nehru Market Krishna Motor Agency +91 9826034012 0731-2703172	Satna Manish Motors +91 9827250199 07672-251608	Akola Agrawal Motors +91 8408089944 0724-2258259
0471-2334621 Trivandrum - Vetturoad - Kazha kuttam Concept Bikes	Chhindwara Rahul Royal Motors +91 8889999602 07162-245255	Indore - Sayaji Club Road RR Automotive +91 8878660100 0731-4222822	Shahdol Gupta Automotive +91 8718811703 0765-2231967	Alibagh SK Autoriders +91 9970041579 02141-223030
+91 9048400200; 9048990546 Vadakara Grace Motors +91 7034775555	Dewas R R Motorcycles +91 8109103622 8269270709	Jabalpur Royal Thumpers +91 8962010072 0761-4042424; 4042423	Ujjain Avis Auto +91 9300005025 0734-2520007	Amravati Bhans Automotive +91 7620177060 0721-2510636
Valluvambaram- Malappuram ABC Motors +91 7034166300 0483-2770700	Guna Standard Motors +91 9754222241 +91 9425131250	Katni Royal Thumpers A Division of Superior Automobiles Pvt Ltd. +91 8962010075 07622-226474	Vidisha Adventure Bike +91 9425148606 0759-2408222	Aurangabad - Bansilal Nagar S.K.Y.S Automobile +91 9028059252 0240-2350652

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Aurangabad-CIDCO- Cannaught Cherry Corporation +91 9850889408 0240-6601613	Chandrapur Dinesh Motors +91 9028111383 07172-260555	Jalgaon Usha Motors +91 7768009996 0257-6999000	Mumbai - Bhandup Soniya Motors Pvt. Ltd +91 9322314555 022-65650153; 7208005209	Mumbai-Thane (Dombivali) Pooja Motors +91 8425840752
Baramati Jay Motors +91 9960247655; 9890090381 02112-221055 Beed	Dhule Surbhi Motors +91 9371057573 02562-239933 Gadinglaj	Karad Nand Enterprises +91 9923981211 02164-242772 Kolhapur Motor India	Mumbai - Goregaon Ishna Wheels +91 8879330226; 8879330227 022-28711242; 28711243 Mumbai - Kandivali	0251-2470611 Mumbai - Thane (Godbundar) Soniya Motors Pvt. Ltd +91 9322315111 022-25893202; 7208005207;
Aaryan Motors +91 9421184118 02442-223780	Yashashri Motors +91 9657009444 9527094848	+91 9822871729 0231-2531177 Latur	Voyage Motors +91 9146871013; 7498567890 022-28087882	7208005208
Buldhana Samyak Automotive +91 9422181159 072-62241273	Ichalkaranji Motor India +91 9822551777	Prisha Motors +91 9049607711 02382-200711 Malegaon	Mumbai-Panvel	Unison Automobiles +91 9029234040 022-28456620
Borivali Unison Automobiles +91 7506555039 22265614014	Indapur Sahyadri Auto +91 7387111109 02111-224111	Shaurya Motors +91 8380038153; 156; 9527002881 02554-231171	Mumbai - Sakinaka Synergy Auto Inc +91 8286046565 022-28590085; 28590086	Mumbai - Thane (Vasai) SP Wheels +91 8446011105 0250-6511107; 6511108

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Mumbai - Thane (Ulhas Nagar) S R Motors (A Unit of Riya Motors Pvt. Ltd)	Nagpur - Wardhaman Nagar Shri Krishna Automobiles +91 9372121346	Nasik - Ganjamal Ostwal Autos +91 9595301414 0253-2500291	Phaltan Adved Motors +91 7040829609 02166-225272; 225472	Pune - Fathima Nagar Platiinum Auto +91 7755932578; 2579 +91 9881171717
+91 7738622211; 7506044995 0251-2700043	0712-3191202 Nanded Jairam Motors +91 9552446688	Nasik - Satpur Moharir Auto Pvt. Ltd. +91 8446646555;	Pimgalgaon Shaurya Motors Shaurya Motors +91 9130068287	Pune - Hadapsar Platiinum Auto +91 7030911278; 7030911284
Mumbai (ASP) Nerul Ram Motorcycles +91 9323025335 022-27700394;	02462-297788 Nandurbar Dinesh Wheels +91 9673298999	8378998295 0253-6630000 Osmanabad Hatlai Auto	02550-660604 Pune - Adarsh Nagar Dhone Automobiles +91 7028922644	Pune - Kasarwadi Dhone Automobiles +91 7028045684 Pune - Khed Shivpur
Nagpur - Kamptee Road Ved Motors	+91 9764567877 Narayangaon Kings Royal Riders	+91 9822838888 02472-228588 Parbhani Chandrallama Automotive	020-24273335 Pune - Baner Kings Auto Riders	Siddh Auto +91 9673152266 Pune - Kothrud
+91 9326916819 0712-2652222; 2654444 Nagpur - Sitaburdi	+91 9075009831 0213-2245542	+91 9665516193 2452-242299	+91 7875756100 020-27200256 Pune - Chinchwad	Siddh Auto +91 9168376611 020-25280050; 25280051
Paragon Traders +91 9595622261 0712-2523456	Nasik - Dwarka Ostwal Autos +91 9422255773 0253-2592717	Parli Shiva Motors +91 9765924477 02446-227477	Hridaan Motors +91 9850888899 2069100202	Pune - Yerwada Dhone Automobiles +91 7028978074 020-60121812

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MIZORAM	NEW DELHI & NCR
Pune - Wakad (Talegaon) Kings Auto Riders 020-65107545	Satara Nand Enterprises +91 9923981211 02164-242772	Wardha Sri Krishna Automobiles +91 9769169180	Aizawal Lawma Enfield +91 8575517879 0389-2334731	Delhi - Jhandewalan Ext. Ess Aar Motors +91 9810797099 011-65461901; 23524426
Pune - Wakhewade Brahma Motors +91 7276629900 7276027722	Shrirampur Karachiwala Automobiles +91 9028537570 02422- 227570	+91 7410061121 Yavatmal Aaditya Riders Pvt Ltd +91 8055958119	NAGALAND Dimapur Uniglobe Enterprises	Delhi - Kailash colony, Okhla Indust. Area South Delhi Motorcycles +91 9716145509,
Pune (ASP) Sadguru Service Station +91 8308048854;	Solapur - Bale chowk, Pune Highway Chavan Motors	9158632833 MANIPUR	+91 9774057770 3862225903	9716002728 011-26811013 Delhi - Mahipalpur
9011078854, 020-24350727 Ratnagiri	+91 7720069040 0217-2352323/2352424 Solapur - Budhwarpeth	Imphal Sanamahhi Motors +91 8259061598	NEW DELHI & NCR Delhi - Dhwarka Cruiser Motors	Kay Tee Automobiles +91 9910884777 011-64612777
Advait Motors +91 9970551171 02352-228930	Mondhe Motors +91 8237466447; 6446; 6442 0217-2315923; 2735081	0385-2449111 MEGHALAYA	+91 9136310966 +91 8459223833	Delhi - Mangolpuri Soni Automobiles +91 9873069001 011-27921311; 65180349
Sangli Abhay Auto +91 7768073003; 9011964040, 0233-2623040	Waluj - Pandharpur Godavari Agro Serivces Pvt. Ltd +91 9146189551 0240-2553770	Shillong Merin's Royal Enfield +91 8258811320 0364-2590048	Delhi - Gujrawala Kay's Autos +91 9810433555 011-28877008; 28877009	Delhi - Najafgarh Outer Delhi Motorcycles +91 9540941601 011 68888252 / 53

NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	ORISSA
Delhi - Padapadganj	New Delhi (ASP)	Ghaziabad (ASP) Jai Shiv enterprises +91 9927064206 Ghaziabad (ASP)	NCR-Noida - Sector 10	Bargarh
Asco Motors	Balaji Motors		Shree Mahadev Agency	Shree Shyamji Bike Point
+91 9582184488	+91 9350102768		+91 9811404319	+91 9437053233
011-2214888	+91 8826574278		0120-4310052/4324662	+91 7381053244; 255
Delhi - Rama Road	Delhi (ASP)	Royal Taj Agency	NCR-Noida - Sector 63	Baripada
Lamba Enterprises Pvt Ltd.	M.G. Auto Sales	+91 9810413387	Solitaire Automotive	Legend Automotive
+91 9711611591	+91 9810237417	+91 9818728177	+91 9810703922	+91 9178024417;
011-45151159	011-27837439	NCR Gurgaon - Old	0120-4547929	9040078001
Delhi - Saraswati Vihar North Delhi Motorcycles +91 9810558625 011-27054737	NCR - Faridabad - Mathura Road Heighten Automotive Pvt Ltd +91 9911223811 +91 9717475811	Delhi Road Aman Automobiles +91 9810535659 1244084648 NCR Gurgaon - Sheetala	NCR-Sahibabad Sangam Autos +91 9311051177; 9990624290, 0120-4198890	Berhampur Vaishnavi Automobiles +91 9937308525; 7682833574; 6802248820 Bhubaneshwar - Buddha
Delhi - Shahadra Amar Autos +91 8802583948 011-43595322	NCR - NIT Faridabad Sohan Auto World +91 9811551530 0129-2429352	Mata road Brawn Automobiles +91 9212315090 1244251481	ORISSA Angul Green Treet Automotive (P) Ltd +91 9937066505	Nagar Royal Automobiles
Delhi - Tilaknagar	NCR - Ghaziabad -	NCR Gurgaon - Sohna	+91 7852936512 Balasore Favour Ride +91 7894775144; 90400557156	Bhubaneshwar - KIIT
Lamba Enterprises Pvt Ltd.	Nehru Nagar	Road		Road, Sishu Vihar
+91 9999389189;	Rawal Automobiles Pvt Ltd	Manzil Motors Pvt. Ltd.		Gugnani Automobiles
9250919994	+91 9350315311	+91 9650311988		+91 9776160313;
011-45614855; 42138246	0120-4104659; 9211921227	1244231683		9178143270

ORISSA	ORISSA	PUNJAB	PUNJAB	PUNJAB
Bhubaneshwar - NH 5 - Patrapada Trupti Autoworld +91 9861824216;	Keonjhar Sai Automobile +91 9437054807 +91 9437004711	Abohar Aman Auto Zone +91 9814767900 +91 9914767900	Bhatinda-Goniana Road Ajay Autos +91 9988678145 0164-2235608; 5000376	Gurdaspur Ajit Motors +91 9855152204 01874-501644
7873024206 0674-2470148	Rourkela	Amritsar	Bhatinda - Mansa Road Krishna Automobiles	Hamirpur Parkash Royal Automobiles
Bhawanipatana Shyamkrishna Mart pvt ltd	The Agents & Distributors +91 9937007971;	Jaycee Motors Corporation +91 9780038349 +91 9780038078	+91 8725086888 0164-2212802	+91 9418458483 01972-258483
+91 9040350293 8763130236	9238111010; 0661-2511223 Sambhalpur	Barnala	Faridkot Baba Farid Automobiles	Hoshiarpur Lagwal Automobiles
Cuttack Shree Hanuman Automobiles +91 8342039286; 9438429957	Sreyasri Motors +91 9040015355;	Megan Autos +91 9878120088 +91 9878120033	+91 9780247048; 9872409626 01639-251343	+91 9256514321 01882-238586
0671-2586630; 9853265588 Jajpur Road Birendra Motors	9437030055; 9040015359 0663-2115355 PONDICHERRY	Batala Moon Autos	Fazilka Aman Auto Zone +91 9988700765;	Jalandhar - GT Road Fateh Autos +91 9417231123
+91 9078886306 Jeypore	Pondy Rooster Automobiles	+91 9988355955 01871-222278	9814667900 Ferozepur	0181-2632880 Jalandar - SatlujMarket
Golden Motors +91 9439355473; 9437024187	+91 8940422422 0413-2355336	Begowal S.S.Motors +91 9814399532	Royal Hut +91 8437312364 01632-242567	Navyug Motors +91 9915630535; 9878785796 0181-4627998

PUNJAB	PUNJAB	PUNJAB	PUNJAB	PUNJAB
Jalandar - G.T.Road Navyug Motors +91 9878785796 0181-4627998 Kapurthala	Ludhiana - Jodhewal Shree Dadu Dayal Automotive +91 8728092401 0161-5040405	Mohali Manmohan Motors +91 9216267888; 9988317366 0172-6527366; 6527367	Nakodar (ASP) Bhagwati Automobiles +91 9357242788 +91 9041522970	Patiala - Sirhind Road Gurukirpa Motors +91 9779222225 Phagwara
Innovative Automobiles +91 9357254736 01822-233011	Mahilpur (ASP) Mahilpur Motors +91 9417354423	Morinda Morinda Motorcycle Centre +91 8427242324	Nangal Nangal Motors +91 8283829760; 9878667432; 01887-229160	Khalsa Automobiles +91 9463138303 01824-270081
Khanna Kishori Automobiles +91 9872030903; 8591525575; 01628-503868	Malerkotla Om Automobiles +91 9814404513; 8054944713	0160-2630357; 2630072 Mukherian Lagwal Motors +91 8699982680	Nawanshahar HS Enterprises +91 9417654888;	Ropar Garcha Automobiles +91 9464752267 01881-228137
Ludhiana - Dholewal - GT Road Sant Motors +91 8968296020 0161-5012647	01675-262113 Mansa Ganpati Motors +91 9779850001 01652-236899	Muktsar Deep Autos +91 8566926850 0163-3510390	8146091105; 01823-221194 Pathankot Cashmir Sales Corporation +91 9417412884 0186-2220148; 2224672	Sangrur Verma Automobiles +91 9888836998 01672-223273
Ludhiana - Gurudev Nagar - ferozpur Road Barnala Automobiles(Jagroan) +91 9780014995 0161-2424114; 2426209	Moga Bikram Sales Corporation +91 9855914072 01636-227777	Partap Automobiles +91 9815001739; 9815001740 9872605400	Patiala - Rajpura Road Sukhdev Automobiles +91 9876103017 0175-2305721	Sultanpur Lodhi Dalbir Motors +91 9814679432 01828-223634

PUNJAB	RAJASTHAN	RAJASTHAN	RAJASTHAN	RAJASTHAN
Tanda Sandeep Automobiles +91 9914554304 01886-502398	Banswara Veer Autolinks +91 9001406681 02962-254135	Chittorgarh Manglam Motocorp +91 7737094370 01472-297018	Jaipur (ASP)-Sudershan Pura JMS & Co +91 7737009665;	Nagaur D.D.Autotech +91 9828943737 01582-243006
Taran Taran Chhabra Auto Agencies +91 9815213148 +91 8528180632	Barmer Devrath Motors Pvt. Ltd +91 8107381111; 9549657080 02982-224381	Churu Churu Balaji Motors Pvt Ltd +91 9649777777 01562-253777	9460345047; 0141-2211047 Jhunjhunu Balaji Motors +91 7733022411	Pali RMD Motors +91 9829285357 0293-2227151
Zirakhpur Garg Auto zone +91 8427656388 RAJASTHAN	Bharatpur Khusali Motors +91 9414944972	Hanumangarh Udai Motors +91 9772780001 01552-226266	01592-231061 Jodhpur Shree Rajpurohit Automobiles +91 9001744442	Sikar Apoorva Motors +91 9314237183 01572-245830
Ajmer Jogbala Motors Pvt Ltd. +91 9829072298 0145-2787666	Bhilwara Soni Automobile +91 8233416700 011 27921311; 65902249	Jaipur - Govind Marg Rajesh Motors (Raj.) Pvt Ltd. +91 9521125125; 9414064864	0291-2980473 Kota Mundra Motors Pvt. Ltd. +91 9352602347 0744-2361264	Sriganganagar National Motors +91 9414211956 0154-2444200
Alwar R.S. Motors +91 8696900842; 9785999998, 0144-2738248	Bikaner Bikaner Bikes Pvt Ltd +91 9529269924 0151-2251345	Jaipur - Tonk Road Aditi Motors +91 9829822722 0141-2700224	Kotputli Shree Motors +91 9468768300; 9116011113; 2912980473	Udaipur Voyage Motors +91 9799144460 0294-2460104

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Arani	Chennai - Broadway Balaji Motors +91 9962997975 Chennai - Chrompet	Chennai - Kelambakkam	Chennai - Pallikaranai	Cuddalore
Akan Agency		Vardhan Motors	Sri Venkateswara Bike Zone	Rooster Automobiles
+91 9751502221		+91 9092604446	+91 8681863330	+91 9791322822
+91 7845330209		+91 9092604447	044-65655222	04142-227788
Chengalpattu-GST Road	The Legend Motors	Chennai - OMR,	Coimbatore - Hope	Dharmapuri
Shiv Sholai motors	+91 7299042018	Perungudi	College, Peelamedu	S.M.Motors
+91 9500008699	044-49595867; 22410272	Royal Enfield Company store	Royal Enfield Company Store	+91 7373778259,
+91 9786177477	Chennai - Greams Road	+91 8939958655	+91 9655999844	9994852482; 04342-288123
Chennai - Ambattur	Sri Velavan Motors	044 - 42607777; 42607555	0422-6067006; 6067007	Dindigul
Classic Motorcycles	+91 8754553411; 8754553404	Chennai - Purasaiwalkam	Coimbatore - Sai Baba	Rajendra Automobiles
+91 9940063306	044-42076898	I Speed Motors	colony	+91 965933433, 8508678333
044-42180206 - 45080207	Chennai - Jafferkhanpet	+91 9094633712	Sheriff Motors	0451-2431850
Chennai - Anna Nagar Southern Motors +91 9841277990 044-26264686	Sreehita Auto Zone +91 7338819603; 04; 05 044-65906590; 591	044 45588047 Chennai - Red Hills AKG Motors +91 9597082578	+91 9597310101 0422-4210101 Coimbatore - Trichy	Erode Senthil Murugan Auto Agencies +91 8220048567 +91 9790030003
Chennai - Alapakkam	Chennai - Kattuppakkam	044-26322063	Road, Kothari Layout	Hosur
Sri Velavan Motors	Aravinduja Motors Private	Chennai - Tondiarpet	BullMenn Motors	Sri Saravana Motors
+91 7299405000;	Limited	Balaji Motors	+91 9514555510;	+91 9543813032;
7299705000;7299709999	+91 8939804335	+91 9087521116	7092900000;	8220013432
044-24761902	044-45554888	044-25910104; 25910105	7092900000	04344-244030/ 244031

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Hosur (ASP) - Seetharam	Kumbakonam	Namakkal	Thanjavur	Tirupur
Nager	A.V. Motors	Royal Annanmar	JAF Associates	Bikerz
Sri Manjunatha Bullet Garage	+91 7598707783; 7598707785	+91 8883114777	+91 7867019836;	+91 7502387000
+91 9894955499;	0435-2415286	04286-277557	7867019831	+91 9842187000
9940909908	Madurai - KK Nagar	Pollachi	Theni	Trichy - Annamalai Nagar
0434-4314114	Madras Motors	Bharat Motors		Karur road
Kanchipuram	+91 9976755111	+91 9715222600	Coral Moto Hub	Oxina Motors
Jet Blaze Motors	0452-2585686	+91 9843345461	+91 9500739686	+91 8056455577
+91 9629032223;	Madurai - Kazhavasal,	Salem - Four Roads	9698933000	7402718502;
9894538176	Theni main road		Thiruvannamalai	7402718514
Karaikkudi	Classic Motors	Chamundi Enfield	AKAN Agency	Vellore
Neha Motors	+91 9629023344	+91 8098611999; 8098559999	+91 9843033861	Sri Kalikambal Autos
+91 7373097717	0452-2667875	0427-2414100	04175-233377	+91 8508536771
Karur Murugan Motors +91 9500955950; 9543255950; 0432-4329950	Madurai - Simmakkal, Workshop Road G.G. Motors +91 8012688444 0452-2342007	Sivakasi Sri Scorpion Racers (P) Ltd +91 7373059701 0456-2231303	Thoothkudi Charles Motors +91 9944723062 0461-2321636	0416-2245505 Karaikal Rooster Automobiles +91 7639001047 0436-8228800
Krishnagiri Sree Maruthi Motor & Auto Service +91 9159566613 , 9159566615; 0434-3232512	Nagercoil Chandra Motors +91 8973886699 04652-236477	Thiruvallur Gap Motors +91 8939983660 +91 8939983662	Tirunelveli DG Motors +91 9486729010 0462-2970031	Villupuram Rooster Automobiles +91 8489144744 04146-222279

TELANGANA	TELANGANA	TELANGANA	TELANGANA	TELANGANA
HYDERABAD & SECUNDARABAD Hyderabad- Banjara Hills VVC Automobiles +91 7842883883	Hyderabad-PJR Nagar, Gachibowli road Go Green Motors India Pvt. Ltd 040-64646303 040-6462655	Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pvt Ltd +91 7660008132;	Karimnagar-CVNR Road Quality Motors +91 9030775252 Khammam	Miryalguda Sri Lakshmi Pavan Automotives +91 9666660606
Hyderabad-Bowenpally, Suchitra SVR Motors and Engineering +91 8885023360; 8885023350 040-40116336	Hyderabad-Prasanth Nagar,vanasthalipuram Taurus Motors +91 8125828787 040-29804755	9100087519, 040-23514551 Secundarabad-Begumpet Kayjee Engineers +91 9246113133 040-27907444 Secundrabad- Neredmet	Royal Automotives +91 9963886789 +91 8297536789 Kothagudam Royal Motors	Nalgonda Vijayalakshmi Automotives +91 8885966627 8885966687
Hyderabad-Erragada Royal Enfield Company Store +91 9989055856; 7093190003; 7416783025 040-23701235; 23702255	Hyderabad- Ramachandrapuram, BHEL Go Green Motors India Pvt. Ltd +91 8712126622	Orange International +91 8121091210 040-64449494; 3434 Secundarabad-Opp-KIMS Hospital, Ranigunj	+91 8297616789 +91 8297626789 Mahabub Nagar Harshithh Automotives +91 7660022336;	Nizamabad KY Motors +91 8885198222 08462-236882
Hyderabad-Himmayat Nagar Jayasree Automotives +91 9010183555 +91 9010752555 040-65169666	040-69996644; 69996622 Hyderabad-Saraswathi Nagar, Uppal Royal Engineers +91 9885051755 040-64241755	Kayjee Engineers 040 - 64533839 Karimnagar-Bye pass Road Quality Motors +91 9966173000 0878-6509993	7660022334	Warrangal-Hanamkonda Quality Automobiles +91 9030775252 +91 9030775164

TRIPURA	UTTARKHAND	UTTARKHAND	UTTAR PRADESH	UTTAR PRADESH
Agartala XED Motorcycles +91 8415951975 0381-2341098	Haridwar Prem Auto Enterprises +91 9927994477 01334-250242; 253242	Rudrapur Brar Motors +91 9219445699 05944-2473127	Allahabad - Bai Ka Bagh Vrindavan Automotive +91 7860352786; 7860383786 0532-2417021	Bareilly Suri Sales (P) Limited +91 9359108047 7351007963
UTTARKHAND Dehradun - Karanpur Road Ahuja Enterprises +91 9927532535	Kashipur Batra Enterprises +91 9837336026 05947-277207 Pithoragarh (ASP) Sai Automobiles	UTTAR PRADESH Agra - Baluganj Shambhavi Automotive Engineers +91 8057400022 0562-2260444	Allahabad-Kamla Nehru Hospital Jay Pee Motors +91 7705907327; 7328; 7329 0532-6061002;1003 Azamgarh	Bijnor
Dehradun - Saharanpur Road - Niranjanpur Allied Auto Agencies +91 9690777771 0135-2623487	+91 9412981042 05964-225786 Rishikesh (ASP) Ranjeet Motorcycles +91 9897548171; 9897113728, 0135-2434171	AGRA-Guru Ka Tal-NH 2 Agra Royals +91 9837004872; 9997023456 0562-6888846	Amit Motors +91 9415795792 +91 9415103787 Badaun Omkar Motors +91 9412427289	Chaudhary Motors +91 8958994499 01342-264455 Bulandshahar Santhosh Enterprises +91 9760415515
Haldwani Suri Sales (P) Limited +91 7351007972 05946-210768	Roorkee Goswami Automobiles +91 9897238608 01332-277477	Aligarh Maindola Royal Enfield +91 9319144044 0571-3292464	9520330305 Barabanki G.R & Company +91 7706911346; 7706911342	05732-231326 Deoria Supreem Motors +91 9628755557 05568-229624

UTTAR PRADESH Etawah V P Motors +91 9719530742 +91 9568013104	UTTAR PRADESH Ghazipur Shri Sai Chandra Automobiles +91 9415881073 Gonda	UTTAR PRADESH Kanpur Sareen Motors +91 9389629521 0512-2540484	UTTAR PRADESH Lucknow - Alambagh Shreya Auto World Pvt. Ltd. +91 8400400842; 850 0522-4037677; 4041033	UTTAR PRADESH Meerut - Jagriti Vihar Moto Riders +91 8476900096 0121-4000511
Faizabad Chawla Riders +91 9628140004-07	Style N Passion +91 9125411110 Gorakhpur	Kanpur-Khalasa Line Sareen Motors +91 7705905138;	Lucknow - Jankipuram Royal Motor works +91 7607777396	Meerut - West rithani Nutech motors +91 7088714714 0121-440111
0527-8265077/78 Farrukhabad Ankur Auto Agencies +91 9415124921	Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 9559005759 0551-2230014	8799414243 8303220224 Kanpur S.S Automobiles	522 4078111 Maharajganj RK Motors	Moradabad Akanksha Autozone Pvt Ltd. +91 7060007905 0591-6055999
+91 7678874000 Fatehpur K S Auto Sales +91 9616519248 05180-221223	Jaunpur Aditya Motors +91 9196128730; 9839216882 0545-2264047	+91 7705006411 Lakhimpur Kheri Shree Vinayak Motors +91 9554155999 0587 2277734	+91 9161274582 Mathura Aryaman Enterprises +91 9675303059 +91 8392916221	Muzaffar Nagar Harivansh Auto Agency +91 9219440446; 8979298645 0131-2646477
Firozabad Emerald Automobiles +91 9219439555 +91 9219439444	Jhansi Triveni Enterprises +91 9415059809 0510-2481007; 2380007	Lucknow (ASP) Amafh Bullet Centre +91 9415018786 0522-4074200	MAU Chandra Motors +91 9450189107 0547-2860555	Nazibabads Agarwal Tractor & Parts +91 9927030546; 9837072868 01341-220252

UTTAR PRADESH	UTTAR PRADESH	WEST BENGAL	WEST BENGAL	WEST BENGAL
Padrauna Cantech Automobiles +91 9838719444; 7705803777; 05564245959	Unnao Raj Auto World +91 7080903700 0515-2831098	Barasat-24 Parganas The Country Motors +91 9051506523 033-654 04510	Durgapur R.H. Automobiles Pvt.Ltd. +91 9748402629	Kolkata - Chowrangee chowk Austin Distributors Pvt. Ltd
Pratapgarh Shaurya Enterprises +91 9554433888; 9918601126; 1127	Varanasi - Maldahiya Khurana Automobiles +91 8934965655 0542-2207532; 2207618	Baruipur-24 Parganas Austin Distributors Pvt. Ltd 033-65556611	Apollo Coaches (P) Ltd +91 9903800400 033-32971712; 32902346	+91 8420046876 033-65552077; 40721010;
Raebareli Sushma Motors +91 9455502987	Varanasi - Maqbool Anand road One Place Automobiles Pvt. Ltd.	Berhampore Maxwheel Motors +91 9233330208 03482-224227	Howrah Apollon Motors LLP +91 9804321122	Kolkata - Nowa para Kolkata Bike Zone
Saharanpur Sachdeva Enterprises +91 8445577933 0132-2680680	+91 7753888536; 7753888522, 0542-2508385 WEST BENGAL	Burdwan Sri Ram Automobiles + 91 9800365544;	Jain Motors +91 9476481717 +91 9434692778	91 9674029373 033-40082380 Kolkata-Sarat Bose road Shah Distributors
Sultanpur Asia Royal Motors +91 9935185230 05362-227777	Asansol SG Automobiles +91 8170030003; 8170030004	9002450705 Dankuni-Hooghly Universal Traders +91 9883069797	Kolkata - Anandapur Royal Enfield Company store +91 9874852522 033-40060206 / 0209	(Auto Division) +91 9830477788 033-22814242

WEST BENGAL	WEST BENGAL
Kolkata - Shakespeare Sarani East India Agro Indus. Pvt. Ltd +91 9874977006 033-22824400; 22823300; 22903370	Siliguri - Matigara Riders Corner +91 9002223222 Siliguri - 2nd Mile Sevoke Road
Krishna Nagar Royal Automobile +91 8629961089	Siliguri Distributors +91 9775633225 0353-2778873; 2547457
Malda Speed Wheels +91 9735586333	Titagarh Bishnu Oil Company +919874839911; 9051365511
Midnapore Sri Sai Auto mart +91 9434043691 03222-275999	033-25833353
Raiganj Kalyani Solvex Pvt. Ltd. +91 9775517444 03523-253016	

PARTS STOCKIST DISTRIBUTOR

Andhra Pradesh Vijayawada Cyber Automobiles Pvt. Ltd +91 9959615806	Gopalganj Shri Harishankar Motors +91 9771880938 06156-223956	Margoa Saini Motors +91 8308808290 0832-2740343; 2740345	JAMMU & KASHMIR Jammu Yahoo Technocra +91 9419191241	Bangalore Fixwheel Motors +91 9845949127 Kolar
Assam Guwahati Chirag Enfield +91 8136051810 0361 2670293	Patna Moto Spares Pvt.Ltd +91 9097577727 CHANDIGARH	GUJARAT Ahmedabad Shreeji Auto Traders +91 9173170931;	JHARKHAND Hazaribagh Riders Point +91 9234343422	Jagadamba Automobiles +91 9972522111 +91 9066983741 KERALA
Guwahati Pawan Automobiles +91 9864045473	Chandigarh Manchanda Autos +91 9915047010;	JamNagar New Chandra Motor Cycle	Jamshedpur Royal Auto Syndicate 72502-22283	Aluva Marikar Motors Ltd +81 9894744880
Jorhat Achharsingh Royal +91 9707522666	0172-2630263 CHATTISGARH	House +91 9824211699 HARYANA	Ranchi Sri Nivas Automobiles +91 7763801824	Calicut Luha Automotives +91 7025106888
BIHAR Biharshariff PNN Automobile +91 9135620008	Raipur Nagorao Auto Engg Works Pvt. Ltd. +91 9165878692	Ambala Royal Motors 0171-2545795 Bhiwani	Zittau Arjun Automobiles +91 7282820788 +91 8935849216	0495-2333533 Ernakulam JR & Sons +91 9447063679
Chapra Supriyam Automobiles +91 9128739999 06152-242999	GOA Mapusa Shauna Auto Agencies +91 8326520712	Sheoran Automobiles +91 7056732216 01664-252216	KARNATAKA Bangalore Cyber Automobiles Pvt. Ltd +91 9448473078	Kochi Bhavani Auto Distributors +91 8086078173

PARTS STOCKIST DISTRIBUTOR

Trivandrum Subha Auto Wares +91 9446562640 MADHYA PRADESH	Nagpur Siddarth Spares +91 9373195554 Pune	PUNJAB Amritsar Gee Ess Enterprise +91 9878930900 Ludhiana	Erode Senthilmurugan Auto Parts +91 9894756567 Madurai Senthilmurugan Auto Parts	Lucknow-Transport Nagar Moped House Pvt.Ltd +91 9696202669; 8795444497
Indore Royal Ventures +91 9589541950	Planet Spares +91 9371005335 Pune	Amrik Singh & Co. +91 9915069033	+91 9500786567 TELANGANA	Lucknow Varma Auto Sales
Jabalpur Bhawani Automobiles 094243-05880	Shree Spares +91 9822377709	RAJASTHAN Jaipur-Indra Bazar Shubham Agencies	Hyderabad Cyber Automobiles Pvt. Ltd +91 7702143186	+91 9335207393 UTTARAKHAND Dehradun
MAHARASHTRA Aurangabad Vinod Agency	New Delhi Kinematics Mktg (P) Ltd. +91 9654787802	+91 9680465973 Jaipur-Transport Nagar Shubham Agencies +91 9414067766	UTTAR PRADESH Ghaziabad Indian Automobiles	Anamika Enterprises +91 9897615836 WEST BENGAL
+91 9823336611 Mumbai	ORRISA Bhubaneshwar	TAMILNADU Chennai Cyber Auto Parts	+91 9999916346; 9899288337 Kanpur	Kolkata Auto Marketing Agencies +91 9830325490
Rajkamal Auto & Scooter Spares +91 9833985931 Mumbai	Orissa Marketing Services +91 9437033935	+91 7358768669 Chennai	Sareen Motors +91 9389629505 Lucknow-Kaiserbagh	033-22360642; 22360643 Siliguri Goyal Royal Spares
Ram Motor Cycle Co. +91 9920748891 022-27700394	Cuttack Bullet Plus +91 9437037590	Popular Motors Cycle Company +91 9698444568 044-43435365; 43435364	Moped House Pvt.Ltd +91 7408555502 0522-4108704	+91 9434063334

NOTES

Ro	YA	L	E	NI	FIEL	D					MC	T	0	RC	YCL	EIN	S	TA	L	.L	4 T			IF	0	R	M
Dealer's	s Nam	e													Date				Τ								
Place of	f Deal	ersh	nip	İ											Dealer	Code			Ť	Ť	Ť	İ		П	T		_
Engine	No.														Coupo	n No.			Ť	İ	İ			П			
Chassis	No.														Installa	ation D	Date	2.	Ť	Ì	Ī	İ	Ī	П	Ť		_
Custom	ner's N	am	<u> </u>												Taluk				_		_						
Door N	o. & St	ree	t												State												_
Vi ll age ,	/Towr	n													STD Co	ode											_
District				T											Teleph	one R	esi	denc	e								_
Pin Coc	le														Motor	cycle F	Reg	n. No	о. Э.								_
Telepho	one O	ffice	<u> </u>												Invoice	e No.											_
E-mail a	addres	ss : i	f any												Delive	ry Not	e /	Advi	ce	No							_
		Age	in Year	'S			Гм	onthly	Hous	ehold I	ncome		1 [Ex	pected Av					1 [Mc	de o	f Purc	hase		_
18-20 Yrs	AG 01	Ť	36-40) Yrs	AG 05	Т	_	w Rs. 10						Lesser	than 10 K	Ms	ΚΛ	101			ash				MP		
21-25 Yrs	AG 02	\top	41-4		AG 06		_	0,000-2	_		02			11 - 30) KMs		KΛ	102] [ank F	inar	ice		MP	02	Г
26-30 Yrs	AG 03	\top	Abov	/e 45 Y	rs AG 07		Rs. 2	0,000-5	0,00	O ME	Ē 03			13 - 15	5 KMs		KΛ	103					Com	pany	МР	03	
31-35 Yrs	AG 04						Abo	ve Rs. 5	0,000) ME	04			Above	2 50 KMs		K٨	104		. ⊢	inano ocal l		200		MP	04	H
		Ed	ucatio	nal Ou	alification										Profession					- 1	oan f			ds	MP		
10th - 12th	`	_	201		BE	\top	CQ 05			Priva	te Com	nany	Fr	nployee		CP 01			\exists	Ľ				-	1	-	
Diploma		_	202		MBBS	\top	CQ 06			_	ernmen					CP 02			1								
Graduate		CC	03		CA		CQ 07			Sales	s Repre	esent	ati	ive		CP 03			1								
Post - Grad	luate	CC	2 04		MBA		CQ 08			Bank	:/Insura	ance	En	nployee		CP 04											
			D		6					Softv	vare En	ginee	ero	or IT/II	eS Emps	CP 05											
				ose o							ic Secto		<u>. </u>			CP 06											
Family Mo			P 26	_	Commute F			P31			er / Agr	ricult	uri	st		CP 07											
Personal N To move a			P 27	_	carry load b go around v			P 32	Н	Stud	ent ractor					CP 08			4								
part of wo			P 28		Specific Pu			P 34			l Trader	r / Shr	on	kooner		CP 09			-								
Commute			P 29	Re	ceived as Gi	ft		P 34			nessmai		υþ	ксерсі		CP 10			\exists								
Residence					· long distar es only	ice/	eisure	P 35		Doct						CP 12			+								
To run Fam	nily Erran	ds	P 30		y other			P 36		Lawy	/er					CP 13											
			Usag	e Road	Туре					Engir	neer					CP 14			1								
Hilly Road	<u> </u>					RT	01			Char	tered A	ccou	nta	ant		CP 15											
Plain Road	d					RT	02				rs (Plea					CP 16			╝.			_					
Kutcha Ro	oad					RT	03						ajo	r reaso	n in decid	ing to ρι	1 [1		7
Highways	Road					RT	04			Ridin	g Comf	ort			SP 01		<u> </u>	oading	caı	rrying	Cap	acity	' S	P 04	┸		
City Road	Conges	ted				RT	05			Stabil	lity				SP 02		lr	nage/	Sta	tus			5	P 05			
City Road	Non - C	onge	sted			RT	06			Safety	у				SP 03		F	ue l Cor	ısuı	mptio	on		5	P 06			
Mixed typ	oe of Roa	ıd				RT	07										 [c	uggest	-64 -	hy Fr	ienda		1	P 07	İ		ī
Have yo	u visit	ed F	Royal	Enfi	eld webs	ite	? Y	es 🗌	1	No _							Н	uggest					+	P 08			+
For Off	ice us	e- o	nly														-	o Cove					_	P 09	İ		
Motor	cycle	Inst	tallat	tion	Form (N	/IIF	No.																				

ROYAL ENFIE	LD			HH (CD 100 / CI	D 100 SS	HH 01	Yama	iha :	SZX	EY.	14	Niı	nja :	250R			BA 16	
Royal Enfield Bu	llet 350	(CI)	RE 01	HH:	Sleek		HH 02	Yama	ha:	SZR	EY	15	Niı	nja (650R			BA 17	
Royal Enfield Bu	llet DLX		RE 02	HH:	Splendor		HH 03	Yama	ha	Z16	EY	16	KT	ΜC	Ouke			BA 18	
Royal Enfield Bu	llet Cam	pus	RE 03	HH:	Street / DL	X	HH 04	Yama	ha	-ZS	EY ·	17	ΤV	rs -	SUZUKI	I / TVS	\Box		
Royal Enfield M	achismo		RE 04	НН	CBZ Drum	/ Disc / ES	HH 05	Yama	ha	azer	EY '	18	TV	'S - 9	Suzuki Ma	x 100	╛	TS 01	
Royal Enfield M	achismo	A350	RE 05	НН	Passion		HH 06	Yama	ha '	/ZF - R15	EY ·	19	TV	'S - S	Suzuki Ma	x 100 R	\exists	TS 02	
Royal Enfield Li	ghtning		RE 06	НН	Ambition 1	25 /135	HH 07	Yama	ha	Enticer	EY:	20	TV	'S - S	Suzuki Sar	murai	\neg	TS 03	
Royal Enfield Lie	ahtnina :	535	RE 07	нн:	Super sple	ndor	HH 08	Yama	ha .	Above 500 cc	EY:	21	TV	'S - S	Suzuki Sho	ogun	\dashv	TS 04	
Roval Enfield El			RE 08	нн:	Splendor P	lus / NXG	HH 09	KINE					_		Suzuki Sha		\neg	TS 05	
Royal Enfield El	ectra 5S		RE 09	НН	Hunk / Ext	reme	HH 10	Kinet	ic K	A 80	KE (01	TV	'S - S	Suzuki Fier	ro / ES	T	TS 06	
Royal Enfield Th	underbii	d (LE	B) RE 10	Hero	gnitor		HH 11	Kinet	ic K	4 100	KE (02	TV	'S S	ort			TS 07	
Royal Enfield Bu	llet 350	JCE	RE 11	Here	o Impulse		HH 12	Kinet	ic C	hallenger	KE (03	TV	'S St	ar City / D	DLX	\neg	TS 08	
Royal Enfield El	ectra UCI		RE 12	Here	CD Dawr	ı / DLX	HH 13	Kineti	ic GF	Laser / 125 / 150	KE (_	TV	'S M	ax 4R		\neg	TS 09	
RE Thunderbird	Twin Spa	ark	RE 13	Hero	Splendor	Pro	HH 14	Kinet	ic A	quila	KE (05	TV	'S Ji	ve		П	TS 10	
Royal Enfield Cl	assis 350		RE 14	Here	Passion F	ro	HH 15	Kinet	ic S	tryker	KE (06	TV	'S FI	ame SR / [DS		TS 11	
Royal Enfield Cl	assis 500		RE 15	Here	Glamour		HH 16	Kinet	ic B	oss	KE (07	TV	S A	pache / RT	TR	T	TS 12	
SUZUKI MOT	ORCYC	LE		Here	Achiever		HH 17	Kinet	ic V	elocity	KE (08	TV	'S Vi	ctor / GLX	(/GS		TS 13	
Suzuki GW 250			SM 01	Hero	CBZ Xtre	me	HH 18	Kinet	ic C	omet	KE ()9	LN	/L					
Suzuki S l ingsho	t		SM 02	Hero	Karizma ,	/ ZMR	HH 19	BAJ	ΑJ						nergy / FX			LM 01	
Suzuki GS 150R			SM 03					Bajaj	M8	0 / Major	BA	01	LN	1L A	dreno / Fኦ	X	_	LM 02	
Suzuki Heat			SM 04	_		IAHA / YM				100 / RTZ	BA	02	_		edom DX / P		bbe.	LM 03	
Suzuki Zeus			SM 05	-	rt Rajdoot		EY 01			Champion	BA	03	LN	1L G	raptor / B	eamer		LM 04	L
Suzuki Above 5			SM 06		rt Ace		EY 02	Bajaj			BA	04							
HONDA MOT		LE		-	ort Yamah		EY 03			er AT & CT	BA	05			NDRA				
Honda Dream Y			HM 01		ort Yamah		EY 04	- ' '		ber / SM	BA	-			dra Stallic			MA 01	L
Honda CB Twist			HM 02		ort Yamah		EY 05	Bajaj			BA	07	Ma	ahin	dra Mach	0		MA 02	
Honda CB Shine			HM 03		aha RX135	5(5S)	EY 06			sar 150 / 180	BA	80							
Honda CBF Stur			HM 04		aha YBX		EY 07	- ' '		ninator	BA	_							L
Honda CB Unice			HM 05	_	aha YD 12	5	EY 08		_	eva CRX 3	BA	_					_		L
Honda CB Unico		er	HM 06	_	aha Crux		EY 09	Bajaj		-	BA	_					_		_
Honda CBR 150			HM 07		aha Libero		EY 10	- ' '		ina 110/ 125	BA	_	_				_		_
Honda CBR 250			80 MH	-	aha Gladia		EY 11			over 100 / 125 / 150	BA	_					\dashv		
Honda Above 5	00 CC		HM 09	Yam	aha YBR 1	10 / 125	EY 12			sar 135	BA	14					ᆜ		_
								ote	rs		_						_		
LML	SC 01		Baja	<u>j</u>	SC 02	Kir	netic	SC 03	<u> </u>	Piaggio		SC 04		He	ro	SC 05	\perp	<u> </u>	
TVS	SC 06		Suzi	ıki	SC 07	Ho	onda	SC 08		Yamaha		SC 09							
							Мо	ped	 S								_		_
Bajaj	MD 01		TV	S	MD 02	Esco	rts	MD 03		Hero Puch		MD 04					Т		
Kinetic	MD 05		Hero M	aiestic	MD 06	Ava	nti	MD 07	t								\top		
								1	_		_			_			+		_
Car (Below 1	000 cc)	CR	01	Car (10	000 to 200	00 cc)	CR 02	Ca	r (A	bove 2000cc)	CR	03	(Oth	ers		0	T 01	\perp
he reason I h	nave bo	oke	d and wi	lling to	wait for	a Royal E	nfield is			I would ra	ite r	ny ex	perie	nce	in this o	count	er a	s-	
TICK THE OP MOST SUITA	TION BLE		Definitely Agree	Agree	Maybe	Disagree	Definitely Disagree			E OPTION UITABLE	Ex	cellen	t Go	od	Could be better	e Not	3000	d Extre Bad	me
Because it is my	dream									nd Capability of people	e.								
Motorcycle since	childhoo			-	1			Test ric											
There is no other 3 This kind of styli		rcycle.		-	+			Comm		ation during waiting									
available on any o Because this is a	ther Moto Royal Enf								f bo	oking and other								士	_
am willing to wa Other Reasons.	IT.				-			Motor	cycle	delivery and									
Other neasons.				1	1			Linioim	auU	PIACII			\perp						

Motorcycle

Yamaha SS 125 Yamaha SZX

HERO HONDA / HERO

HH CD 100 / CD 100 SS

What Motorcycle do you own now?

First Time Two - Wheeler Buyer FB 01 H

ROYAL ENFIELD H

Bajaj Pulsar 200 / 220 Ninja 250R

EY 13

EY 14

BA 15 BA 16

PRE-DELIVERY INSPECTION-Bullet 350 / Bullet 350 / Bullet 350 / Bullet 500 / Classic 350

Model:				Chassis No. :		
Dealer's Name :				Engine No. :		
Location:				Battery Number :		
Colour :				Key Number :		Date of PDI :
Battery Make :				Tyre Number :	Front :	Rear :
Aggregate		Area	Defect Code	Measure	Defect	Remarks
Ch. No./ Engine No.	1	Engine / Motorcycle Number Details	DF	Same/ Different		
Connect Battery / Check Voltage	2	Battery Charging	D / NC /L	12.6 V BATTERY(Static)		
Engine Oil	3	Replace oil & oil filter / Check Oil level (Loose three Drain Bolts)	EO - (Drained Oil Level)	2.5 Litres (Capacity is 2.75 Litres) -Loose 3 Drain Bolts to Drain Oil		
	4	Clean Oil Strainer	-	Clean		
Lock Operation	5	Ignition / Side / Tool Box Lock / Fuel Tank Lock	H/LF/NW	Same		
Petrol	6	Fill Petrol	-	2.5 Litres		
	7	Front Disc Brake / Drum Lever Free Play	SG /RB /Less	4 - 7 mm / (STD Model)		
	8	Caliper Mtg Screws	LF(Hand Loose)	2.7 to 3 .3 Kgm		
	9	Front Wheel Rotation	T/ N	Check One Complete Rotation, Spokes Looseness & Runout		
	10	Front Mudguard Alignment / Cover Tube Rubbing	M / RB/SC	5 mm- Refer SOP		
	11	Front Wheel Nut	LF(Hand Loose)	6.3 0 to 7.7 Kgm		
	12	Front Tyre Condition (Check Tyre Line Seating)	WF	Good		
	13	Front Tyre Pressure	Less	22PSI		
Clutch	14	Clutch Operation	H /J/SY	Smooth		
	15	Clutch Lever Free Play	EP / Less	2 - 3 mm		
	16	Speedo /Odo / Ammeter /Fuel Guage	NW	No Defects		
	17	Accelerator Operation	SY/EP/LESS	Smooth		
	18	Lever Brackets Saddle Position	LF/R	Tight		
Handle Bar Controls & Electrical Switch	19	Steering Movement	T /N	Free		
Operations	20	Handle Bar Positioning	WF/LF/M	W.r.to Dot Punch		
	21	Lock Nut T- Stem	LF/ PO/R	4.5 to 5.5 Kgm		
	22	Electrical Switch Operation	NW / LF	No Defects		
	23	Neutral Lamp	NW / F	No Defects		
	24	Head Lamp Switch Operation	NW / F	When you turn the ignition switch to ON condition Head Lamp should be always ON due to Automatic Headlamp ON feature		
Ford Co. 1	25	' '	Н	Smooth / Main / Res		
Fuel System	26	Fuel Leak	L	No Leak (Tank, TAP, Carb)		
	27	Fuel Tank Alignment vs Seat Alignment	М			
	28	Rear Brake Pedal Free Play	Less / EP	20-30 mm		
	29	Pedal Position w.r.t foot rest	М	Same Level		
Rear Wheel	30	Chain Tension	T / EP	20 -30 mm		
	31	Rear Wheel Rotation	T/N	Check One Complete Rotation, Spokes Looseness & Runout		

Aggregate		Area	Defect Code	Measure	Defect	Remarks
	32	Swing arm mounting bolt	LF (Hand Loose)	6.5 to 7.5 kgm		
	33	Brake Shoe Pin Nut	LF (Hand Loose)	4.1 to 4.6 kgm		
	34	Rear Mudguard Alignment	M, RB	8 mm - Refer SOP		
Rear Wheel	35	Rear Tyre Pressure	Less	32PSI		
	36	Rear Tyre Condition (Check Tyre Line Seating)	WF	Good		
	37	Rear Shocker Mounting Top & Bottom	LF (Hand Loose)	2.5 to 3.3 kgm		
	38	Rear Shockabsorber Operation / Adjustment	H/SG	Smooth		
	39	Mudguards - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	40	Fuel Tank - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	41	Tool Box - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	42	Head Lamp Casing - Paint Related	SC / PD / RB/DN/DU/ PO	No Defects		
Aesthetics	43	Powder Coated Parts (Scratch/ Rust / Chipped OFF)	SC / PO / R / DU	No Defects		
	44	Plated Parts (Scratch / Rusty)	SC/R/ PO/DU	No Defects		
	45	Buffed components poor Buffing & Scrathes	SC/DU/DN/R	No Defects		
	46	Indicators Alignment	М	No Defect		
	47	Stickers / knee pads	M/WF/PO	No Defects		
Others	48	Nuts, bolts, fasteners (Torque)	LF (Hand Loose)	Tight (Right, Left Cover / Engine Foundation / Accessories/Wheel Nut)		
Others	49	Owner's Manual & Tool Kit Content	NA	-		
	50	Spare fuse in fuse carrier	NA	-		
	51	Starting (Kick Start / Self Start)	ST	Easy Start		
	52	Front Brakes Effectiveness / Feel	EP/ N/ SG/T	Sharp		
	53	Rear Brakes Effectiveness / Feel	EP/ N/ SG/T	Sharp		
	54	Pulling	Р	16 meters-Striaght @50		
	_	Motorcycle Vibration	V	kmph Smooth		
		Front Wheel Wobbling	w	Rim Run Out & Face Out Value - 0.8 mm		
Test Ride	57	Rear Wheel Wobbling	w	Rim Run Out & Face Out Value - 0.8 mm		
	58	Center Stand & Side Stand Operation	H/N	Smooth		
	59	Fork Noise	N	No Defects		
	60	Engine Performance / Gear Shifting	N / V / ST / H/SK/L / NW	Smooth		
	61	Any Rattling / Squeaking Noise	N/V/LF	Nil (Silencer / Accessories / Body Parts / Suspension)		
		Cam Noise / Top End Noise	N	Smooth		
Note **	An	y Abnormal / Critical Issues / Noise / Eng	ine Open cas	ses during PDI Inform t	o Plant	Format No :F/14A/CS/0

INSTRUCTIONS

- Check the motorcycle thoroughly for any transit damages or shortage of parts.
 Carry out all jobs listed under Pre-Delivery Inspection Schedule.
 Claim transit loss and damage through 'TRANSIT' insurance only.
 Claim Parts replaced for Manufacturing defects only under warranty.

	Misalignment	Noise	Vibration	Leak	Starting Trouble/Missing	Less	Wobbling	Loose Fitment	Discharing	Tight	Fused	Scratch	Pulling	Dent	Fitment	Hard	Jerking
	М	N	V	L	М	LESS	W	LF	D	Т	F	sc	Р	DN	WF	Н	J
ı	Excess Play	Differer	nt Spongy	Stick	v Not	Smoke A	diustment ^N	lot Paint De	fect Rust	Peel	Off Du	.∎ Den	t Exce	ssive	Rubbing	Not C	harging

ROYAL ENFIELD

MOTORCYCLE INSTALLATION CONFIRMATION BY CUSTOMER
We congratulate you on becoming a proud owner of Royal Enfield motorcycle. We request you to give this feedback after completion of the delivery process.

		YES	NO
1	Motorcycle Documents explained (Invoice, Insurance, RC / Road Tax Receipt)		
2	Owner's Manual received		
3	Recommended Lubricants explained		
4	Maintenance Schedule sheet in Owner's Manual shown and explained		
5	Next Free Service due explained		
6	All Free / Paid Services explained		
7	Warranty Guidelines explained		
8	"Running in Period" details shown in the manual explained		
9	Service Center Address given and Location explained		
10	Service Incharge Name & Mobile No given		
11	Motorcycle delivered in neat and clean condition		
12	Tools & First Aid Kit received and explained		

		YES	NO
13	Control Switches & Disc Brake System usage explained		
14	Fuse Box location shown and explained		
15	Recommended Tyre Pressure explained		
16	Motorcycle starting & Gear shifting procedure explained		
17	Quantity of Fuel in Fuel Tank informed		
18	Motorcycle orientation & short distance drive provided		
19	Date and Time of Installation		
20	Name of Person who did Installation		
Sug	gestions If Any:		
	C	USTOM	IER
	S	IGNATU	JRE
Mod	del: Registration No.:		
Cha	ssis No.:		
	thank you and request you to return this filled up form to the person torcycle installation for you	who di	d the
	oroyoro motanation for you	KEEP	RIDING



Part No. 1040629/A

ROYALENFIELD.COM