ROYAL OWNER'S MANUAL





FOREWORD

The Royal Enfield Continental GT is our lightest, fastest, and most powerful motorcycle in production. It's a machine with a story, a nod to motorcycling's finest hour, the best expression yet of a cultural phenomenon that has simply refused to fade away - the cafe racer.

And now you have one of your own. Congratulations!

Your meticulously re-engineered Continental GT debuts a twin downtube cradle frame chassis developed by the renowned Harris Performance from UK. A new engine displaces 535cc and dollops of torque, when you need it. With gas-charged rear shockabsorbers from Paoli and Brembo disc brakes, you stay in charge. With an aerodynamic seating position, Pirelli Sports Demon tyres and a remapped ECU, the new Continental GT is part homage, part engineering tour-de-force.

This manual will help you to operate your motorcycle and guide you to wholly maintain it. We have also provided tips on safe riding and on minor adjustments for the care of your motorcycle. Please avail all the four free & five paid services at the nearest Authorised Service Center at the appropriate time to maintain your motorcycle in top riding condition. We request you to carefully read the terms and conditions of warranty and other useful information given in this manual before starting to use your Continental GT. Log on to the exciting world of Royal Enfield on www.royalenfield.com to get to know more about the company, its products and news from time to time.

Welcome to the world of the Bikers, and enjoy your burn-ups atop this spectacular machine.

NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

"© Copyright 2018 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

NOTE: BS IV
This motorcycle meets Emission Norms
Bharat (Trem) Stage - IV

Contact Us:

Royal Enfield Support: 1800-2100-007 Email: support@royalenfield.com Twitter: @RoyalEnfieldSupport Web: www.royalenfield.com

Disclaimer

- This model fitted with "tubeless tyre" is provided with an inner tube.
- Failure to use an inner tube in a spoked wheel will cause deflation of the tyre resulting in loss of motorcycle control.
- The approved tyres marked with "TUBELESS" are suitable for use with inner tube.

Part No. 1040818/A / Qty.1,000 / Jan. '18

CONTENTS

Personal and Motorcycle Information	4	Long Trip Precautions	45
Technical Specifications	5	Washing Procedure	46
Recommended Lubricants	8	Storage Precautions	47
Safety Definitions	9	Trouble Shooting	48
Motorcycle Identification Numbers	10	Warranty Terms & Conditions	49
Location of Key Parts	11	Emission Warranty	51
Operation of Controls	14	EVAP	54
Pre-Operational Checks	22	Service Coupons	56
Safe & Happy Riding	23	Paid Service & Maintenance Record	75
Running in Period	24	Regional & Area Offices	77
Starting	25	Authorised Dealer Address	78
Gear Shifting, Riding & Stopping	26	Notes	104
Parking	27	Annexures	
Periodical Maintenance Chart	28	Motorcycle Installation Form	
Tools & First Aid kit	31	Pre-Delivery Inspection Report	
Minor Maintenance Tips	32	Motorcycle Installation Confirmation By	Customer
		2	

PERSONAL & MOTORCYCLE INFORMATION

Name																											
Door No./Street																											
Locality																											
City												St	ate	,					Pi	n							
Contact Nos.				Off: Mobile:						Email :																	
Engine No.																		Battery No.									
Frame No.																		Battery make									
Reg. No.																		Licence No.									
Date of Sale																		Valid till dt.									
Model																		Key No. :									
Tyre make							Colour																				
Sold by																		Dealer Code						_			
Motorgado Inst	~11	atio	an '	Eor.	m (N/III	וא רב			Т	Т	Т	Т	П			Π										

TECHNICAL SPECIFICATIONS

ENGINE		IGNITION SYSTEM	
Engine Type	Single Cylinder 4 Stroke, Spark Ignition, Air cooled, Fuel Injection 87mm 90mm	Ignition system Spark plug Electrode gap Spark plug	· ·
Swept volume Compression ratio.	535cc 8.5:1	TRANSMISSION	
Max Power	29.1 bhp @ 5100 rpm 44 Nm @ 4000 rpm 1250+50 RPM Kick Start / E-Start Paper element Wet sump, Forced lubrication 2.75 litres (First Fill only) 2.30 to 2.50 litres (subsequent refills)	Clutch	1 st 3.06:1 2 nd 2.01:1 3 rd 1.52:1 4 th 1.21:1
Engine oil grade	Royal Enfield 15W50 API SL Grade & above, (JASOMA2)	Final drive	5 th 1:1 18 Teeth (Sprocket)
Fuel Supply Cooling	Electronic Fuel Injection Natural air flow	Final Ratio Drive Chain links	

TECHNICAL SPECIFICATIONS

CHASSIS	
Frame	Twin downtube cradle frame
Suspension	
Front	Telescopic, hydraulic damping, Stroke 110 mm travel (Dia 41 mm)
Rear	Swing arm with gas filled shockabsorbers, Stroke 80mm
Brakes	
Front Disc	Brembo 300mm floating disc,
	Brembo 2-piston floating caliper
Rear	240mm dia disc, Single piston floating caliper
Tyre size	
Front	100/90-18, 56H Pirelli Sport Demon
Rear	130/70-18, 63H Pirelli Sport Demon

The Imported Pirelli Tyres which are fitted in this motorcycle meet the requirements of BIS and that they comply with the requirements under the Central Motor Vehicles Rules (CMVR), 1989, would suffice;

Tyre Pressure	
Solo	
Front	20 psi/1.41 kg/cm ²
Rear	30 psi/2.11 kg/cm ²
With Pillion	
Front	22 psi/1.55 kg/cm ²
Rear	32 psi/2.25 kg/cm ²
Steering Lock	Combination Lock
Fuel tank capacity.	13.5 litres approx. *
Low fuel warning	3 litres (approx)

* The above values are approximate and the actual fuel filling capacity will vary from the values mentioned.

ELECTRICALS

Generation	Alternator
System : E-Start	12V - DC (III Phase)
Battery: E-Start	12V - 14 Ah MF (III Phase)
Head lamp	12V, H4 - 60/55 W (Halogen)

TECHNICAL SPECIFICATIONS

Brake/Tail lamp 12V, P21/5W Hi beam indicator . 12V, 0.2W (L.E.D.) Neutral lamp tell tale 12V, 1.12W Turn signal 12V, R10W

Instrument Cluster. Digital instrument cluster with LCD Horn 12V, 2.5 Amp (Max.) X 2 Nos.

Starter Motor...... 12V, 0.90 KW

WARNING

Using bulbs / other electrical gadgets other than specified rating may lead to over loading/erratic behaviour/premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

DIMENSIONS

Length 2060 mm Width 760 mm (without Mirrors) Height 1070 mm (without Mirrors) Wheel base 1360 mm Ground clearance...... 140 mm

WEIGHTS

Kerb weight (90% fuel&oil) 192 Kgs. Max. Pay load 173 Kgs.

Saddle Height 800 mm

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.

RECOMMENDED LUBRICANTS

Engine Oil											
Grade	Royal Enfield 15 W 50 API SL Engine Oil (JASOMA2)										
Capacity	2.75 Ltrs. (First Fill only) 2.30 to 2.50 Ltrs. (during oil & filter element replacement in periodical maintenance)										

Fro	ont Fork Oil	Fluid					
	Fork Oil (or Gabriel Fork Oil			DOT 3 or DOT 4			
	2w 35)	Ш	Capacity	Fr 60 ml			
Capacity	430 ml/leg		capacity	Rr. 100 ml			

DO NOT Mix DOT 3 & DOT 4 brake fluid together.

CAUTION

Use of Wrong grade oil will reduce the life of the moving parts and seriously affect performance

NOTE

Recommendation subject to change without notice.

ISO 14001 Operation Control Process

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

SAFETY DEFINITIONS

The information given under the titles: Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



WARNING

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

CAUTION

This message if disregarded may result in damage to the motorcycle.

NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.




ENGINE NUMBER

Punched on crankcase left top side.



LOCATION OF KEY PARTS

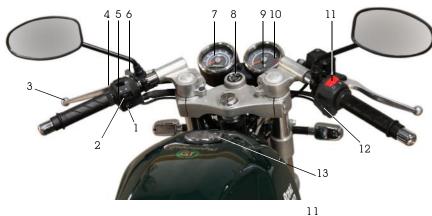

- 1. Horn Button
- 2. Turn Signal Switch
- 3. Clutch Lever
- 4. Day Flash Switch
- 5. Head Lamp Dip Switch
- 6. Manual Bistarter / Choke
- 7. Speedometer
- 8. Ignition Switch
- 9. Malfunction Indicator Lamp
- 10. r/min. (Tacho) Meter
- 11. Engine Kill switch
- 12. Electric Start Switch
- 13. Fuel Tank Cap

LOCATION OF KEY PARTS



- 1. Right Trafficator Rear
- 2. Right Trafficator Front
- 3. Horn
- 4. Starter Motor
- 5. Kick Start Lever
- 6. Canister
- 7. Brake Pedal
- 8. Right Side Panel

LOCATION OF KEY PARTS



- 1. Left Trafficator Front
- 2. Left Side Panel / Battery Cover
- 3. Left Trafficator Rear
- 4. Side Stand
- 5. Center Stand
- 6. Gear Change Pedal
- 7. Spark Plug

STEERING LOCK

- Turn the handle bar to extreme left or
- right position.

 Push the key inside in "OFF" position, press and further turn to anticlockwise direction to lock the steering system.
- Push the key in steering lock Position, and turn clockwise direction to unlock the steering.

FUEL TANK CAP

- Turn key clockwise to open.
- Press cap to lock with key in position.

CAUTION

Please ensure fuel is filled till fuel tank mouth (A), Failure to do so will lead to canister damage.



SIDE PANEL LEFT / BATTERY COVER

- Turn key clockwise to unlock the side panel.
- Pull the side panel outside for opening the same.



SIDE PANEL RIGHT

Unscrew the indicated screw and then pull the side panel for opening the same.



IGNITION SWITCH

Ø OFF

ON




NOTE

- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key for fuel tank and tool boxes can be removed from the lock only in locked position.
- Turn handle bar to extreme left, before attempting to lock steering.

CAUTION


Turn off ignition switch when engine is not in running condition. Failure to do so will discharge the battery due to continuous headlamp ON.

ENGINE STOP SWITCH





E-START SWITCH



HORN

Press

DIMMER SWITCH

High beam Low beam







DAY FLASH

Press for Head Light Flash.

TURN SIGNAL SWITCH

← Left turn signal ON

OFF (Push to off)

Right turn signal ON

MANUAL BI STARTER (CHOKE)

Apply choke in cold start condition while starting the Motorcycle.







CAUTION

■ Choke should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

UTILITY BOX

- Utility box is provided at the bottom area of battery carrier.
- It is covered with side panel left.



ALPHA-NUMERIC DISPLAY UNIT



This unit in the speedometer consists of

- 1. Odometer
- 2. Trip A
- 3. Trip B
- 4. Fuel level indicator

ODOMETER MODE



Odometer mode is the initial display mode of this unit. It displays odometer reading by default.

NOTE

Once you turn "ON" the ignition key, whatever was the last selection mode will get displayed.



TRIP METER MODE

A light push for less than one second on the "PUSH" button switch will change the display from odometer to Trip meter (TRIP A).

Again another press on the "PUSH" button switch will change the display from "TRIP A to "TRIP B".

NOTE

For resetting the Trip Meter

- 1. Set the display as TRIP A or B as a current mode.
- 2. Press the "PUSH" button for more than 3 Seconds.
- 3. Automatically the display will become zero.

WARNING

Do not attempt to change any setting while riding the motorcycle. It may cause loss of control leading to an accident.



FUEL LEVEL INDICATOR
The fuel level indicator
indicates the level of fuel in the
fuel tank.

The display bars of the fuel meter disappears towards the Empty (E) when the fuel level decreases.

When last bar start blinking (less than 3 litres), refuel the motorcycle at the earliest.

NOTE

If the last bar of the fuel meter is blinking continuously after fueling, visit a Royal Enfield Authorised Dealer / Service Center and check the same.

BATTERY LOW VOLTAGE INDICATOR



Battery low voltage indicator

If the battery voltage is less than 12 volts, the low voltage indicator will start glowing continuously.

While the ignition is "ON", low voltage indicator symbol will glow until engine reaches 700 RPM.

In running condition if the battery voltage is below 12 Volts for more than 3 seconds continuously, the low voltage indicator will start glowing.

PRE OPERATIONAL CHECKS

A careful check of the following must be carried out every time before riding and specially after long periods of storage to determine if any additional maintenance is necessary.

- 1. Adequate fuel in the tank.
- 2. Tyres for correct pressure, abrasions or cuts.
- 3. Rear chain for proper tension and sufficient lubrication.
- Brakes, steering and throttle for proper responsiveness.
- 5. Cable for fraying or crimping and free operation.
- 6. Engine oil level.

- Wheel spokes for proper tightness and no breakage.
- 8. Headlamp, tail lamp, brake lamp and indicator lamps for proper functioning.



WARNING

For your personal welfare and safety, all the points mentioned above should be performed periodically. Failure to do so may affect safe operation, damage your motorcycle and could result in an accident causing serious injury.

SAFE & HAPPY RIDING

RIDING DRESS

- A proper riding apparel
- Proper Riding Boots
- Soft Leather Gloves
- Goggles or spectacles
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

NOTE

A light coloured shirt enables greater visibility to other road users especially during nights.

CAUTION

Loose clothing may get caught on moving parts of the motorcycle.

SITTING POSTURE

Correct sitting posture is a must for stable and safe riding

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.

MARNING

Applying any one of the brakes suddenly may cause the motorcycle to skid.

RUNNING IN PERIOD

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

- During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
- 2. Do not exceed maximum specified pay load.
- Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
- Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
- 5. Avoid sudden accelerations and racing starts.
- 6. Avoid prolonged full-throttle operation. Vary speed occasionally.

Motorcycle Gear Speed	First 500 kms	501 - 2000 kms
1	15 KMPH	20 KMPH
2	25 KMPH	30 КМРН
3	30 KMPH	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	70 KMPH

STARTING

Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.




CAUTION

Never accelerate the engine immediately after a cold start. The engine should be allowed to run slowly for 15 to 30 seconds. This will allow the engine to warm up and let oil reach all surfaces needing lubrication. Failure to adhere in damage to the engine.

NOTE

It is mandatory, necessary to depress and hold the Manual Bi-starter for a minimum of one minute when starting the engine for the first time in cold morning, every time when the temperatures are below 10 deg C, and at higher altitudes to keep the engine idling RPM steady.



 Warm up engine for 2 minutes -until idling is consistent.





USING THE KICK START LEVER

- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. (It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

USING ELECTRIC START

 Depress and Hold the Clutch Lever.



GEAR SHIFTING, RIDING & STOPPING

Press Starter Button and hold till Engine starts. Do not release the button before Engine starts.



 Warm up engine for 2 minutes - till idling is consistent/stable



- Press clutch lever towards the hand grip.
- Press gear pedal with toe towards down to engage 1st gear.
- Gently open throttle and release clutch simultaneously. If clutch is released suddenly, the engine may stall and cause a jerky start.

CAUTION

The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch may cause a jerky start OR stalling the engine besides causing damage to transmission parts.

- Press the gear pedal upwards with toe to engage 2nd and gear.
- Follow the same procedure for 3rd, 4th and 5th gear.



NOTE

Always start motorcycle with gear in neutral position. Always move the motorcycle in first gear position only. When engine speed decreases or while climbing a gradient or running at a reduced speed, shift to the appropriate lower gear to prevent the engine from stalling or straining to pull.

PARKING

PARKING MOTORCYCLE ON CENTER STAND

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, such that, both the legs of the stand are resting on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backward.



PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.



CAUTION

When Side stand is in extended position.

- Engine will start if vehicle is in neutral, but will cutoff (ignition and fuel) when gear is engaged.
- b) Engine will not start if gear is engaged already.

NWARNING

Ensure both the stands are retracted fully before riding the motorcycle.

Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.

PERIODICAL MAINTENANCE

The maintenance schedule detailed here will help you maintain your Continental GT Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the Kms at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

S1. No.	DESCRIPTION		EE S heve:		CE arlier	PAID SERVICE							
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30	
	Months	1.5	3	6	9	12	15	18	21	24	27	30	
١,	For extra a CAI	R	I	R	I	R	I	R	I	R	I	R	
1	Engine Oil	Check level at every 1000 Kms or earlier as required											
2	Engine oil filter element	R		R		R		R		R		R	
3	Engine sump filter (oil strainer) Magnetic drain plug under gear box and secondary drain plug under cranksharft in crankcase right	С		С		С		О		С		О	
4	Spark plug	C&A	C&A	C&A	C&A	R	C&A	C&A	R	C&A	C&A	R	
5	HT lead for crack	I	I	I	I	I	I	I	I	I	I	I	
6	Fuel hose & clip / Injector 'O' Ring / Seal Ring			I	I	R	I	I	I	R	I	I	
7	Fuel Pump (under tank) mounting	Check for screw tightness in all services											
8	Accelerator & Throttle pulley cables free play			Α	Α	Α	Α	Α	Α	Α	Α	Α	

PERIODICAL MAINTENANCE

S1. No.	DESCRIPTION		FREE SERVICE whichever is earlier PAID SERVICE									
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30
	Months	1.5	3	6	9	12	15	18	21	24	27	30
9	Rubber hose, Air filter to Throttle body	I	I	I	I	R	I	I	I	R	I	I
10	Rubber hose, Inlet manifold / Adaptor	I	I	I	I	R	I	I	I	R	I	I
11	Evaporative Emission Equipment rubber hoses	I	I	I	I	R	I	I	I	R	I	I
12	Air filter paper element	О	O	U	О	R	U	С	С	R	U	С
13	Inlet / Exhaust valve seating (compression/vaccum test)							I				I
14	Cylinder head (Combustion chamber)											D
15	Clutch cable lever free play	Adjust every 1000 Kms or earlier as required										
16	Rear brake pedal & Gear change pedal pivot	L	L	L	L	L	L	L	L	L	L	L
17	Battery terminals (apply petroleum jelly)	C	О	U	C	O	U	С	С	O	U	С
18	Battery Electrolyte level	I	I	I	I	I	I	I	I	I	I	I
19	Earth wire eyelet contact (below ECU Mounting)					I						I
00	Daniel Maria and Division Charles	Lubi	icate	& Ac	ljust e	every	1000	Kms	/ Cled	ın, Lı	ıbric	ate &
20	Rear Wheel Drive Chain		Adju	st eve	ery 30	00 Kr	ns or	earli	er as	requ	ired	
21	Front Fork oil / leak	I	I	Ī	R	I	I	I	R	I	I	I
	Steering ball races play	I	Α	Ĺ	Α	L	Α	L	Α	R	Α	L
23	Spokes tightness / Wheel rim run out front & rear	I		I		I		I		I	_	I

PERIODICAL MAINTENANCE

S1. No.	DESCRIPTION		EE S :heve				I	PAID	SER	VICE	:	
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30
	Months	1.5	3	6	9	12	15	18	21	24	27	30
24	Rear wheel cush rubbers					I&R				I&R		
25	Tyre wear pattern front & rear	I	I	I	I	I	I	I	I	I	I	I
26	Hand levers & Kick starter pivot		Lubricate every 1000 Kms or earlier as required						Ĺ			
27	Disc Brake Oil level check	I	I	I	I	I	R	I	Ι	I	I	R
28	Pivot - Side Stand, Center Stand	L	L	L	L	L	L	L	L	L	L	L
29	Rider & Pillion Foot rest pivot	L	L	L	L	L	L	L	L	L	L	L
30	Swing arm needle bearings and spindle					L				L		
31	Vent Pipe under air filter box		I&C	I&C	I&C	I&C	I&C	I&C	I&C	I&C	I&C	I&C
32	Throttle body - cleaning spray*		Carbo Cleaner / Carb Click or Fuel Line Cleaner Spray Every 6000 Kms or 6 Months whichever earlier									
33	PAV pipes & hose clip	I	I	I	I	I	I	I	I	R	I	I
34			I	I	I	I	I	I	I	I	I	R
35	35 Fuel filter in fuel pump						R					R
	Adjust C: Clean D: De-carbonise	I : I	nspe	ct		L : L	ubrio	cate		R :	Rep	lace
NO.	E											

For Maintenance after 30,000 Kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.



S.No.	Description	Qty.
1.	Tool Bag	1
2.	Screw Driver O6 X 160	1
3.	Tommy Bar	1
4.	Box Spanner 21 X 24	1
5.	Double End Spanner 14 X 15	1
6.	Double End Spanner 10 X 13	2
7.	Double End Spanner 8 X 10	1
8.	Allen Key 5 MM	1
9.	Allen Key 3 MM	1
10.	Tyre Removal Lever	2

A first aid kit is provided with the motorcyle for any emergency requirements. $\,$



S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

^{*} Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer / Service Center.

CONTROL CABLES

Lubricate after water washing motorcycle or if used during rainy conditions.

HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply α few drops of oil on the pivots.

CENTER / SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.





DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.
- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil


CAUTION

Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.

SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.80 to 0.90 mm.



■ Refit the spark plug on the cylinder head.

BRAKE FLUID





FRONT BRAKE

REAR BRAKI

Check if oil is below 'MIN' level. To top Up, remove cover and diaphragm, then top up with DOT 3 or DOT 4 as specified.

CAUTION

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure that brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.

Don't mix DOT 3 & DOT 4 Brake fluid together.

INSPECTION OF TYRES AND WHEELS

 Inspect the tyres periodically for tread wear, cracks and cuts.

Minimum tread depth :					
Front tyre : 1mm	Rear tyre : 2 mm				

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

	Front	Rear			
Solo	1.41 kg/cm ² (20 PSI)	2.11 kg/cm ² (30 PSI)			
With Pillion	1.55 kg/cm² (22 PSI)	2.25 kg/cm ² (32 PSI)			

FRONT WHEEL REMOVAL

- Place the motorcycle on center stand.
- Place a wooden block the front end of engine to support the motorcycle.



 Loosen the pinch bolt on the right fork guide by 6 mm allen key.



- Hold the axle head by double end spanner while loosening the axle
- Remove the axle nut along with washer.
- Tap and remove the front wheel spindle.
- Tilt the motorcycle to right side and take out the wheel along with wheel speed sensor and left side spacer.







CAUTION

Do not press the front brake lever when wheel is removed as this will result in the brake pads coming too far out of the brake caliper.

Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid pads activation in the event the front brake lever is accidently pressed.

FRONT WHEEL REASSEMBLY

- Remove the wooden piece / card board sheet placed between the brake pads.
- Place the wheel speed sensor in position.



 Ensure slot on hub and speedo sensor is matched correctly.

- Insert the wheel along with wheel speed sensor and left spacer between the front fork ends ensuring the brake disc is located between the brake pads.
- Insert and tap the front wheel axle gently inside.
- Refit the washer and tighten the nut firmly.
- Tighten the pinch bolt on the right fork guide.
- Rotate the wheel and check for smooth rotation.
- Ensure wheel speed sensor wire coupler is being connected to cluster unit and then check for proper working of speedo meter.
- Press brake lever 2 or 3 times to check front brake efficiency.







REAR WHEEL REMOVAL

- Place the motorcycle on center stand on a firm and flat surface.
- Observe and mark the alignment index marks in the both sides of swing arm.
- Remove axle nut on the right side.
- Remove wheel spindle from left side along with wheel collar and left side spacer.
- Remove the caliper assembly by pulling out from the swing arm slot.
- Remove the distance collar.
- Tilt the motorcycle towards right side and take out the rear wheel assembly conveniently.









CAUTION

Do not press the rear brake pedal when wheel is removed as this will result in the brake pads coming too far out of the brake caliper.

Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid pads activation in the event the rear brake pedal is accidently pressed.

REAR WHEEL REASSEMBLY

- Ensure the four Cush rubbers are in position inside the rear wheel hub.
- Tilt motorcycle to right and insert wheel assembly between the swing arms.
- Position the rear wheel with cush rubber on the rear driven flange / adaptor.
- Fix the left side spacer in rear wheel hub.
- Remove the wooden piece / card board sheet placed between the brake pads.







Insert the caliper assembly by pushing in the projection given inside the swing arm. Ensure the brake disc is located in between the brake pads.



- Align the caliper bracket, wheel and swing arm holes in-line and ensure distance collar is placed in hub dust seal.
- Insert and tap the rear wheel axle gently.

CAUTION

Do not force the spindle into the wheel as the threads may get damaged. Tap it through the wheel gently.

Ensure the index marks alignments on both sides of the swing arm are in same position for proper wheel alignment.



- Tighten the axle nut firmly.
- Ensure that swing arm end plate is seated properly and the chain adjuster nuts are correctly tight-ened and Locked.



! WARNING

Ensure the motorcycle do not come out of center stand while dismantling and assembling the wheel assembly.

ADJUSTMENTS - CLUTCH LEVER FREE PLAY

Clutch Lever (free play 2 - 3 mm)

- Loosen the cable outer lock nut (A).
- Turn the Nut (B) Clockwise to reduce the play or Anticlockwise to increase the free play.
- Check free play 2 to 3 mm at Clutch lever pivot on handle bar end.
- Tighten lock nut (A) after adjustment is done.



DRIVE CHAIN TENSION (Free Play 20-25mm)

- Place motor-cycle on its center stand on a firm & flat surface.
- Shift the gear into the neutral position
- Measure the drive chain free play as shown. The drive chain free play is 20 to 25 mm



- 1. If the drive chain free play is incorrect adjust as
- a. Loosen the axle nut of the rear wheel axle.
- b. Loosen the QD sprocket spindle nut.
- c. Loosen the locknut at both end of the swing arm.
- d. To reduce the free play, turn the drive chain slack adjusting nut in clockwise direction.





- To increase the free play, turn the drive chain slack adjusting nut in anticlockwise direction and push the rear wheel forward.
- f. Later adjust the nut on left side by matching the index mark with respect to right side index.
- g. Ensure that both the sides are in same index marks.
- Finally torque the spindle and axle nuts to 7 kgm.
- Tighten the adjuster locknut by 13mm spanner against chain slack adjusting nut.

! WARNING

Chain slackness beyond 30mm will lead to chain

Maintain drive chain slackness within the specified limits at every 1000 kms interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.

BATTERY & MAINTENANCE

- The Motorcycle is provided with 12V
 14 AH battery.
- The battery must be periodically checked for
 - Cleanliness and corrosion free terminals.
 - Electrolyte level.
 - If electrolyte level is low, top up with distilled water only.

NOTE

The poor contact or loose fitment of Battery terminals may cause ECU failure.

REMOVAL OF BATTERY FROM THE MOTORCYCLE

 Unlock (turn the key clockwise) and remove the Left side panel.



- Disconnect both the terminal wires (negative first and positive next respectively).
- Remove the battery carrier bracket by loosening the two screws.
- Take out the battery.





WARNING

Always disconnect the negative (-) battery cable first and then the Red positive (+) cable while removing the battery connections.

NOTE

For checking the battery voltage and electrolyte specific gravity, contact Royal Enfield Authorised Dealer / Service Center or battery service center.

CAUTION

- Do not use battery with low electrolyte level as the battery internal cells will get damaged.
- Do not overfill the battery electrolyte level as it will spill out through the overflow pipe and cause corrosion to motorcycle parts.
- Use only distilled water meant for use in batteries to avoid damage to battery.

REASSEMBLY OF BATTERY ON MOTORCYCLE

- Position the battery in the battery carrier such that negative terminal of the battery is towards the fuel pump side.
- Ensure ignition switch is in "OFF" condition.



- Connect the positive terminal (Red wire) first
- Connect the negative terminal (Black wire) next.
- Smear the terminals with petroleum jelly. (Do not use grease in the battery terminals).
- Place the terminal boot / cap properly.
- Refit the carrier bracket.
- Refit left side panel & lock it.

NOTE

Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.

CAUTION

Keep the +ve and -ve cables firmly conneted to the respective battery terminals. Failure to do so may result in damage to the motorcycle electrical system.

CHANGING ELECTRICAL COMPONENTS

HEADLAMP BULB REPLACEMENT

- Loosen the rim holding screw on top and take out the head lamp dome.
- Disconnect electrical connections.





- Thumb push and remove the bulb holding clamp gently.
- Remove the bulb.





- Position new bulb inside the reflector such that the three projections on the bulb align with the slot on the reflector.
- Refix the bulb holding clamp.
- Connect the Electrical connections.
- Position head lamp doom onto the head lamp shell and tighten the mounting screw on top.





NOTE

Never touch the bulb with your fingers. Finger prints will etch the glass and decrease bulb life.

Always hold the bulb with paper or clean dry cloth during handling as shown in fig.



TAIL LAMP BULB

■ Unlock the battery cover.




■ Remove the seat assembly by pulling seat lock cable.



■ Remove the tail light glass by unscrewing its mounting screw.



■ Hold the bulb, press inside and rotate anticlockwise to remove the tail light bulb from its holder.







Assemble back the tail light in the reverse order of dismantling process.

TRAFFICATOR BULB REPLACEMENT

Remove the screw from the trafficator housing back side.



■ Refit the holder fitting its lock in proper position.



- Open the Indicator housing.
- Take out the bulb holder with help of is screw driver.
- Take out the bulb and replace the same.




■ Fix the rubber gasket cover.



Assemble back the indicator housing cover.



FUSE & CARRIER

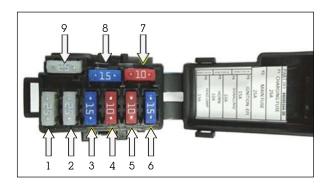

MARNING

Electronic Control Unit (ECU) may fail due to loose electrical connections, loose battery terminals etc. Hence, it is very important to keep all the Electrical connections intact.

MINI BLADE FUSE USAGE LIST

Fuse ID Number	Colour	Rating	Remarks
1	White	25 A	Charging Fuse
2	White	25 A	Main Fuse
3	Blue	15 A	Ignition Fuse-EFI
4	Red	10 A	Signalling Fuse
5	Red	10 A	Horn Fuse
6	Blue	15 A	Lighting Fuse (Head Lamp)
7	Red	10 A	Spare Fuse
8	Blue	15 A	Spare Fuse
9	White	25 A	Spare Fuse

WARNING

Please get the electrical system of your Motorcycle checked thoroughly and get the faults corrected immediately after experiencing any fuse failure. Not doing this can result in to repeated fuse failures.

Usage of fuses other than specified rating will damage the complete electrical system.

AIR FILTER PAPER ELEMENT

CLEAN AND REFIX: EVERY 3000 KMS

Remove the screw from the side cover bottom side and then take out right side cover.





Remove the air filter cover screws and then takeout air filter box cover.



Takeout air filter paper element and check for dirt. Gently tap it as shown in fig and fix it back.



NOTE

It is adviceable to replace air filter paper element once in 10,000 KMS. In case of motorcycle running in dusty / mud road condition it may be replaced as earlier as required.

Usage of high pressure compressed air is not recommended to clean air filter paper element.

Fitment of air filter paper element is reverse order of removal process.

LONG TRIP PRECAUTIONS

Checks prior to the commencement of long journey

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

Checks after every 1500 kms of run

- Any loose fasteners.
- Condition of the tyres.
- Electrolyte level in the battery..
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

Items to be carried

- Tool kit
- First aid kit.
- Bulbs for Headlight, Trafficator light and mini Blade Fuses (10 & 15 Amps).
- Accelerator and Clutch cable.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- Spare tubes

WASHING PROCEDURE

PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Do not remove right side cover (panel) while washing to avoid water entry into air filter box assembly.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, Meter/cluster unit, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, EFI components, spark plug, battery air filter cover etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.

- Use luke warm water and mild detergent on the painted components to remove dirt, etc.
- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.

AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivots for footrest, side stand, center stand, brake and gear shifter linkages, rear chain etc. with lube oil.
- Polish the painted and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake pads.

STORAGE PRECAUTIONS

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank and fuel line.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.

- Maintain electrolyte level between "max" or "min" mark, by adding distilled water and wipe the battery dry.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re-use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer/Service Center to rectify the problem and to ensure trouble free performance.

Symptom	Observations	Check for / Remedy
	1. Ignition/Engine stop switch is in 'OFF' position	Switch 'ON' Ignition / Engine stop switch
	2. Very low / No fuel in the fuel tank.	Check Fuel level / fuel meter and fill fuel
	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
Engine Does	4. Electricals not working	Battery completely dead. Replace battery Evise Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.
not start	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect. Check if gear is engaged and the sidestand is down. If the ambient Temperature is low use Bistarter.
	6. MIL glowing continuously	Contact Authorised Service Center
Engine Starts BUT shuts off	1. Engine shuts off as soon as throttle is closed.	Idling RPM set too low / setting disturbed. Contact Authorised Service Center for resetting the Idling RPM.
immediately	2. Engine Starts but Shuts of immediately	Checkif the MIL Lamp is glowing; If yes, Contact Authorised Service Center.
Engine Misfires & Runs	Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down.
Erratically/Stops	2. Engine misfires and runs erratically	Checkif the MIL Lamp is glowing; If yes, Contact Authorised Service Center.
	1. Engine RPM raises improportionately to motorcycle speed	Clutch is Slipping. Check for sticky clutch/ clutch not having
Poor Pickup	Rear Chain excessively loose causing chain to slip on Sprocket.	any free pláy. Adjust Rear chain to correct tension.
	3. Poor pickup	Checkif the MIL Lamp is glowing; If yes, Contact Authorised Service Center.

WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

- 1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 2 years / 30,000 kms from the date of sale, whichever is earlier.
- 2. In order to avail warranty benefits by second or subsequent owner, the second/subsequent owner should inform the nearest Royal Enfield Service Center about the purchase of the bike and shall fill in the requisite details in the form as requested by Royal Enfield.
- 3. The warranty shall be applicable only if all the 4 free services & 5 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
- 4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
- 5. Cost of oil, oil filter and fuel are chargeable to the customer.
- 6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
- 7. Warranty shall not apply to:
 - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.

WARRANTY TERMS & CONDITIONS

- (b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
- (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
- (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
- (e) Parts damaged due to accidents, collision, abuse etc.
- (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, blue discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.
- (g) Defects arising from fitment of unauthorised or additional electrical loads.
- (h) Motorcycle serviced or repaired at unauthorised service centers.
- (i) Motorcycle used for competitions / racing / Stage Rallying etc.
- (j) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
- (k) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
- (1) Oxidization of buffed/painted/powder coated items etc.
- 8. RE reserves the right to finally decide on all warranty claims.
- 9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

EMISSION WARRANTY

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warranty that if on examination by its Authorised Dealer / Service Center, the motorcycle fail to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Entield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the partly is/are not established, Royal Entield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs. Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

EMISSION WARRANTY

Royal Enfield will not be responsible for any penalties that may be charged by statuatory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Motorcycles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- A valid "Pollution under control" certificate is not produced.
- The motorcycle is not serviced by RE Authorised Dealer/Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

EMISSION WARRANTY

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through and authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

The following warranty applies to the evaporative emission control system.

Royal Enfield Motors warrants the first owner and each subsequent owner, that this motorcycle is designed and built so as to conform, at the time of sale, with applicable regulations specified by the evaporative emission control system related parts fitted to this motorcycle are free from defects in materials and workmanship which may cause this motorcycle not to meet applicable regulations period of 24 Months from the date of first use of the motorcycle.

The Warranty period shall begin either on the date the motorcycle is delivered to the first retail purchaser OR from the first date the motorcycle is used as a demonstrator OR as a display and/or trial motorcycle.

THE FOLLOWING ARE NOT COVERED BY THE EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY:

- 1. Failures which may arise as a result of misuse, alterations, accidents OR non performance of routine maintenance, as specified in the Owner's Manual.
- 2. Replacing OR removing OR modifying any portion of the EVAPORATIVE EMISSION CONTROL SYSTEM (consisting of Fuel tank, fuel tank cap, Canister, purge valve, throttle body, vapor hoses, fuel hoses and hose connectors) with parts not certified to be genuine.

EVAPORATIVE EMISSION CONTROL SYSTEM WARRANTY

- 3. Loss of time, inconvenience, loss of motorcycle use or any other consequential loss or damages.
- 4. Any motorcycle in which the Odometer has been tampered with, OR the Speedo cable has been disconnected for any reason OR is broken and not replaced immediately, due to which the exact distance covered cannot be determined.
- 5. Normal ageing of parts such as fuel hoses, vapor hoses, gaskets & rubber components.

RECOMMENDATIONS FOR REQUIRED MAINTENANCE:

IT IS RECOMMENDED THAT THE ROUTINE MAINTENANCE OF THE MOTORCYCLE BE CARRIED OUT AT SPECIFIED INTERVALS AND ANY MAINTENANCE TO THE EVAPORATIVE EMISSION CONTROL SYSTEMS SHOULD BE PERFORMED ONLY BY AN AUTHORISED ROYAL ENFIELD SERVICE DEALER AND USING ONLY GENUINE ROYAL ENFIELD SPARE PARTS.

SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 5 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

1ST FREE SERVICE

lst Free Service

500 Kms
or
45+8 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

ļ	500 KMS or 45+8 DAYS WHICHEVER IS EARL	LIER FROM DATE OF SALE
ļ	Customer Name :	Dealer Code:
	Address:	
 	Frame No:	Regn. No:
l I	Engine No:	Sale Date:
l I	Motorcycle Installation Form No.	Serviced Date:
l l	ODO Reading:	Serviced by (Dealer's/ASC Name &
l	Sold by (Dealer's Name & Address)	Address)
İ		
i		
l L	Received the above motorcycle after the service having	been done to my entire satisfaction
I I	Customer's Signature:	ate:
i	Contact Phone / Mobile No.:	

1ST FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Check level & top-up, if necessary Battery Electrolyte Battery terminals Clean and apply petroleum jelly Rear Drive chain free play Check, clean, lubricate & adjust Lubricate, Adjust if necessary Rear brake pedal pivot & free play Front & Rear disc brakes Front / Rear brake hose & Banjo Bolt Check & top up brake fluid level Inspect Check spokes tightness / run out Wheel rim front & rear Front fork Inspect for oil leakage 10 Air filter element Clean 11 Spark plug (M14) Check, clean & adjust gap 12 H.T. Lead Inspect for cracks 13 Fuel filter in fuel pump Clean 14 Fuel pump (under tank) mounting Check mounting screws/Leak Inspect for cracks 15 Fuel hose 16 Rubber hose, Air filter to throttle body Inspect for cracks 17 Rubber hose, Inlet manifold / Adaptor Inspect for cracks 18 Rubber hose, Evaporative Emission Equipment Inspect for Cracks 19 Accelerator & Throttle pulley cables free play Adjust play 20 Clutch cable / Lever free play Adjust play 21 Engine oil sump strainer, magnetic drain plug Clean 22 Engine oil & oil filter paper element Replace 23 Hand levers & kick starter pivot Lubricate 24 PAV pipes & hose clip Inspect 25 Tyres front & rear Check wear pattern Steering system Inspect & adjust play if necessary 27 Pivot-Side Stand, Center Stand, Rider & pillion foot rest Lubricate

					_	
	(CUSTO	M	ER	C	OP\	\langle
	Job C	Co	ırd	No):	
	I	Эc	ate	:		
 	Odo F	le	ad:	ing	r :	
İ	Name					
	ASC w	itl	h C	od	e:	
İ		• • •				
İ		•••				
İ	ASC /	Γ)ea	ler	's	
ĺ	Stamp 8	k S	igr	nat	ure	, /

2ND FREE SERVICE

2nd Free Service 3000 Kms

3000 Kms or 90+15 days whichever is earlier from the date of sale

Enter the Details in Free Service Record

3000 KMS or 90+15 DAYS WHICHEVER IS EAS	RLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
Sold by (Dealer's Name & Address)	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

2ND FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary 3 Battery terminals Clean and apply petroleum jelly Rear Drive chain free play Rear brake pedal pivot & free play Check, clean, lubricate & adjust Lubricate, Adjust if necessary Front & Rear disc brakes Check & top up brake fluid level Front / Rear brake hose & Banjo Bolt Inspect 8 Front fork Inspect for oil leakage Air filter element Clean 10 Spark plug (M14) Check, clean & adjust gap 11 H.T. Lead Inspect for cracks 12 Fuel pump (under tank) mounting Check mounting screws/Leak 13 Fuel hose Inspect for cracks 14 Rubber hose, Air filter to throttle body Inspect for cracks 15 Rubber hose, Inlet manifold / Adaptor Inspect for cracks 16 Rubber hose, Evaporative Emission Equipment Inspect for Cracks 17 Accelerator & Throttle pulley cables free play Adjust play 18 Clutch cable/ Lever free play Adjust play 19 Engine oil Check level & top up 20 Hand levers & kick starter pivot Lubricate 21 Steering free play Check & Adjust 22 PAV pipes & hose clip Inspect 23 Tyres front & rear Check wear pattern 24 Pivot-Side Stand, Center Stand, Rider & pillion foot rest Lubricate 25 Vent Pipe under air filter box Inspect & clean

	CUSTOMER COPY
	Job Card No:
	Date:
 	Odo Readina :
l I	Name of Dealer/
l I	ASC with Code:
	ASC / Dealer's
	\Stamp&Signature/

3RD FREE SERVICE

3rd Free Service

6000 Kms
or
180+15 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

6000 KMS or 180+15 DAYS WHICHEVER IS	EARLIER FROM DATE OF SALE
Customer Name :	Dealer Code:
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service havi	ing been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

3RD FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Battery terminals Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Lubricate, Adjust if necessary Check & top up brake fluid level Rear Drive chain free play
Rear Drive pedal pivot & free play
Front & Rear disc brakes
Front / Rear brake hose & Banjo Bolt Inspect Check spokes tightness / run out Check wear pattern Wheel rim front & rear Tyre front & rear Clean
Check, clean & adjust gap
Inspect for cracks
Check mounting screws/Leak Air filter element 11 Spark plug (M14) 12 H.T. Lead 13 Fuel pump (under tank) mounting 14 Fuel hose Inspect for cracks 15 Rubber hose, Air filter to throttle body Inspect for cracks Rubber hose, Inlet manifold / Adaptor Rubber hose, Evaporative Emission Equipment Inspect for cracks Inspect for Cracks Throttle body / Injector - Cleaning Spary*
Accelerator & Throttle pulley cables free play Clean by carbo spray* Check & adjust play Clutch cable / Lever free play
Engine oil sump strainer, magnetic drain plug
Engine oil & oil filter paper element
Hand levers & kick starter pivot Adjust play Clean Replace Lubricate Check, Lub. steering balls & Adj. play Steering system 25 PAV pipes & hose clip Inspect Inspect for oil leakage Pivot-Side Stand, Center Stand, Rider & pillion foot rest Lubricate Vent Pipe under air filter box Inspect & clean

 	CUSTOMER COPY Job Card No:
	Job Sala No.
	Date:
ĺ	
İ	Odo Reading :
İ	
İ	Name of Dealer/
l I	ASC with Code:
	ASC / Dealer's
ı	\Stamp&Signature/

4TH FREE SERVICE

4th Free Service 9000 Kms

9000 Kms
or
270+15 days
whichever is
earlier from the
date of sale

Enter the Details in Free Service Record

9000 KMS or 270+15 DAYS WHICHEVER IS EA	RLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	been done to my entire satisfaction
Customer's Signature:	ate:
Contact Phone / Mobile No.:	

4TH FREE SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary Clean and apply petroleum jelly Battery terminals Rear Drive chain free play Check, clean, lubricate & adjust Lubricate, Adjust if necessary Rear brake pedal pivot & free play Front & Rear disc brakes Check & top up brake fluid level Front / Rear brake hose & Banjo Bolt Inspect Front fork oil Replace oil 9 Air filter element Clean 10 Spark plug (M14) Check, clean & adjust gap 11 H.T. Lead Inspect for cracks 12 Fuel pump (under tank) mounting Check mounting screws/Leak 13 Fuel hose Inspect for cracks 14 Rubber hose, Air filter to throttle body15 Rubber hose, Inlet manifold / Adaptor Inspect for cracks Inspect for cracks 16 Rubber hose, Evaporative Emission Equipment Inspect for Cracks 17 Accelerator & Throttle pulley cables free play Check & adjust play 18 Clutch cable / Lever free play Adjust play 19 Engine oil Check & top-up 20 Hand levers & kick starter pivot Lubricate 21 Steering free play Check & Adjust 22 Tyres front & rear Check wear pattern PAV pipes & hose clip
 Pivot-Side Stand, Center Stand, Rider & pillion foot rest Inspect Lubricate 25 Vent Pipe under air filter box Inspect & clean

	CUSTOMER COPY Job Card No:
	Date:
 	Odo Reading :
	Name of Dealer/
	ASC with Code:
ĺ	
	ASC / Dealer's
ı	\Stamp&Signature/

5TH PAID SERVICE

5th Paid Service

12,000 Kms or 360+15 days whichever is earlier from the date of sale

Enter the Details in Paid Service Record

١,	12,000 KMS or 360+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
IJ	Customer Name :	Dealer Code:
IJ	Address:	
	Frame No:	Regn. No:
!	Engine No:	Sale Date:
H	Motorcycle Installation Form No.	Serviced Date:
1	ODO Reading :	Serviced by (Dealer's/ASC Name &
il	Sold by (Dealer's Name & Address)	Address)
il		
il		
il	Received the above motorcycle after the service having	been done to my entire satisfaction
H	Customer's Signature:	ate:
i١	Contact Phone / Mobile No.:	

5TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary Battery terminals Clean and apply petroleum jelly Swing arm needle bearings and spindle Lubricate Rear wheel cush drive rubbers Inspect & replace Rear Drive chain free play Check, clean, lubricate & adjust Rear brake pedal pivot & free play Lubricate, Adjust if necessary Front & Rear brake Check & top up brake fluid level Wheel rim front & rear Check spokes tightness / run out 10 Tyres front & rear Check wear pattern Front fork Inspect for oil leakage 12 Air filter element Replace Spark plug (M14) Check, clean & adjust gap Inspect for cracks Throttle body / Injector - Cleaning Spary* Clean by carbo spray* Fuel pump (under tank) mounting Check mounting screws/Leak Check & Replace Accelerator & Throttle pulley cables free play Check & adjust play Rubber hose, Air filter to throttle body Check & Replace Rubber hose, Inlet manifold / Adaptor Check & Replace Rubber hose, Evaporative Emission Equipment Replace Clutch cable/ Lever free play Adjust play PAV pipes & hose clip Inspect Engine oil sump strainer, magnetic drain plug Clean Engine oil & oil filter paper element Replace 26 Hand levers & kick starter pivot Lubricate Steering System Check, Lub. steering balls & adj. play Vent Pipe under air filter box Inspect & clean 28 Vent ripe under dir liner box
29 Pivot-Side Stand, Center Stand, Rider & pillion foot rest Lubrica
30 Earth wire eyelet Contact (Below fuel pump relay / ECU mtg.) Inspect Lubricate

CUSTOMER COPY
Job Card No:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

6TH PAID SERVICE

6th Paid Service 15,000 Kms

15,000 Kms

or

450+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

15,000 KMS or 450+15 DAYS WHICHEVER IS E	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading:	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

6TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Che Check level & top-up, if necessary Clean and apply petroleum jelly Check, clean, lubricate & adjust Battery terminals Rear Drive chain free play Rear brake pedal pivot & free play Lubricate, Adjust if necessary Front & Rear brake Check & Replace brake fluid Front fork Inspect for oil leakage Tyres front & rear Check wear pattern Air filter element Clean 10 Spark plug (M14) Check & Replace 11 H.T. Lead Inspect for cracks 12 Fuel filter in fuel pump Replace 13 Fuel hose Inspect for cracks 14 Rubber hose, Air filter to throttle body Inspect for cracks 15 Rubber hose, Inlet manifold / Adaptor16 Rubber hose, Evaporative Emission Equipment Inspect for cracks Inspect for Cracks 17 PAV pipes & hose clip
18 Accelerator & Throttle pulley cables free play
19 Clutch cable/ Lever free play Inspect Check & adjust play Adjust play 20 Engine oil Check & top-up 21 Hand levers & kick starter pivot Lubricate 22 Steering system
23 Pivot-Side Stand, Center Stand, Rider & pillion foot rest
24 Front & Rear brake hose & Banjo Bolt Check & adjust play Lubricate Inspect 25 Inlet / Exhaust valve seating Check by compression / Vaccum test 26 Vent Pipe under air filter box Inspect & clean

 	CUSTOMER COPY Job Card No:		
	Job Sara No.		
	Date :		
ĺ			
İ	Odo Reading :		
İ			
İ	Name of Dealer/		
l I	ASC with Code:		
	ASC / Dealer's		
ı	\Stamp&Signature/		

7TH PAID SERVICE

7th Paid Service 18,000 Kms

18,000 kms
or
540+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

18,000 KMS or 540+15 DAYS WHICHEVER IS E.	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
	Address)
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:D	Date:
Contact Phone / Mobile No.:	

7TH PAID SERVICE ACTIVITIES

Pivot-Side Stand, Center Stand, Rider & pillion foot rest

Water wash the motorcycle and dry it with a clean cloth Battery Electrolyte Check level & top-up, if necessary Battery terminals Clean and apply petroleum jelly Rear Drive chain free play Check, clean, lubricate & adjust Rear brake pedal pivot & free play Lubricate, Adjust if necessary Front & Rear brake Check & top up brake fluid level Front/Rear brake hose & Banjo Bolt Inspect Check spokes tightness/run out Check wear pattern Replace fork oil Wheel rim front & rear Tyres front & rear Front fork 10 Air filter element Replace 12 Spark plug (M14) Check, clean & adjust gap H.T. Lead Inspect for cracks Throttle body / Injector - Cleaning Spary* Clean by carbo spray* Check mounting screws/Leak Fuel pump (under tank) mounting Inspect for cracks Accelerator & Throttle pulley cables free play Check & adjust play Rubber hose, Air filter to throttle body Inspect for cracks Rubber hose, Inlet manifold / Adaptor Inspect for cracks Rubber hose, Evaporative Emission Equipment Replace Clutch cable/ Lever free play Adjust play PAV pipes & hose clip Inspect Engine oil sump strainer, magnetic drain plug Clean Engine oil & oil filter paper element Replace Hand levers & kick starter pivot Lubricate Steering System Check, Lub. steering balls & adj. play Vent Pipe under air filter box Inspect & clean

CUSTOMER COPY
Job Card No:

Date:

Date:

Odo Reading:

Name of Dealer/
ASC with Code:

ASC / Dealer's
Stamp & Signature

Lubricate

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) 70

8TH PAID SERVICE

8th Paid Service 21,000 Kms

21,000 Kms or 630+15 days whichever is earlier from the date of sale

Enter the Details in Paid Service Record

21,000 KMS or 630+15 DAYS WHICHEVER IS E	ARLIER FROM DATE OF SALE
Customer Name :	Dealer Code :
Address:	
Frame No:	Regn. No:
Engine No:	Sale Date:
Motorcycle Installation Form No.	Serviced Date:
ODO Reading :	Serviced by (Dealer's/ASC Name &
	Address)
i	
Received the above motorcycle after the service having	g been done to my entire satisfaction
Customer's Signature:	Date:
Contact Phone / Mobile No.:	

8TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth

Battery Electrolyte Check level & top-up, if necessary Battery terminals Rear Drive chain free play Rear brake pedal pivot & free play Lubricate, Adjust if necessary Front & Rear brake Front/Rear brake hose & Banjo Bolt Inspect Check spokes tightness/run out Check wear pattern Replace fork oil Wheel rim front & rear

Tyres front & rear Front fork

10

Air filter element 12 Spark plug (M14)

H.T. Lead

Throttle body / Injector - Cleaning Spary* Fuel pump (under tank) mounting

Accelerator & Throttle pulley cables free play

Rubber hose, Air filter to throttle body Rubber hose, Inlet manifold / Adaptor

Rubber hose, Evaporative Emission Equipment

Clutch cable/ Lever free play PAV pipes & hose clip

Engine oil sump strainer, magnetic drain plug

Engine oil & oil filter paper element

Hand levers & kick starter pivot

Steering System

Vent Pipe under air filter box

Pivot-Side Stand, Center Stand, Rider & pillion foot rest

Clean and apply petroleum jelly Check, clean, lubricate & adjust

Check & top up brake fluid level

Clean

Check, clean & adjust gap Inspect for cracks

Clean by carbo spray* Check mounting screws/Leak

Inspect for cracks

Check & adjust play Inspect for cracks Inspect for cracks Inspect for Cracks Adjust play

Inspect Clean Lubricate

Check, Lub. steering balls & adj. play

Inspect & clean

Lubricate



^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) 72

9TH PAID SERVICE

9th Paid Service 24,000 Kms

24,000 Kms
or
720+15 days
whichever is
earlier from the
date of sale

Enter the Details in Paid Service Record

(Cost of oil, oil filter element and other consumables used are chargeable to the customer)

ļ	24,000 KMS or 720+15 DAYS WHICHEVER IS EA	ARLIER FROM DATE OF SALE
ļ	Customer Name :	Dealer Code:
	Address:	
 	Frame No:	Regn. No:
l I	Engine No:	Sale Date:
l I	Motorcycle Installation Form No.	Serviced Date:
l I	ODO Reading:	Serviced by (Dealer's/ASC Name &
l	Sold by (Dealer's Name & Address)	Address)
İ		
Ĺ		
l L	Received the above motorcycle after the service having	g been done to my entire satisfaction
 	Customer's Signature:	pate:
İ	Contact Phone / Mobile No.:	

9TH PAID SERVICE ACTIVITIES

Water wash the motorcycle and dry it with a clean cloth

Battery Electrolyte Check level & top-up, if necessary Battery terminals Clean and apply petroleum jelly Rear Drive chain free play Check, clean, lubricate & adjust Rear brake pedal pivot & free play Lubricate, Adjust if necessary Front & Rear brake Check & top up brake fluid level Front/Rear brake hose & Banjo Bolt Inspect

Wheel rim front & rear

Check spokes tightness/run out Check wear pattern Replace fork oil Tyres front & rear Front fork Replace

Air filter element 12 Spark plug (M14) H.T. Lead

10

Throttle body / Injector - Cleaning Spary*

Fuel pump (under tank) mounting

Accelerator & Throttle pulley cables free play

Rubber hose, Air filter to throttle body Rubber hose, Inlet manifold / Adaptor

Rubber hose, Evaporative Emission Equipment

Clutch cable/ Lever free play PAV pipes & hose clip

Engine oil sump strainer, magnetic drain plug

Engine oil & oil filter paper element

Hand levers & kick starter pivot Steering System

Vent Pipe under air filter box

Pivot-Side Stand, Center Stand, Rider & pillion foot rest

Replace Adjust play Inspect

Clean Replace Lubricate

Check, Lub. steering balls & adj. play

Inspect & clean

Check, clean & adjust gap

Clean by carbo spray* Check mounting screws/Leak

Inspect for cracks


Inspect for cracks

Inspect for cracks

Inspect for cracks

Check & adjust play

Lubricate

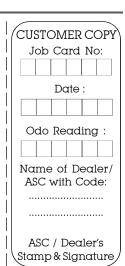

^{*}Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin) $7 \, \Lambda$

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

PAID SERVICE / MAINTENANCE RECORD

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

REGIONAL & AREA OFFICES

R1: Chandigarh, H.P, J&K, Punjab Royal Enfield SCO, No. 5, 1st Floor, Sector-11,	R3: Uttarkhand & Uttar Pradesh Royal Enfield UGF 15-19, Landmark Arcade, 2 Badshah Nagar Crossing, Faizabad Road.	R6: Orissa & West Bengal Royal Enfield Shrachi Tower, 3rd Floor,	R8: Goa & Maharashtra Royal Enfield Plot No.16, Sector -1, Sion Panvel Highway, Nerul.	R10 : Karnataka Royal Enfield Door No. 2067/1, 2068/2, East End "A" Main 9th Block, Jayanagar,
PANCHKULA (Haryana) Pin Code - 134 112. Tel: 0172-5011255, 5011251 R2: Delhi, Haryana, NCR &	LUCKNOW – 226 006. Tel: 0522-6566675 Fax: 4005973	686 Anandapur, KOLKATA - 700 707. Tel: 033-40060206 / 0209 Royal Enfield	NAVI MUMBAI - 400 706. Tel: 022-27700395, 27700501 Royal Enfield	BANGALORE - 560 069. Tel: 080-22440588, 41753277, 41536488
Rajasthan Royal Enfield C/o EICHER ENGG.COMPONENTS Plot No. 7, HSIDC Industrial Area, Sector 18, Palam Gurgaon Road,	R4: Gujarat & Madhya Pradesh Royal Enfield 103, Safal Prelude, Opp. Parsavanath Esquire Cross Road, Corporate Road, Prahlad Nagar, Off. S.G. Highway, AHMFOARAD - 3R0 015.	A Unit of Eicher Motors Ltd. 407, 4th Floor, Nirmala Plaza, Forest Park, BHUBANESWAR - 751 009. Tel: 0674–6540206	203, 204 Sneha Ganga, Near Vega Centre, Shankar Seth Road, Swargate, PUNE - 411 037. Tel: 020-40028090 Fax: 24447174	R11:Tamilnadu & Andaman Royal Enfield Plot No. 350 to 354, 2nd Floor, 4th Link Street, Nehru Nagar Industrial Area, Kottivakkam, (OMR-IT Highway),
GURGAON (Haryana) - 122 015. Tel: 0124-4278138, 4278139 Fax: 4382148 Royal Enfield	Tel: 098-25113168 Fax: 079-40024461 R5: Bihar, Chattisgarh & Jharkhand	R7 : Arunachal Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland & Tirupura Royal Enfield	R9: A.P. & Telangana Royal Enfield (A Unit of Eicher Motors Ltd) No: 8-3-166/B to F,	CHENNAI - 600 096. Tel:044-42070661, 24540828 R12: Kerala & Lakshadweep Royal Enfield
G-5, 6, 7, Gitanjali Towers, Ajmer Road, JAIPUR - 302 006. Tel: 0141-4106747, 4034748 Fax: 0141-4106748	Royal Enfield 3rd Floor, Maple Plaza, Gate No. 2 , Ashok Nagar, RANCHI (Jharkhand) - 834 002. Tel: 0651-2245262	Astha Plaza, 4th Floor (M4-2), G S Road, Opposite Deorah College, Ulubari, GUWAHATI - 781 00 . Mob: +91 8135846461	Beside Gokul Theatre, Erragadda, HYDERABAD - 500 018. Tel: 7093190003, 7416783025	25/85A, Opp. to IOC Pump, Koonamthai, Edappally Post, KOCHI - 682 024. Tel: 0484-6494990, 6494991 Fax: 2543616

ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH	ANDHRA PRADESH
Amlapuram Shri Jayalakshmi Automobiles +91 9618349555	Eluru Classic Automotive +91 9652238585 08812-234582	Kurnool Sandhya Automotives +91 9394253377 08518-253377	Ongole Lekhana Automotives +91 8885002112 8885002113	Vijayawada- Kannur Pravallika Motors +91 7842559555 0866-2586858
Anantapur Renati Automotives Pvt. Ltd. +91 9000841133 7036903879	Guntur-Auto Nagar Jubilant Avenues Pvt.Ltd +91 8143008506; 8507	Nandyal Dheeru Motors +91 9133065553 +91 9133065554	Rajahmundry Sriram Automobiles +91 9246665513	Vijayawada- M G Road Mahalakshmi Motors +91 8886322559 +91 8886422559
Bhimavaram Varma Automotives +91 7095812666 +91 7095816888	Guntur-Chandramauli Nagar Jubilant Avenues Pvt.Ltd +91 8143008508	Narasaraopet Anu Auto Agencies +91 7893301444 086472-21787	0883-2422117 Srikakulam Lakshmi Automobiles +91 9032929235 8121929235	Vijayawada- Ring Road Pravallika Motors +91 784255955 0866-2586858 Vishakhapatnam -
Chirala Lekhana Automotives +91 8885002114	Kadappa Anjana Bikes +91 9247041555 9010389998	Nellore Rishi Motors +91 8977713377 +91 8977714477	Tenali Shakthi Motors +91 8886744494	Gajuwaka Cidanta Motors 0891-6562008 0891-6502008
Chittoor Sri Sai Motors +91 9490094908 08572-245057	Kakinada Shri Jayalakshmi Automobiles +91 8332912719 0884-6443555	Nellore-Inside City Rishi Motors +91 8977713377, 8977714477 +91 9866162859	Tirupathi Sri Sai Motors +91 9295091444 8572245057	Vishakhapatnam - Nad Junction Saran Motors +91 8885947222 +91 8885847222

ANDHRA PRADESH	ASSAM	ASSAM	BIHAR	BIHAR
Vishakhapatnam - Seethammadhara Royal Enfield Company Stores +91 8897353382	Guwahati- G S road Shahila Expositions Pvt Ltd +91 9435549786 0361-2335025	Tinsukia SD Royal +91 9957714273	Biharsharif PNN Automobiles +91 9334038042	Gopalganj Riders cafe +91 9199547786
0891-2768887; 2768886 ARUNACHAL PRADESH Naharlagun - Itanagar	Jorhat Achharsingh Royal +91 9859736100	BIHAR Araah Om Wheels	Champa Neeraj Royal +91 7047511730	Hajipur Ambika Bhawani Automobiles +91 9835641123
Bucho Royal Enfield +91 9436219089 0360-2350103	9207041076 Nagaon Bajrang Motors	+91 9471444405 06182-233338	+91 8871704777 Chapra Supriyam Automobiles	06224-295280 Katihar Jaiguru Motors Pvt Ltd
ASSAM Barpeta	+91 9435160785 North Lakhimpur Rishi Riders	Yodha Automobiles Pvt. Ltd +91 9934012273	+91 9534677444 06152-242999	+91 9430909966 06452-290172
G.S. Auto +91 8472987341 Dibrugarh Rider's	+91 9854100000 Silchar Bina Automobiles Pvt Ltd +91 9954008888	Begusarai Mayamanu Motors Pvt. Ltd +91 7260851555	Darbhanga SYV Motors +91 8227887777 06272-242777	Madhubani Shagun Auto Sales +91 8986396011 06276-228014
+91 8472913182 0373-2370018; 2370014 Guwahati- Maligaon Chirag Enfield +91 9435400437	03842-225016 Tezpur G.M Associate +91 9707026331 03712-237777	Bettiah Mishra Automobiles +91 8877985073 06254-246273	Gaya Kusum Motors +91 8271020543 0631-2210105	Motihari Raj Motors +91 9472582848 06252-230373

BIHAR	BIHAR	BIHAR	CHATTISGARH	CHATTISGARH
Muzaffarpur- Maripur Gautam Motors +91 7631996130 0621-2220056 Muzaffarpur-Sitamahari	Purnea Link Motors +91 7766917026 Saharsa	Sitamarhi Nili Automobiles +91 9102999131 CHATTISGARH	Jagdalpur Kambo Motors +91 9993333939 +91 9407642827	Raipur-Lodhi Para Chowk Indian Motors +91 7714221500
Road Kumar Automobiles +91 9771123233	7 Hills Automobiles +91 8877080661 06478-227007	Ambikapur Dev Automobiles +91 9753117804 07774-222804	Korba Kailash Auto Agency +91 9826109907	0771-4221500; 4221400 Raipur- Tatibandh 6th Gear
7283000384 Patna-Boring Road Ambey Motors	Samastipur Aditya Motors +91 8406803303	Bhilai AAN Automotive	07759-245482 Raigarh	+91 8109309666 - 0771-4070666
+91 9102999131 Patna-Saguna More	5452264047 Sasaram	+91 7886996000 0788-4040512	Priyanka motors +91 7389910800	Rajnandgaon Shubh Auto +91 9424102224
Siddhi Vinayak Automobiles +91 8092981877 0612-212948	Vintage Auto Corp +91 8540948771 +91 9304503020	Bilaspur Blue Sapphire Motors +91 8982407770	07762-233550 Raipur- Gaurav Path -	07744-401491
Patna-Zero Mile Sukhmani Motors Pvt. Ltd. +91 9709761441 0612-3297056	Siwan Sri R.L. Automobile Pvt. Ltd. +91 9576449444 06154-247686	07752-407770 Dhamtari Shri Ram Automobiles +91 9179995522	Panchsheel Nagar Aadityaraj Automobiles +91 7697208337 0771-4030550	

GOA	GUJARAT	GUJARAT	GUJARAT	GUJARAT
Goa - Margoa Saini Motors +91 7767006138; 6139; 6140 0832-2740343; 2740345	Ahmedabad- Navrangpura Karnavati Bikes Pvt. Ltd. +91 9099031290	Bhavnagar Gujarat Auto Centre +91 8734936206 0278-2512648	HimmatNagar Rajvee Auto +91 8238411177	Navsari PSG Motors +91 9924755521
Goa - Panaji Auto Guides +91 9326102087 0832-2225865 GUJARAT	079-27490068 Ahmedabad- Nehru Nagar Ambawadi Sarabhai Motors	Bhuj PM Autolink +91 9825900279; 9925635279, 02832-231279	Jam Nagar New Chandra Motor Cycle Agency +91 7226065999 0288-2552888; 2678024; 2550863	02637-265559 Rajkot - Gondal Road Aditya Moto Gujarat Pvt. Ltd. +91 9099092594, 9099092595 0281 2371070
Ahmedabad-Sarkhej Gandhinagar Road Kaveri Motors +91 9824039464	+91 7926303535 079-65243010; 26303535 Anand Royal Ridentity Pvt Ltd.	Gandhidham N.P. Auto Agencies +91 9426140290; 9723540290 02836-295927	Junagadh Shree Aashapura Enterprise +91 7046008488 0285 2660111	Rajkot - Mota Mava Kalawad Road Dev Motors +91 8401799993
079-65416116; 27663674; 27663048	+91 9898484500 02692-644352	Gandhinagar Aanal Auto Agency	Mehsana Parklane Auto	0281-6458888; 9157877331 Surat-Adajan Hajira Main -
Ahmedabad-Mani nagar Sarabhai Automotive +91 9825708033 079-25812530; 2531	Bardoli PSG Motors +91 9924755549	+91 9099049555; 8980001123 02712-23262020	+91 9925014803 9925004538 Morbi	Adajan JSN Motors +91 8401600411
Ahmedabad- Naroda Krishna Wheels +91 9925333445 079-29704155; 29703055	Bharuch Vraj Auto +91 9824125050 02642-225757	Godhra Concord Auto +91 9879074373 02672-265522	Dev auto +91 9054265550; 65551; 65552 +91 9054265553; 65554	0261-2840023 Surat - Sarthana Varacha Purav Automobiles +91 9979841546, 9979841547

GUJARAT	HARYANA	HARYANA	HARYANA	HARYANA
Surendranagar Old Soul Motorcycles +91 9909008000 02752-242777	Ambala - Ambala Chandigarh Highway Royal Motors +91 9315100442 0171-2545795; 2544795	Jind Gill Automobiles +91 9416476459 Kaithal	Palwal Kartike Motors +91 9813131455 01275-240454	Sonipat Heydaan Motors +91 9034444433 0130-2233004
Vadodara- Harni road Amba Motors +91 7820010060	Ambala cantt- Rai Market Royal Motors +91 9315100442	Raghav Automobiles +91 8199946000 +91 9254312500; 8199947001	Panipat	Yamuna Nagar Falcon Automobiles +91 9315431300 0173-2346433
0265-2463232 Vadodara - Old Padra Road RSA Automotives	0171-2630795; 2631495 Bhiwani Sheoran Auto +91 8950291600 01664-252216	Karnal Monga Motors +91 9354140008 184-2261810; 2272729	Rewari Premium Automation Pvt Ltd +91 8607482200 01274-251000	HIMACHAL PRADESH Baddi Simran Automobiles +91 9816167884
+91 9574257999; 9574256999 2652355040	Fatehabad SDB Automobiles +91 9728942226 01667-221786	Kurukshetra VPS Motors +91 9254022290 01744-231151	Rohtak Badhwar & Co. +91 8059880031 01262-242034: 241173	Chamba Champavati Autos +91 9736678651 01899-226747
Vapi Royal Thumpers +91 9726818181; 9879565274	Hissar Malik Automobiles +91 8572888890 01662-276103	Narnaul Royal Jindal Auto Pvt Ltd +91 9813150222	Sirsa Gulzar Motor Agencies +91 9996147200 01666-221367; 230459	Dharamshala Him Enfield +91 9418083838 8894389090

HIMACHAL PRADESH	HIMACHAL PRADESH	JAMMU & KASHMIR	JHARKHAND	JHARKHAND
Hamirpur (ASP) Parkash Royal Enfield +91 9816058483 01972-258483	Solan Tapan Industries +91 7807400172 01860-1800072	Leh(ASP) Venture Third Pole +91 9419177466 Kathua	Bokaro G.R.Motors +91 9934109008 6542265452	Jamshedpur-Adityapur Aruna Motors +91 8863996222 0657-6574010; 6574011
Manali Heaven On Earth Automobiles +91 9459300881 01902-205032; 251151	UNA Sharma Automobiles +91 9318536733 09218-446755	Lovish Automobiles +91 9419166881, 9070855555	Daltonganj Arjun Automobiles +91 9006082822 +91 8235121935	Jamshedpur - Bajrang Nagar NH 33 Cruiser India +91 9204004142
08350854002 (Kullu) Mandi Shivam Automobiles +91 9805473700	JAMMU & KASHMIR Baramula ZMR Automobiles +91 9906727248	Srinagar PCS Automobiles +91 9797122244 0194-2472781	Deoghar Roy Brothers +91 9934344889 06432-240371	Ramgarh Anjaney Automobiles Pvt. Ltd. +91 9431146297
01905-243077	Jammu - Janipur road		Dhanbad Arti Automobiles +91 9470133444 +91 9031084005 Dumka Majestic Autobikes Pvt Ltd.	+91 9031000430
R.S. Enterprises +91 9418117089	Reliance Motors +91 9419191241 0191-2536084; 0191-2530213	Digiana camp (ASP) Sumeet Motors +91 9419236396		Ranchi - Harmu Road Raghuram Autocare +91 9905110006 0651-6571607
01704-223687 Shimla Tapan Industries +91 7807500272 01860-1800072	Jammu Xtream Motors +91 9070699909; 9070699900; 9070172999 +91 9797568876	0191-2431058 Udhampur R A Enfield +91 9419996901 01992-250008	+91 9798777007 Hazaribag Riders Point +91 9234343422 +91 9031005518	Ranchi - Kokar Sri Nivas Automobiles +91 9771420322 0651-2542789

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Bagalkot	Bangalore - BTM 2nd	Bangalore - Nelamangala	Bangalore-Sudhamanagar	Bhatkal
Bagalkot Motors	stage	Sri sai Sadguru Motors	HSRServices	Brahmi Motors
+91 8884128877;	Royal Enfield Company Store	+91 9071766021;	+91 9343735655	+91 9743637456
9916361134	+91 9902180044	9071766025	080-22133119	08385-226836
Bangalore-Kpura road	080-40905108; 26689975	Bangalore- Peenya Sri Sadguru Sai Motors	Bangalore - B Narayanpur	Belgaum Shri Munishwar Motors Pvt. Ltd.
H.S.R. Services	Bangalore-Electronic City Electronic City Motors	+91 9066699094	Sai Ram Autocraft	+91 7204606064
+91 7829000350;		080-28393666	+91 7022288662	0831-4213059
9980762849	+91 7026613071 to 79 & 80	Bangalore - Raja	080-64909090	Bellary
080-22133119	8494942929	Rajeshwari Nagar	Bangalore - Yelahanka	
Bangalore-Banaswadi	Bangalore-Indira Nagar	Accelerate Motors	Acclaim Motors Pvt Ltd	Sanjeevini Automobiles
CVS Motors	Teknik Motors	+91 7259534650	+91 9632881188;	+91 7353777768
+91 9886500045	+91 8904004004; 8904005004	080-28606969; 28608989	9632881133	08392-261027
Bangalore-Bannerghatta	080-25284788, 40910005	Bangalore-Magdi road	9663550055	Bidar Bhavani Motors
Royal Enfield Company Store +91 9945592345	Bangalore - Kengeri Accelerate Motors	H.S.R. Enterprises +91 9844067555	Bangalore (ASP) Mehboob Garage	+91 9379799992
088-22440588	+91 7022049627	080-23156617 Bangalore-Sarjapur	+91 9945785022; 9845326062 080-23436682	Bijapur Rohan Motors
Bangalore-Bellary Road	Bangalore-Nagarbhavi	Teknik Motorcycles	Bangalore (ASP)	+91 9986168363 Coorg Abhyuday motors +91 959000910
CVS Motors	S.R. Motors	+91 8904004004;	Sri Manjunatha Bullet Garage	
+91 9886500042	+91 9902065933; 9071340000	8904000300- 8904000700	+91 9341220151	
080-23469600; 23469601	+91 8032323333	080-40910003; 0004; 005	080-25427066	

KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA	KARNATAKA
Chikkamangalore Chikkamangalore Motors +91 9742289955	Hassan Shree Subrahmanya Motors +91 9980751155,	Mandya Ruby Maratt Motorcycles +91 9591503399	Mysore (ASP) Kuvempu Nagar Abhyudhay Motor Services Pvt. Ltd.	Tumkur Bhagavati Motors +91 9976384499
Chitradurga Jilu Bikes +91 9845127397 +91 8494900552	9742217172 Hubli - Airport Road Salimath Engineers Services +91 7259037590 0836-3241160	Mangalore Frontline Automobiles +91 8861006478 0824-4267573	+91 9743721955; 9538841412 0821-2462066/2462067 Puttur	Udupi Brahmi Motors +91 9164889161; 9164209161 0820-2527590
Davangere Royal Automobiles +91 9844053511 08192-256239	Hubli - Kusugal Road - Keshwapur Klasik Motors +91 8904800948	Mudhol Mudhol Motors +91 8197567124 Mysore-Vijayanagar 1st	Frontline Automobiles +91 9686137888 Raichur Chukki Motors	KERALA Adoor Yamuna Agencies +91 9747410243
Gadag Gadag Motors +91 8147776496	0836-2288223 Hunsur Aadith motors 08222-252395; 96	Stage Aadith Motors +91 7899912362; 7899912363 8214244467	+91 8792113336 Shimoga Apollo Enterprises +91 9008138662; 9739696768, +91 41187404	0473-4229222 Alleppey Rider's Motors +91 9447265955
Gulbarga Mukunda Wheels Pvt. Ltd. +91 9945249302; 49300; 49305, 08472-225302	Kolar Jagadamba Automobiles +91 9972522111; 8152226619	Mysore (ASP) Kempananj. Agrahara Sri Venkateshwara Automobiles 0821-2427533	Sirsi Sri Maruthi Auto Motors +91 9108484665 08384-226777	Calicut-Francis Road Blue Mountain Autos +91 9895201667 0495-2302530

KERALA	KERALA	KERALA	KERALA	KERALA
Calicut - Mankavu Luha Automotives +91 7025105333 0495-2333533	Cochin - Vyttila Kaizen Motors +91 7559800072 0484-2307072; 4047072	Kollam - Madanada Unnoonny Motors +91 9567395208 0474-2764566; 2764567	Pathanamthitta Marikar Motors Ltd. +91 8111871222; 9388077007 0468-2223412	Thrissur-Puzhakal Padam Pinnacle Motor Works Pvt. Ltd. +91 7025600600; 8111994007
Calicut - Puthiyagandi SS Motors +91 9567863979 0495-2392200; 2390770	Kannur SS Motors +91 9567862458; 9567863980	Kodungallur Pinnacle Motor Works Pvt Ltd +91 9072575721	Pattambi-Palakkad Intrepid Works +91 9744072921 0466-2970666	0487- 2385255 Thiruvalla St. Mary's Motors +91 9526260400;
Cochin - Angamali, Areeckal Junction Sanjo Motors +91 980970999 0484-6888889	0497-2731312 Kannur Vibrant Automobiles +91 8111990066	Kottarakara Unnoonny Motors +91 9567966444 Kottayam	Perinthalmanna ABC Motors +91 9447158400 04933-226677	9747972081 0469-2733243 Thodupuzha Veliyathu Motors
Cochin - Chittoor Road St. Mary's Motors +91 8891000691; 9895118951	0497-2776660 Kayamkulam Roverz Motors +91 9072546555	Javeens +91 9446397300 0481-2563455; 2567070	Perumbavoor Sanjo Motors +91 8592009991 0484-6888885	91 8943200090 4862227899 Tirur ABC Motors
0484-4022819 Cochin - Edapally Royal Enfield Company Store +91 7025233912 0484 - 6494991; 6494992	Kollam - Bishop Jerome Nagar Marikar (Motors) Ltd. +91 9947031120; 9947031121 0474-2732474	Palakkad Intrepid Works +91 8606933008 0491-2572331	Thrissur-Karunanakaran Nambiar road Marikar (Motors) Ltd +91 9388077010; 8606863336 0487-2339307	+91 9605827000 0494-2422277 Trivandrum-Attingal Concept Bikes +91 9048990256

KERALA	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MAHARASHTRA
Trivandrum - Kaimanam Junction Sivaji Motors +91 7736207777; 7736066716	Bhopal - Hamidia Road Choudhari Tractor Agency +91 9425023609 0755-5240614; 2735762	Gwalior Rimik Motors Pvt. Ltd +91 9827935616; 9926435616 0751-4035616	Khandwa Binwani Motors +91 9425909302 7332244222	Ahmednagar Newaskar Automobiles +91 8087500900 0241-2470125
0471-6506777 Trivandrum - M G road Marikar (Motors) Ltd +91 8606068466	Bhopal-Padmanabh Nagar Ananya Auto +91 7389930806 0755-4076937	Indore - Nehru Market Krishna Motor Agency +91 9826034012 0731-2703172	Satna Manish Motors +91 9827250199 07672-251608	Akola Agrawal Motors +91 8408089944 0724-2258259
0471-2334621 Trivandrum - Vetturoad - Kazha kuttam Concept Bikes +91 9048400200; 9048990546	Chhindwara Rahul Royal Motors +91 8889999602 07162-245255	Indore - Sayaji Club Road RR Automotive +91 8878660100 0731-4222822	Shahdol Gupta Automotive +91 8718811703 0765-2231967	Alibagh SK Autoriders +91 9970041579 02141-223030
Vadakara Grace Motors +91 7034775555	Dewas R R Motorcycles +91 8109103622 8269270709	Jabalpur Royal Thumpers +91 8962010072 0761-4042424; 4042423	Ujjain Avis Auto +91 9300005025 0734-2520007	Amravati Bhans Automotive +91 7620177060 0721-2510636
Valluvambaram- Malappuram ABC Motors +91 7034166300 0483-2770700	Guna Standard Motors +91 9754222241 +91 9425131250	Katni Royal Thumpers A Division of Superior Automobiles Pvt Ltd. +91 8962010075 07622-226474	Vidisha Adventure Bike +91 9425148606 0759-2408222	Aurangabad - Bansilal Nagar S.K.Y.S Automobile +91 9028059252 0240-2350652

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Aurangabad-CIDCO- Cannaught Cherry Corporation +91 9850889408 0240-6601613	Chandrapur Dinesh Motors +91 9028111383 07172-260555	Jalgaon Usha Motors +91 7768009996 0257-6999000	Mumbai - Bhandup Soniya Motors Pvt. Ltd +91 9322314555 022-65650153; 7208005209	Mumbai-Thane (Dombivali) Pooja Motors +91 8425840752
Baramati Jay Motors +91 9960247655; 9890090381 02112-221055	Dhule Surbhi Motors +91 9371057573 02562-239933	Karad Nand Enterprises +91 9923981211 02164-242772 Kolhapur	Mumbai - Goregaon Ishna Wheels +91 8879330226; 8879330227 022-28711242; 28711243	0251-2470611 Mumbai - Thane (Godbundar) Soniya Motors Pvt. Ltd +91 9322315111
Beed Aaryan Motors +91 9421184118 02442-223780	Gadinglaj Yashashri Motors +91 9657009444 9527094848	Motor India +91 9822871729 0231-2531177	Mumbai - Kandivali Voyage Motors +91 9146871013; 7498567890 022-28087882	022-25893202; 7208005207; 7208005208 Mumbai - Thane (Mira
Buldhana Samyak Automotive +91 9422181159 072-62241273	Ichalkaranji Motor India +91 9822551777	Prisha Motors +91 9049607711 02382-200711 Malegaon	Mumbai-Panvel Pratik Motors +91 9029422942 022-27480040	road) Unison Automobiles +91 9029234040 022-28456620
Borivali Unison Automobiles +91 7506555039 22265614014	Indapur Sahyadri Auto +91 7387111109 02111-224111	Shaurya Motors +91 8380038153; 156; 9527002881 02554-231171	Mumbai - Sakinaka Synergy Auto Inc +91 8286046565 022-28590085; 28590086	Mumbai - Thane (Vasai) SP Wheels +91 8446011105 0250-6511107; 6511108

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MAHARASHTRA
Mumbai - Thane (Ulhas Nagar) S R Motors (A Unit of Riya Motors Pvt. Ltd)	Nagpur - Wardhaman Nagar Shri Krishna Automobiles +91 9372121346	Nasik - Ganjamal Ostwal Autos +91 9595301414 0253-2500291	Phaltan Adved Motors +91 7040829609 02166-225272; 225472	Pune - Fathima Nagar Platiinum Auto +91 7755932578; 2579 +91 9881171717
+91 7738622211; 7506044995 0251-2700043	0712-3191202 Nanded Jairam Motors +91 9552446688	Nasik - Satpur Moharir Auto Pvt. Ltd. +91 8446646555;	Pimgalgaon Shaurya Motors Shaurya Motors +91 9130068287	Pune - Hadapsar Platiinum Auto +91 7030911278; 7030911284
Mumbai (ASP) Nerul Ram Motorcycles	02462-297788	8378998295 — 0253-6630000	02550-660604	Pune - Kasarwadi
+91 9323025335 022-27700394; 022-27700396	Nandurbar Dinesh Wheels +91 9673298999 +91 9764567877	Osmanabad Hatlai Auto +91 9822838888	Pune - Adarsh Nagar Dhone Automobiles +91 7028922644 020-24273335	Dhone Automobiles +91 7028045684 Pune - Khed Shivpur Siddh Auto
Nagpur - Kamptee Road Ved Motors +91 9326916819 0712-2652222; 2654444	Narayangaon Kings Royal Riders +91 9075009831 0213-2245542	02472-228588 Parbhani Chandrallama Automotive +91 9665516193 2452-242299	Pune - Baner Kings Auto Riders +91 7875756100 020-27200256	+91 9673152266 Pune - Kothrud Siddh Auto +91 9168376611 020-25280050: 25280051
Nagpur - Sitaburdi Paragon Traders +91 9595622261 0712-2523456	Nasik - Dwarka Ostwal Autos +91 9422255773 0253-2592717	Parli Shiva Motors +91 9765924477 02446-227477	Pune - Chinchwad Hridaan Motors +91 9850888899 2069100202	Pune - Yerwada Dhone Automobiles +91 7028978074 020-60121812

MAHARASHTRA	MAHARASHTRA	MAHARASHTRA	MIZORAM	NEW DELHI & NCR
Pune - Wakad (Talegaon) Kings Auto Riders 020-65107545 Pune - Wakhewade	Satara Nand Enterprises +91 9923981211 02164-242772	Wardha Sri Krishna Automobiles +91 9769169180 +91 7410061121	Aizawal Lawma Enfield +91 8575517879 0389-2334731	Delhi - Jhandewalan Ext. Ess Aar Motors +91 9810797099 011-65461901; 23524426
Brahma Motors +91 7276629900 7276027722	Shrirampur Karachiwala Automobiles +91 9028537570 02422- 227570	Yavatmal Aaditya Riders Pvt Ltd +91 8055958119	NAGALAND Dimapur Uniglobe Enterprises	Delhi - Kailash colony, Okhla Indust. Area South Delhi Motorcycles +91 9716145509,
Pune (ASP) Sadguru Service Station +91 8308048854; 9011078854, 020-24350727	Solapur - Bale chowk, Pune Highway Chavan Motors +91 7720069040 0217-2352323/2352424	9158632833 MANIPUR Imphal Sanamahhi Motors	+91 9774057770 3862225903 NEW DELHI & NCR Delhi - Dhwarka	9716002728 011-26811013 Delhi - Mahipalpur Kay Tee Automobiles +91 9910884777
Ratnagiri Advait Motors +91 9970551171 02352-228930	Solapur - Budhwarpeth Mondhe Motors +91 8237466447; 6446; 6442 0217-2315923; 2735081	+91 8259061598 0385-2449111 MEGHALAYA	Cruiser Motors +91 9136310966 +91 8459223833 Delhi - Guirawala	011-64612777 Delhi - Mangolpuri Soni Automobiles +91 9873069001 011-27921311; 65180349
Sangli Abhay Auto +91 7768073003; 9011964040, 0233-2623040	Waluj - Pandharpur Godavari Agro Serivces Pvt. Ltd +91 9146189551	Shillong Merin's Royal Enfield +91 8258811320 0364-2590048	Kay's Autos +91 9810433555 011-28877008; 28877009	Delhi - Najafgarh Outer Delhi Motorcycles +91 9540941601 011 68888252 / 53

NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	ORISSA
Delhi - Padapadganj Asco Motors +91 9582184488	New Delhi (ASP) Balaji Motors +91 9350102768	Ghaziabad (ASP) Jai Shiv enterprises +91 9927064206	NCR-Noida - Sector 10 Shree Mahadev Agency +91 9811404319	Bargarh Shree Shyamji Bike Point +91 9437053233
011-2214888	+91 8826574278	Ghaziabad (ASP)	0120-4310052/4324662	+91 7381053244; 255
Delhi - Rama Road Lamba Enterprises Pvt Ltd. +91 9711611591	Delhi (ASP) M.G. Auto Sales +91 9810237417 011-27837439	Royal Taj Agency +91 9810413387 +91 9818728177 NCR Gurgaon - Old	NCR-Noida - Sector 63 Solitaire Automotive +91 9810703922	Baripada Legend Automotive +91 9178024417; 9040078001
011-45151159 Delhi - Saraswati Vihar North Delhi Motorcycles +91 9810558625 011-27054737	NCR - Faridabad - Mathura Road Heighten Automotive Pvt Ltd +91 9911223811	Delhi Road Aman Automobiles +91 9810535659 1244084648	0120-4547929 NCR-Sahibabad Sangam Autos +91 9311051177; 9990624290. 0120-4198890	Berhampur Vaishnavi Automobiles +91 9937308525; 7682833574; 6802248820
Delhi - Shahadra Amar Autos +91 8802583948 011-43595322	+91 9717475811 NCR - NIT Faridabad Sohan Auto World +91 9811551530 0129-2429352	NCR Gurgaon - Sheetala Mata road Brawn Automobiles +91 9212315090 1244251481	ORISSA Angul Green Treet Automotive (P) Ltd +91 9937066505	Bhubaneshwar - Buddha Nagar Royal Automobiles +91 7752017606 8192256239
Delhi - Tilaknagar Lamba Enterprises Pvt Ltd. +91 9999389189; 9250919994 011-45614855; 42138246	NCR - Ghaziabad - Nehru Nagar Rawal Automobiles Pvt Ltd +91 9350315311 0120-4104659; 9211921227	NCR Gurgaon - Sohna Road Manzil Motors Pvt. Ltd. +91 9650311988 1244231683	+91 7852936512 Balasore Favour Ride +91 7894775144; 90400557156	Bhubaneshwar - KIIT Road, Sishu Vihar Gugnani Automobiles +91 9776160313; 9178143270

ORISSA	ORISSA	PUNJAB	PUNJAB	PUNJAB
Bhubaneshwar - NH 5 - Patrapada Trupti Autoworld +91 9861824216;	Keonjhar Sai Automobile +91 9437054807 +91 9437004711	Abohar Aman Auto Zone +91 9814767900 +91 9914767900	Bhatinda-Goniana Road Ajay Autos +91 9988678145 0164-2235608; 5000376	Gurdaspur Ajit Motors +91 9855152204 01874-501644
7873024206 0674-2470148 Bhawanipatana Shyamkrishna Mart pvt ltd	Rourkela The Agents & Distributors +91 9937007971;	Amritsar Jaycee Motors Corporation +91 9780038349 +91 9780038078	Bhatinda - Mansa Road Krishna Automobiles +91 8725086888 0164-2212802	Hamirpur Parkash Royal Automobiles +91 9418458483 01972-258483
+91 9040350293 8763130236 Cuttack Shree Hanuman Automobiles	9238111010; 0661-2511223 Sambhalpur Sreyasri Motors +91 9040015355;	Barnala Megan Autos +91 9878120088	Faridkot Baba Farid Automobiles +91 9780247048; 9872409626	Hoshiarpur Lagwal Automobiles +91 9256514321 01882-238586
+91 8342039286; 9438429957 0671-2586630; 9853265588 Jajpur Road Bipur Road 8491 9078886306	9437030055; 9040015359 0663-2115355 PONDICHERRY Pondy	+91 9878120033 Batala Moon Autos +91 9988355955	01639-251343 Fazilka Aman Auto Zone +91 9988700765; 9814667900	Jalandhar - GT Road Fateh Autos +91 9417231123 0181-2632880
Jeypore Golden Motors +91 9439355473; 9437024187	Rooster Automobiles +91 8940422422 0413-2355336	01871-222278 Begowal S.S.Motors +91 9814399532	Ferozepur Royal Hut +91 8437312364 01632-242567	Jalandar - SatlujMarket Navyug Motors +91 9915630535; 9878785796 0181-4627998

PUNJAB Jalandar - G.T.Road Navyug Motors +91 9878785796 0181-4627998 Kapurthala Innovative Automobiles +91 9357254736 01822-233011	PUNJAB Ludhiana - Jodhewal Shree Dadu Dayal Automotive +91 8728092401 0161-5040405 Mahilpur (ASP) Mahilpur Motors +91 9417354423	PUNJAB Mohali Manmohan Motors +91 9216267888; 9988317366 0172-6527366; 6527367 Morinda Morinda Motorcycle Centre +91 8427242324	PUNJAB Nakodar (ASP) Bhagwati Automobiles +91 9357242788 +91 9041522970 Nangal Nangal Motors +91 8283829760;	PUNJAB Patiala - Sirhind Road Gurukirpa Motors +91 9779222225 Phagwara Khalsa Automobiles +91 9463138303 01824-270081
Khanna Kishori Automobiles +91 9872030903; 8591525575; 01628-503868 Ludhiana - Dholewal -	Malerkotla Om Automobiles +91 9814404513; 8054944713 01675-262113	0160-2630357; 2630072 Mukherian Lagwal Motors +91 8699982680 Muktsar	9878667432; 01887-229160 Nawanshahar HS Enterprises +91 9417654888; 8146091105; 01823-221194	Ropar Garcha Automobiles +91 9464752267 01881-228137
GT Road Sant Motors +91 8968296020 0161-5012647	Mansa Ganpati Motors +91 9779850001 01652-236899	Deep Autos +91 8566926850 0163-3510390	Pathankot Cashmir Sales Corporation +91 9417412884 0186-2220148; 2224672	Sangrur Verma Automobiles +91 9888836998 01672-223273
Ludhiana - Gurudev Nagar - ferozpur Road Barnala Automobiles(Jagroan) +91 9780014995 0161-2424114; 2426209	Moga Bikram Sales Corporation +91 9855914072 01636-227777	Partap Automobiles +91 9815001739; 9815001740 9872605400	Patiala - Rajpura Road Sukhdev Automobiles +91 9876103017 0175-2305721	Sultanpur Lodhi Dalbir Motors +91 9814679432 01828-223634

PUNJAB	RAJASTHAN	RAJASTHAN	RAJASTHAN	RAJASTHAN
Tanda Sandeep Automobiles +91 9914554304 01886-502398	Banswara Veer Autolinks +91 9001406681 02962-254135	Chittorgarh Manglam Motocorp +91 7737094370 01472-297018	Jaipur (ASP)-Sudershan Pura JMS & Co +91 7737009665;	Nagaur D.D.Autotech +91 9828943737 01582-243006
Taran Taran Chhabra Auto Agencies +91 9815213148 +91 8528180632	Barmer Devrath Motors Pvt. Ltd +91 8107381111; 9549657080 02982-224381	Churu Churu Balaji Motors Pvt Ltd +91 9649777777 01562-253777	9460345047; 0141-2211047 Jhunjhunu Balaji Motors +91 7733022411	Pali RMD Motors +91 9829285357 0293-2227151
Zirakhpur Garg Auto zone +91 8427656388 RAJASTHAN	Bharatpur Khusali Motors +91 9414944972	Hanumangarh Udai Motors +91 9772780001 01552-226266	Jodhpur Shree Rajpurohit Automobiles +91 9001744442	Sikar Apoorva Motors +91 9314237183 01572-245830
Ajmer Jogbala Motors Pvt Ltd. +91 9829072298 0145-2787666	Bhilwara Soni Automobile +91 8233416700 011 27921311; 65902249	Jaipur - Govind Marg Rajesh Motors (Raj.) Pvt Ltd. +91 9521125125; 9414064864	0291-2980473 Kota Mundra Motors Pvt. Ltd. +91 9352602347 0744-2361264	- Sriganganagar National Motors +91 9414211956 0154-2444200
Alwar R.S. Motors +91 8696900842; 9785999998, 0144-2738248	Bikaner Bikaner Bikes Pvt Ltd +91 9529269924 0151-2251345	Jaipur - Tonk Road Aditi Motors +91 9829822722 0141-2700224	Kotputli Shree Motors +91 9468768300; 9116011113; 2912980473	Voyage Motors +91 9799144460 0294-2460104

TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU	TAMILNADU
Arani	Chennai - Broadway Balaji Motors +91 9962997975 Chennai - Chrompet	Chennai - Kelambakkam	Chennai - Pallikaranai	Cuddalore
Akan Agency		Vardhan Motors	Sri Venkateswara Bike Zone	Rooster Automobiles
+91 9751502221		+91 9092604446	+91 8681863330	+91 9791322822
+91 7845330209		+91 9092604447	044-65655222	04142-227788
Chengalpattu-GST Road	The Legend Motors	Chennai - OMR,	Coimbatore - Hope	Dharmapuri
Shiv Sholai motors	+91 7299042018	Perungudi	College, Peelamedu	S.M.Motors
+91 9500008699	044-49595867; 22410272	Royal Enfield Company store	Royal Enfield Company Store	+91 7373778259,
+91 9786177477	Chennai - Greams Road	+91 8939958655	+91 9655999844	9994852482; 04342-288123
Chennai - Ambattur Classic Motorcycles +91 9940063306 044-42180206 - 45080207	Sri Velavan Motors +91 8754553411; 8754553404 044-42076898 Chennai - Jafferkhanpet	044 - 42607777; 42607555 Chennai - Purasaiwalkam I Speed Motors +91 9094633712 044 45588047	0422-6067006; 6067007 Coimbatore - Sai Baba colony Sheriff Motors	Dindigul Rajendra Automobiles +91 965933433, 8508678333 0451-2431850
Chennai - Anna Nagar Southern Motors +91 9841277990 044-26264686	Sreehita Auto Zone +91 7338819603; 04; 05 044-65906590; 591	Chennai - Red Hills AKG Motors +91 9597082578	+91 9597310101 0422-4210101 Coimbatore - Trichy	Erode Senthil Murugan Auto Agencies +91 8220048567 +91 9790030003
Chennai - Alapakkam	Chennai - Kattuppakkam	044-26322063	Road, Kothari Layout	Hosur
Sri Velavan Motors	Aravinduja Motors Private	Chennal - Tondiarpet	BullMenn Motors	Sri Saravana Motors
+91 7299405000;	Limited	Balaji Motors	+91 9514555510;	+91 9543813032;
7299705000;7299709999	+91 8939804335	+91 9087521116	7092900000;	8220013432
044-24761902	044-45554888	044-25910104; 25910105	7092900000	04344-244030/ 244031

TAMILNADU Hosur (ASP) - Seetharam Nager Sri Manjunatha Bullet Garage +91 9894955499;	TAMILNADU Kumbakonam A.V. Motors +91 7598707783; 7598707785 0435-2415286	TAMILNADU Namakkal Royal Annanmar +91 8883114777 04286-277557	TAMILNADU Thanjavur JAF Associates +91 7867019836; 7867019831	TAMILNADU Tirupur Bikerz +91 7502387000 +91 9842187000
9940909908 0434-4314114 Kanchipuram Jet Blaze Motors	Madurai - KK Nagar Madras Motors +91 9976755111 0452-2585686	Pollachi Bharat Motors +91 9715222600 +91 9843345461	Theni Coral Moto Hub +91 9500739686 9698933000	Trichy - Annamalai Nagar Karur road Oxina Motors +91 8056455577 7402718502:
+91 9629032223; 9894538176 Karaikkudi Neha Motors +91 7373097717	Madurai - Kazhavasal, Theni main road Classic Motors +91 9629023344 0452-2667875	Salem - Four Roads Chamundi Enfield +91 8098611999; 8098559999 0427-2414100	Thiruvannamalai AKAN Agency +91 9843033861 04175-233377	7402718302, 7402718514 Vellore Sri Kalikambal Autos +91 8508536771
Karur Murugan Motors +91 9500955950; 9543255950; 0432-4329950 Krishnagiri	Madurai - Simmakkal, Workshop Road G.G. Motors +91 8012688444 0452-2342007	Sivakasi Sri Scorpion Racers (P) Ltd +91 7373059701 0456-2231303	Thoothkudi Charles Motors +91 9944723062 0461-2321636	0416-2245505 Karaikal Rooster Automobiles +91 7639001047 0436-8228800
Frishnagri Sree Maruthi Motor & Auto Service +91 9159566613 , 9159566615; 0434-3232512	Nagercoil Chandra Motors +91 8973886699 04652-236477	Thiruvallur Gap Motors +91 8939983660 +91 8939983662	Tirunelveli DG Motors +91 9486729010 0462-2970031	Villupuram Rooster Automobiles +91 8489144744 04146-222279

TELANGANA	TELANGANA	TELANGANA	TELANGANA	TELANGANA
HYDERABAD & SECUNDARABAD Hyderabad- Banjara Hills VVC Automobiles +91 7842883883	Hyderabad-PJR Nagar, Gachibowli road Go Green Motors India Pvt. Ltd 040-64646303 040-64626265	Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pyt Ltd +91 7660008132;	Karimnagar-CVNR Road Quality Motors +91 9030775252 Khammam	Miryalguda Sri Lakshmi Pavan Automotives +91 9666660606
Hyderabad-Bowenpally, Suchitra SVR Motors and Engineering +91 8885023350 8885023350 040-40116336	Hyderabad-Prasanth Nagar,vanasthalipuram Taurus Motors +91 8125828787 040-29804755	9100087519, 040-23514551 Secundarabad-Begumpet Kayjee Engineers +91 9246113133 040-27907444 Secundrabad- Neredmet	Royal Automotives +91 9963886789 +91 8297536789 Kothagudam Royal Motors	Nalgonda Vijayalakshmi Automotives +91 8885966627 8885966687
Hyderabad-Erragada Royal Enfield Company Store +91 9989055856; 7093190003; 7416783025	Hyderabad- Ramachandrapuram, BHEL Go Green Motors India Pvt. Ltd	Orange International +91 8121091210 040-64449494; 3434 Secundarabad-Opp-KIMS	+91 8297616789 +91 8297626789 Mahabub Nagar Harshithh Automotives	Nizamabad KY Motors +91 8885198222 08462-236882
040-23701235; 23702255 Hyderabad-Himmayat Nagar Jayasree Automotives +91 9010183555 +91 9010752555 040-65169666	+91 8712126622 040-69996644; 69996622 Hyderabad-Saraswathi Nagar, Uppal Royal Engineers +91 9885051755 040-64241755	Hospital, Ranigunj Kayjee Engineers 040 - 64533839 Karimnagar-Bye pass Road Quality Motors +91 9966173000 0878-6509993	+91 7660022336; 7660022334 Mancherial J V Aryan Motors +91 8179356458 +91 8297388775	Warrangal-Hanamkonda Quality Automobiles +91 9030775252 +91 9030775164

TRIPURA	UTTARKHAND	UTTARKHAND	UTTAR PRADESH	UTTAR PRADESH
Agartala XED Motorcycles +91 8415951975 0381-2341098	Haridwar Prem Auto Enterprises +91 9927994477 01334-250242; 253242	Rudrapur Brar Motors +91 9219445699 05944-2473127	Allahabad - Bai Ka Bagh Vrindavan Automotive +91 7860352786; 7860383786	Bareilly Suri Sales (P) Limited +91 9359108047 7351007963
UTTARKHAND Dehradun - Karanpur Road Ahuja Enterprises +91 9927532535	Kashipur Batra Enterprises +91 9837336026 05947-277207 Pithoragarh (ASP) Sai Automobiles	UTTAR PRADESH Agra - Baluganj Shambhavi Automotive Engineers +91 8057400022 0562-2260444	Malabad-Kamla Nehru	0581-2543334 Basti New India Merchant +91 9532211786 554 2281483 Bijnor
0135-2659082 Dehradun - Saharanpur Road - Niranjanpur Allied Auto Agencies	+91 9412981042 05964-225786 Rishikesh (ASP) Ranjeet Motorcycles	AGRA-Guru Ka Tal-NH 2 Agra Royals +91 9837004872; 9997023456	Amit Motors +91 9415795792 +91 9415103787 Badaun	Chaudhary Motors +91 8958994499 01342-264455 Bulandshahar
+91 9690777771 0135-2623487 Haldwani	+91 9897548171; 9897113728, 0135-2434171	0562-6888846 Aligarh	Omkar Motors +91 9412427289 9520330305	Santhosh Enterprises +91 9760415515 05732-231326
Suri Sales (P) Limited +91 7351007972 05946-210768	Roorkee Goswami Automobiles +91 9897238608 01332-277477	Maindola Royal Enfield +91 9319144044 0571-3292464	Barabanki G.R & Company +91 7706911346; 7706911342	Deoria Supreem Motors +91 9628755557 05568-229624

UTTAR PRADESH Etawah V P Motors +91 9719530742 +91 9568013104	UTTAR PRADESH Ghazipur Shri Sai Chandra Automobiles +91 9415881073 Gonda Chulo N Popinio	UTTAR PRADESH Kanpur Sareen Motors +91 9389629521 0512-2540484	UTTAR PRADESH Lucknow - Alambagh Shreya Auto World Pvt. Ltd. +91 8400400842; 850 0522-4037677; 4041033	UTTAR PRADESH Meerut - Jagriti Vihar Moto Riders +91 8476900096 0121-4000511 Meerut - West rithani
Faizabad Chawla Riders +91 9628140004-07	Style N Passion +91 9125411110 Gorakhpur	Kanpur-Khalasa Line Sareen Motors +91 7705905138;	Lucknow - Jankipuram Royal Motor works +91 7607777396	Nutech motors +91 7088714714 0121-440111
0527-8265077/78 Farrukhabad Ankur Auto Agencies +91 9415124921	Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 9559005759 0551-2230014	8799414243 8303220224 Kanpur . S.S Automobiles	522 4078111 Maharajganj RK Motors +91 9161274582	Moradabad Akanksha Autozone Pvt Ltd. +91 7060007905 0591-6055999
+91 7678874000 Fatehpur K S Auto Sales +91 9616519248 05180-221223	Jaunpur Aditya Motors +91 9196128730; 9839216882 0545-2264047	+91 7705006411 Lakhimpur Kheri Shree Vinayak Motors +91 9554155999 - 0587 2277734	Mathura Aryaman Enterprises +91 9675303059 +91 8392916221	Muzaffar Nagar Harivansh Auto Agency +91 9219440446; 8979298645 0131-2646477
Firozabad Emerald Automobiles +91 9219439555 +91 9219439444	Irozabad Jhansi Triveni Enterprises 91 9219439555 +91 9415059809		MAU Chandra Motors +91 9450189107 0547-2860555	Nazibabads Agarwal Tractor & Parts +91 9927030546; 9837072868 01341-220252

UTTAR PRADESH	UTTAR PRADESH	WEST BENGAL	WEST BENGAL	WEST BENGAL
Padrauna Cantech Automobiles +91 9838719444; 7705803777; 05564245959	Unnao Raj Auto World +91 7080903700 0515-2831098	Barasat-24 Parganas The Country Motors +91 9051506523 033-654 04510	Durgapur R.H. Automobiles Pvt.Ltd. +91 9748402629 Howrah	Kolkata - Chowrangee chowk Austin Distributors Pvt. Ltd
Pratapgarh Shaurya Enterprises +91 9554433888; 9918601126; 1127	Varanasi - Maldahiya Khurana Automobiles +91 8934965655 0542-2207532; 2207618	Baruipur-24 Parganas Austin Distributors Pvt. Ltd 033-65556611	Apollo Coaches (P) Ltd +91 9903800400 033-32971712; 32902346	+91 8420046876 033-65552077; 40721010;
Raebareli Sushma Motors +91 9455502987	Varanasi - Maqbool Anand road One Place Automobiles Pvt. Ltd.	Berhampore Maxwheel Motors +91 9233330208 03482-224227	Howrah Apollon Motors LLP +91 9804321122	Kolkata - Nowa para Kolkata Bike Zone
Saharanpur Sachdeva Enterprises +91 8445577933 0132-2680680	+91 7753888536; 7753888522, 0542-2508385 WEST BENGAL	Burdwan Sri Ram Automobiles + 91 9800365544;	Jain Motors +91 9476481717 +91 9434692778	91 9674029373 033-40082380 Kolkata-Sarat Bose road Shah Distributors
Sultanpur Asia Royal Motors +91 9935185230 05362-227777	Asansol SG Automobiles +91 8170030003; 8170030004	9002450705 Dankuni-Hooghly Universal Traders +91 9883069797	Kolkata - Anandapur Royal Enfield Company store +91 9874852522 033-40060206 / 0209	(Auto Division) +91 9830477788 033-22814242

	WEST BENGAL
East India Agro Indus. Pvt. Ltd +91 9874977006 033-22824400; 22823300;	Siliguri - Matigara Riders Corner +91 9002223222 Siliguri - 2nd Mile Sevoke Road
Krishna Nagar Royal Automobile +91 8629961089	Siliguri Distributors +91 9775633225 0353-2778873; 2547457
Malda Speed Wheels +91 9735586333	Titagarh Bishnu Oil Company +919874839911; 9051365511
Midnapore Sri Sai Auto mart +91 9434043691 03222-275999	033-25833353
Raiganj Kalyani Solvex Pvt. Ltd. +91 9775517444 03523-253016	

PARTS STOCKIST DISTRIBUTOR

Andhra Pradesh Vijayawada Cyber Automobiles Pvt. Ltd +91 9959615806	Gopalganj Shri Harishankar Motors +91 9771880938 06156-223956	Margoa Saini Motors +91 8308808290 0832-2740343; 2740345	JAMMU & KASHMIR Jammu Yahoo Technocra +91 9419191241	Bangalore Fixwheel Motors +91 9845949127 Kolar
Assam Guwahati Chirag Enfield +91 8136051810 0361 2670293	Patna Moto Spares Pvt.Ltd +91 9097577727 CHANDIGARH	GUJARAT Ahmedabad Shreeji Auto Traders +91 9173170931;	JHARKHAND Hazaribagh Riders Point +91 9234343422	Jagadamba Automobiles +91 9972522111 +91 9066983741 KERALA
Guwahati Pawan Automobiles +91 9864045473	- Chandigarh Manchanda Autos +91 9915047010; 9988994000	JamNagar New Chandra Motor Cycle	Jamshedpur Royal Auto Syndicate 72502-22283 Ranchi	Aluva Marikar Motors Ltd +81 9894744880
Jorhat Achharsingh Royal +91 9707522666 BIHAR	0172-2630263 CHATTISGARH Raipur	+91 9824211699 HARYANA Ambala	Sri Nivas Automobiles +91 7763801824 Zittau	Calicut Luha Automotives +91 7025106888 0495-2333533
Biharshariff PNN Automobile +91 9135620008	Automobile 9135620008 Nagorao Auto Engg Works Pvt. Ltd. +91 9165878692		Arjun Automobiles +91 7282820788 +91 8935849216	Ernakulam JR & Sons +91 9447063679
Chapra GOA upriyam Automobiles Mapusa 91 9128739999 Shauna Auto Agencies 6152-242999 +91 8326520712		Sheoran Automobiles +91 7056732216 01664-252216	KARNATAKA Bangalore Cyber Automobiles Pvt. Ltd +91 9448473078	Kochi Bhavani Auto Distributors +91 8086078173

PARTS STOCKIST DISTRIBUTOR

Trivandrum Subha Auto Wares +91 9446562640	Nagpur Siddarth Spares +91 9373195554	PUNJAB Amritsar Gee Ess Enterprise	Erode Senthilmurugan Auto Parts +91 9894756567	Lucknow-Transport Nagar Moped House Pvt.Ltd
MADHYA PRADESH Indore Royal Ventures +91 9589541950	Pune Planet Spares +91 9371005335 Pune	+91 9878930900 Ludhiana Amrik Singh & Co. +91 9915069033	Madurai Senthilmurugan Auto Parts +91 9500786567 TELANGANA	+91 9696202669; 8795444497 Lucknow Varma Auto Sales
Jabalpur Bhawani Automobiles 094243-05880 MAHARASHTRA	Shree Spares +91 9822377709 New Delhi	RAJASTHAN Jaipur-Indra Bazar Shubham Agencies +91 9680465973	Hyderabad Cyber Automobiles Pvt. Ltd +91 7702143186 UTTAR PRADESH	+91 9335207393 UTTARAKHAND Dehradun Anamika Enterprises
Aurangabad Vinod Agency +91 9823336611	Kinematics Mktg (P) Ltd. +91 9654787802 011-41545025 ORRISA	Jaipur-Transport Nagar Shubham Agencies +91 9414067766 TAMILNADU	Ghaziabad Indian Automobiles +91 9999916346; 9899288337	+91 9897615836 WEST BENGAL Kolkata Auto Marketing Agencies
Mumbai Rajkamal Auto & Scooter Spares +91 9833985931	Bhubaneshwar Orissa Marketing Services +91 9437033935	Chennai Cyber Auto Parts +91 7358768669	Kanpur Sareen Motors +91 9389629505	+91 9830325490 033-22360642; 22360643
Mumbai Ram Motor Cycle Co. +91 9920748891 022-27700394	Cuttack Bullet Plus +91 9437037590	— Chennai Popular Motors Cycle Company +91 9698444568 044-43435365; 43435364	Lucknow-Kaiserbagh Moped House Pvt.Ltd +91 7408555502 0522-4108704	Goyal Royal Spares +91 9434063334

NOTES

KU	YA	L	L	NI.		U					١	MO	\prod	U	RC	YCL	E II	VS	T	A	Ц	.A	\mathbf{I}		\mathbb{N}	IF	0	R	M
Dealer's	Nam	e														Date													
Place of	f Deale	ersh	nip													Dealer	Code												
Engine	No.														İ	Coupo	n No.												
Chassis	No.															Installa	ation [Dat	e.								Ì		
Custom	ner's N	am	e										Taluk																
Door No	o. & St	ree	t												ĺ	State													
Vi ll age /	/Towr	1														STD C	ode												
District																Teleph	one R	les	ider	ice	!								
Pin Cod	le															Motor	cycle	Re	gn. l	Vo									
Telepho	one Of	ffice	е													Invoice	e No.												
E-mail a	addres	s:i	f any	'												Delive	ry Not	te ,	/ Ad	vic	e N	lo.							
		Age	in Yea	rs			\ \ \	/lonthly	/ Hou	ıseh	old In	come			Exp	pected Av	erage KN	Лs Р	er Da	/				Мо	de of	Purc	hase		
18-20 Yrs	AG 01	Τ	36-4	0 Yrs	AG 05	Т	Bel	ow Rs.	10.00	0	ME	01			Lesser	than 10 K	Ms	К	M01			Ca	sh				MF	01	П
21-25 Yrs	AG 02		41-4	5 Yrs	AG 06		Rs.	10,000-	20,00	00	ME	02		L	11 - 30	KMs		К	M02			Ba	nk Fi	inan	ce		MF	02	
26-30 Yrs	AG 03	\top	Abo	ve 45 \	rs AG 07	\top	Rs.	20,000-	-50,00	00	ME	03		L	13 - 15	KMs	К	M03			Organised Co			Com	ompany		03		
31-35 Yrs	AG 04	Т				Т	Ab	ove Rs.	50,00	00	ME	04			Above	50 KMs		K	KM04 Finance MP C										
		Fd	ucatio	nal Oı	ıalification					7				-		Profession					ī	-			ce rien	de	-	05	
				nai Qt		_		_		╁		_		_			_		_		-	LLO	allii	OIII	пен	us	IVIE	03	Ш
10th - 12th Diploma	1		Q 01 Q 02		BE MBBS	+	CQ 0					nmen		_	nployee	:	CP 01		+		┨								
Graduate			202		CA	+	CQ 0			¬ ⊢		Repre		_			CP 03				1								
Post - Grad	uate	_	004		MBA	+	CQ 0			⊣⊢																			
					_						Bank / Insurance Employee CP 04 Software Engineer or IT / ITeS Emps CP 05																		
			Pur	pose c	of use				_	JE	Public	Secto	r Emp	olo	yee		CP 06												
Family Mo			P 26	_	Commute			_	_	┑┕		er / Agr	icultu	ıris	it		CP 07												
Personal N			P 27	_	carry load I			P 32	+-	⊣∟	Stude						CP 08				1								
To move ar part of wor			P 28		go around Specific Pu			+	+	⊣⊢	Contra	actor Trader	/ Cho	امد	rooner		CP 09				-								
Commute	Betweer	1	P 29	Re	ceived as G	ift		P 34		-11		essmar		νþr	cepei		CP 10				1								
Residence					r long dista es only	nce/	leisure	P 35			Docto						CP 12		+		1								
To run Fam	ily Erran	ds	P 30		y other			P 36		⊣⊢	Lawye						CP 13				1								
			Usag	e Roa	d Type					٦Ė	Engin	eer					CP 14				1								
Hi ll y Road	i					R	01			╁	Charte	ered A	ccour	nta	nt		CP 15				1								
Plain Road						-	02					s (P l ea:					CP 16]								
Kutcha Ro	oad					_	03			Ιг				jor	reasor	n in decid	ing to p	1 Г		_					Ť		_		_
Highways	Road					RT	04			1 [Riding	Comf	ort			SP 01			Loadi	ng d	arryi	ng (Capa	city	S	P 04			
City Road	Congest	ted				RT	05			ا [stabili	ty				SP 02			lmage	2 / S	tatus	,			S	P 05			
City Road	Non - Co	onge	sted			RT	06] [afety					SP 03			Fuel C	ons	ump	tior	n		S	P 06			
Mixed typ	e of Roa	d				RT	07]								 [Suga	este	d by	Frie	nds		T 9	P 07	T		ī
Have yo	u visite	ed F	Royal	Enfi	eld web	site	? '	Yes		No						Suggested by Friends SP 07 Suggested by Local Mechanics SP 08					\dashv								
For Off	ice use	e- o	nly																To Co	ver	Long	Dis	tanc	e	S	P 09			
Motor	cycle	Inst	talla	tion	Form (I	VIIF) No.																						

ROYAL ENFIE	LD				HH C	D 100 / C	ΞD	100 SS	HH 01		Yamaha	1 S	ZX	EY 1	14	_ N	linja 2	250R			BA 16	
Royal Enfield Bu	llet 350 (CI)	RE 01		HH S	leek			HH 02	Т	Yamaha	1 S.	ZR	EY '	15	N	linja 6	550R		П	BA 17	
Royal Enfield Bu	let DLX		RE 02	2	HH S	plendor			HH 03		Yamaha	ı F	Z16	EY '	16	К	TM D	uke		\neg	BA 18	
Royal Enfield Bu	llet Cam	ous	RE 03	;	HH S	treet / DI	LX		HH 04	Т	Yamaha	ı F	ZS	EY '	17	Т	vs -	SUZUK	I / TVS	\neg		
Royal Enfield M	achismo		RE 04	1	нн с	BZ Drum	n /	Disc / ES	HH 05	_	Yamaha	ı F	azer	EY '	_	Т	VS - S	uzuki M	ax 100	\dashv	TS 01	_
Roval Enfield M	achismo	A350) RE 05	;	HH P	assion	_		HH 06	_	Yamaha	·Υ	ZF - R15	EY '	_	T	VS - S	uzuki M	ax 100 R	\dashv	TS 02	_
Royal Enfield Lic	ahtning		RE 06	;	НН А	mbition	12	25 /135	HH 07	_	Yamaha			EY 2	_	Т	VS - S	uzuki Sa	murai	\dashv	TS 03	_
Royal Enfield Lig		35	RE 07	,	_	uper sple			HH 08	_		_	bove 500 cc	EY 2	_	_		uzuki Sh		\dashv	TS 04	_
Royal Enfield Ele		-	RE 08	-	_	plendor			HH 09	_	KINETI				-	_		uzuki Sh		\rightarrow	TS 05	_
Royal Enfield Ele			RE 09	-	_	lunk / Ex			HH 10	_	Kinetic I			KE (21	_		uzuki Fi		\rightarrow	TS 06	_
Roval Enfield Th		d (LE	3) RE 10	, —	_	Ignitor	_		HH 11	_	Kinetic I			KE	_	T	VS Sc	ort		\dashv	TS 07	_
Royal Enfield Bu	llet 350 l	JCE	RE 11	\top	Hero	Impulse			HH 12	_	Kinetic '	Ch	allenger	KE (_	Т	VS St	ar City /	DLX	\dashv	TS 08	_
Royal Enfield Ele	ectra UCE		RE 12		Hero	CD Daw	/n /	/ DLX	HH 13	_	_	_	Laser / 125 / 150	KE (_	T	VS M	ax 4R		\forall	TS 09	_
RE Thunderbird			RE 13	_	_	Splendo			HH 14	_	Kinetic /			KE		_	VS Jiv			\forall	TS 10	_
Royal Enfield Cl	assis 350		RE 14		Hero	Passion	Pr	0	HH 15	Т	Kinetic S			KE (T	VS Fla	me SR /	DS	┪	TS 11	
Royal Enfield Cl	assis 500		RE 15	;	Hero	Glamou	ır		HH 16	_	Kinetic I	Во	oss	KE (07	Т	VS Ap	oache / F	RTR	\exists	TS 12	_
SUZUKI MOT	ORCYC	LE	\top	\top	Hero	Achieve	r		HH 17	_	Kinetic \	٧e	locity	KE (_	T	VS Vi	ctor / GL	X /GS	\exists	TS 13	
Suzuki GW 250			SM 0	1	Hero	CBZ Xtre	em	ie	HH 18	_	Kinetic (KE (_	L	.ML			\dashv	\neg	_
Suzuki S l ingsho	t		SM 0	2	Hero	Karizma	1/2	ZMR	HH 19		BAJAJ					L	ML Er	nergy / F	Х		LM 01	
Suzuki GS 150R			SM 0	3							Bajaj M8	80	/ Major	ВА	01	L	ML A	dreno / F	X	╛	LM 02	
Suzuki Heat			SM 0	4	ESC	ORT YAI	M/	AHA / YM			Bajaj KB	11	00 / RTZ	ВА	02	LI	ML Free	dom DX /	Prima / Top	per	LM 03	
Suzuki Zeus			SM 0	5	Esco	rt Rajdoc	ot		EY 01		Bajaj 4S	. C	hampion	ВА	03	L	ML G	raptor / l	Beamer		LM 04	
Suzuki Above 5	00 сс		SM 0	6	Esco	rt Ace			EY 02		Bajaj KB	3 1	25	ВА	04							
HONDA MOT	ORCYCL	.E		\perp	Esco	rt Yamah	na	RX 100	EY 03		Bajaj Bo	ıχe	er AT & CT	ВА	05	N	/AHI	NDRA				
Honda Dream Y	uga		HM 0	11	Escoi	rt Yamah	าล	RX 135	EY 04		Bajaj Ca	dik	oer / SM	ВА	06	V	/lahin	dra Sta ll	io		MA 01	
Honda CB Twist	er		HM 0	12	Esco	rt Yamah	na l	RXZ	EY 05		Bajaj Ac	er	100	ВА	07	V	/lahin	dra Macl	ho	\neg	MA 02	
Honda CB Shine	,		HM 0	13	Yama	aha RX13	35(5S)	EY 06		Bajaj Pu	ıls	ar 150 / 180	ВА	08					T		
Honda CBF Stur	nner		HM 0	14	Yama	aha YBX			EY 07	Т	Bajaj E l ii	m	inator	ВА	09					\neg		
Honda CB Unico	orn		HM 0	15	Yama	aha YD 12	25		EY 08		Bajaj Ca	ıge	eva CRX 3	ВА	10							
Honda CB Unico	orn Dazz l	er	HM 0	16	Yama	aha Crux			EY 09		Bajaj Av	/er	nger	ВА	11					\Box		
Honda CBR 150	R		HM 0	17	Yama	aha Liber	ro		EY 10		Bajaj Pla	ati	na 110/ 125	ВА	12							
Honda CBR 250	R		HM 0	18	Yama	aha Gladi	iat	or	EY 11		Bajaj Dis	co	ver 100 / 125 / 150	ВА	13							
Honda Above 5	00 сс		HM 0	19	Yama	aha YBR 1	110	0 / 125	EY 12		Bajaj Pu	ılsa	ar 135	ВА	14							
							_		Sc	0	oters	_		_						_		_
LML	SC 01	\top	Ba	ajaj		SC 02		Kin	etic	T	SC 03	T	Piaggio	\top	SC 04		He	ro	SC 05			
TVS	SC 06	\Box	Su	zuki		SC 07		Hor	nda	7	SC 08	Ť	Yamaha	T	SC 09					П		
		_		_			=		N/1-	<u></u>	eds	=		_						=		=
Paiai	MDG			VS		MD 02		Feer		4	MD 03	Т	Horo Duch	\neg	MD 04				T			_
Bajaj	MD 01	+				 		Escor		+		+	Hero Puch	+	WID 04	+			+	\vdash	<u> </u>	_
Kinetic	MD 05	1	Hero I	viajes	uc	MD 06	_	Avar	ıu		MD 07	\perp								Ш	<u> </u>	_
Car (Below 1	000 cc)	CR	.01	C	ar (10	00 to 20	000) cc)	CR 02	Τ	Car (i	AŁ	oove 2000cc)	CRO	03		Othe	ers		0	T 01	Г
he reason I h	nave bo	nka	ed and v	villin	a to v	wait for	 r	Royal Fr	nfield is	_		_	I would ra	te r	חע פעי	neri4	nce	in thic	COLINTO	r a		_
		OKC					Т			٦٢	TICK TI	HF	OPTION	_	ce∎en	_	ood		e Not g			nol
TICK THE OP	TION BLE		Definite Agree	ly A	Agree	Maybe	ا ا		Definitely Disagree		MOST	รบ	ITABLE	L	cemen		ooa	better	De MOL C	500	Bad	net.
Because it is my			Agree	+			+		009.00	1	Attitude a	anc	d Capability of people									
Motorcycle since	childhoo			\perp			4			1	Test ride.			T								
There is no other 3		cycle.		+			4			4	Communi period.	ica	tion during waiting	T								
This kind of styli available on any o	ther Motor									1		00	king and other	+		+				_	+-	_
				\neg			\top			11	formalitie	35.	5 3110 00101	1								
Because this is a am willing to wa	Royal Enfi	eld						1		- 1 -			delivery and given	+		-	_		_		-	_

Motorcycle

Yamaha SS 125 Yamaha SZX

HERO HONDA / HERO

HH CD 100 / CD 100 SS

What Motorcycle do you own now?

First Time Two - Wheeler Buyer FB 01 H

ROYAL ENFIELD H

Bajaj Pulsar 200 / 220 Ninja 250R

EY 13

EY 14

BA 15 BA 16

ROYAL ENFIELD PRE-DELIVERY INSPECTION - CONTINENTAL GT - 535CC

Model :				Chassis No. :		
Dealer's Name :				Engine No. :		
Location:				Battery Number :		
Colour :				Key Number :		Date of PDI :
Battery Make :				Tyre Number :	Front :	Rear :
Aggregate		Area	Defect Code	Measure	Defect	Remarks
Ch. No. / Engine No.	1	Engine / Motorcycle Number Details	DF	Same		
Connect Battery / Check Voltage	2	Battery Charging	D / NC /L	12 .6V BATTERY(Static)		
Engine Oil	3	Replace oil & oil filter / Check Oil level (Loose three Drain Bolts)	EO - (Drained Oil Level)	2.5 Litres (Capacity is 2.75 Litres)-Loose three Drain Bolts to Drain Oil		
	4	Clean Oil Strainer	-	Clean		
Lock Operation	5	Ignition Cum steering/ Side cover Lock / Fuel Tank Lock	H / LF / NW	Same		
Petrol	6	Fill Petrol	-	2.5 Litres		
	7	Caliper Mtg BOLT	LF(Hand Loose)	2.7 to 3 .3 Kgm		
	8	Front Disc Brake	SG /RB			
	9	Front Wheel Rotation	T/ N	Check One Complete Tyre Rotation, Spokes Looseness & Runout		
Front Wheel	10	Front Mudguard Alignment	M / RB/SC			
Front wheel	11	Front Wheel Nut	LF(Hand Loose)	6.3 0 to 7.7 Kgm		
	12	Front Tyre Condition (Check Tyre Line Seating)	WF	Good		
	13	Front Tyre Pressure	Less	22PSI		
	14	Speedo sensor cable coupler connection & function	NW			
Clutch	15	Clutch Operation	H /J/SY	Smooth		
	16	Clutch Lever Free Play	EP / Less	2 - 3 mm		
	17	Accelerator Operation	SY/EP/LESS	Smooth		
	18	Lever Brackets Saddle Position	LF/R	Tight		
Handle Bar	19	Clip on Handle Bar Fasteners	LF(Hand Loose)	2.0 to 3.Kgm		
Controls & Electrical Switch	20	Steering Movement	T /N	Free		
Operations	21	Lock Nut T- Stem	LF/ PO/R	4.5 to 5.5 Kgm		
	22	Electrical Switch Operation	NW / LF	No Defects		
	23	Neutral Lamp	NW	No Defects		
	24	Head Lamp Switch Operation	NW / F	When you turn the ignition switch to ON condition Head Lamp should be always ON due to Automatic Headlamp ON feature		
	25	Trip 'A' & Trip 'B' Check up	NW	No Defects		
	26	Cluster Illumination check up	NW	No Defects		
Digital Instrument	27	Cluster - Tell Tale Functions	NW	No Defects		
Cluster check up	28	Low Fuel Indication	NW	No Defects		
	29	Battery indication	NW	No Defects		
	30	Fuel Leak	L	No Leak		
Fuel Tank	31	Fuel Tank Alignment vs Seat Alignment	М			
	32	Seat Lock Cable	H /NW			
Seat	33	Seat Cover Pasting	Po			
	34	Seat Play	EP			

Aggregate		Area	Defect Code	Measure	Defect	Remarks
	35	Rear Disc Brake Pedal Free Play	Less / EP	4 -7 mm		
	36	Tail / Brake Light	NW /F			
	37	Brake Fluid maximum level check up in the rear Master Cylinder	LESS /EO			
	38	Routings of brake hose, twist or pinching of hose.	WF			
	39	Chain Tension	T / EP	20 -30 mm		
Rear Wheel	40	Rear Wheel Rotation	T/ N	Check One Complete Tyre Rotation , Spokes Looseness & Runout		
	41	Rear Sprocket Mounting Screws	LF(Hand Loose)	2.5 to 3.3 kgm		
	42	Rear Mudguard Alignment	M, RB			
	43	Rear Tyre Pressure	Less	32PSI		
	44	Rear Tyre Condition (Check Tyre Line Seating)	WF	Good		
	45	Rear Shockabsorber Operation / Adjustment	H/SG	Smooth		
	46	Rear Shocker Mounting Top & Bottom	LF(Hand Loose)	2.5 to 3.3 kgm		
Swing Arm /	47	Swing arm mounting bolt	LF(Hand Loose)	6.5 to 7.5 kgm		
Foot Rest	48	Four Foot Rest Foldable Function	Н			
	49	Mudguards - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	50	Fuel Tank - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
Aesthetics	51	Side panel - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
Aesthetics	52	Powder Coated Parts (Scratch/ Rust / Chipped OFF)	SC / R / PO/DU	No Defects		
	53	Plated Parts (Scratch/ Rusty)	SC/R/PO	No Defects		
	54	Buffed components poor Buffing & Scrathes	SC / DU/DN/R	No Defects		
	55	Indicators Alignment	М	No Defect		
Others	56	Nuts, bolts, fasteners (Torque)	LF(Hand Loose)	Tight (Right, Left Cover / Engine Foundation / Accessories/ Wheel Nut)		
01	57	Owner's Manual & Tool Kit Content	-	-		
	58	Spare fuse in fuse carrier	NA	-		
	59	Starting (Kick Start / Self Start)	ST/N	Easy Start		
	60	Pulling	Р	Straight		
	61	Motorcycle Vibration	v	Smooth		
	62	Front Wheel Wobbling	w	Rim Run Out & Face Out Value - 0.8 mm		
	63	Rear Wheel Wobbling	w	Rim Run Out & Face Out Value - 0.8 mm		
Test Ride	64	Center Stand & Side Stand Operation	H/ N	Smooth		
	65	Fork Noise	N	No Defects		
	66	Engine Performance / Gear Shifting	N /V/ ST / H/SK/L / NW	Smooth		
	67	Any Rattling / Squeaking Noise	N/ V/ LF	Nil (Silencer /Accessories / Body Parts / Suspension)		
	68	Cam Noise / Top End Noise	N	Smooth		
Note **	Ar	ny Abnormal / Critical Issues / Noise /	Engine Open o	ases during PDI Infor	m to Plant	Format No :F/14A/CS/02

INSTRUCTIONS

- Check the motorcycle thoroughly for any transit damages or shortage of parts.
 Carry out all jobs listed under Pre-Delivery Inspection Schedule.
 Thoroughly road test the motorcycle for performance.

- Please ensure delivery of the motorcycle in brand new condition.
 Claim transit loss and damage through 'TRANSIT' insurance only.
 Claim Parts replaced for Manufacturing defects only under warranty.

Misalignment	Noise	Vibration	Leak	Starting Trouble/Missin	g Less	Wobb	ling Loo	se Fitment	Discharing	Tight	Fused	Scratc	n Pu	Illing	Dent	Wrong Fitment	Hard	Jerking
M	N	V	L	M	LESS	s w		LF	D	Т	F	SC		Р	DN	WF	Н	J
Excess Play	Differen	t Spongy	Stick	Not Available	Smoke	Adjustment	Not Working	Paint Det	fect Rust	Peel	Off D	ull C	ent	Exces		Rubbing	Not C	Charging
FP	DE	SG	SV	NA.	SK	AD	NIM	PD	R	PC.		11 1	INC	EC	\ T	PB		NC

ROYAL ENFIELD

MOTORCYCLE INSTALLATION CONFIRMATION BY CUSTOMER
We congratulate you on becoming a proud owner of Royal Enfield motorcycle. We request you to give this feedback after completion of the delivery process.

		YES	NO
1	Motorcycle Documents explained (Invoice, Insurance, RC / Road Tax Receipt)		
2	Owner's Manual received		
3	Recommended Lubricants explained		
4	Maintenance Schedule sheet in Owner's Manual shown and explained		
5	Next Free Service due explained		
6	All Free / Paid Services explained		
7	Warranty Guidelines explained		
8	"Running in Period" details shown in the manual explained		
9	Service Center Address given and Location explained		
10	Service Incharge Name & Mobile No given		
11	Motorcycle delivered in neat and clean condition		
12	Tools & First Aid Kit received and explained		

		YES	NO					
13	Control Switches & Disc Brake System usage explained							
14	Fuse Box location shown and explained							
15	Recommended Tyre Pressure explained							
16	Motorcycle starting & Gear shifting procedure explained							
17	Quantity of Fuel in Fuel Tank informed							
18	Motorcycle orientation & short distance drive provided							
19	Date and Time of Installation							
20	Name of Person who did Installation							
Sug	Suggestions If Any:							
	C	CUSTOMER						
	S	IGNATURE						
Mod	Model: Registration No.:							
Cha	Chassis No.:							
We thank you and request you to return this filled up form to the person who did the motorcycle installation for you								
,,,,	KEEP RIDING							



Part No. 1040818/A

ROYALENFIELD.COM